




Solution Sheet 4 - External condensate pump.

Connecting an external condensate pump to a Toshiba RAV or VRF unit is easy, if your additional condensate pump has a high water level switch this can be integrated with the internal float switch of the unit.

1) Connect the power to the external condensate pump via terminals at the indoor unit; 1 (Live), 2 (Neutral) and Earth for RAV units and L (R), N (S) and Earth for VRF units. It is recommended that an in-line fuse is connected in the live (L/1) wire.

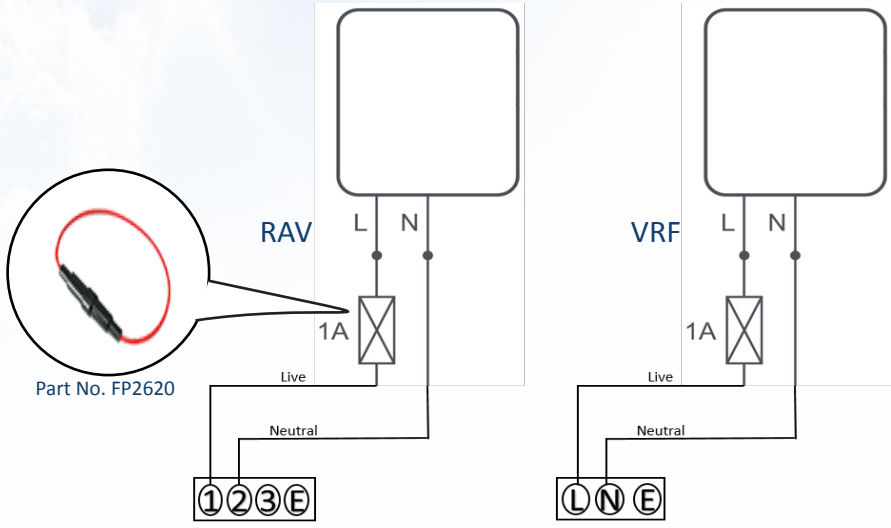

2) If your external condensate pump has a high water level switch, this can be wired into the indoor unit integrating into the installed (Where applicable) float switch

