

# Technical Bulletin TOSHIBA Leading Innovation >>>



**RBC-SMIM4 Indicator Module and Remote On Off** 



# **Description**

This accessory is designed to give the operational status of an air conditioning system and also to enable remote ON/OFF control, with a remote controller lock facility where required.

There are LED's on the interface giving a local visual indication of the RUN and FAULT status and in addition to this, relay outputs are provided to give a remote indication facility.

There are also two input contacts for ON/OFF and ON/OFF Lock. When the ON/OFF lock contact is made the ON/OFF button on the remote controller is disabled.

# **Application**

The accessory allows the operating status of the indoor unit to be determined and reported to another system. It also allows the On/Off function to be controlled via a contact closure from an external source. The accessory connects directly to an indoor unit.

## Connections

The Interface should be mounted on or adjacent to the indoor unit using the self adhesive tabs provided. It should then be connected to the indoor unit via the CN61 connection lead.

All electrical connections should be made within the enclosure, (see the diagram below). The relay output contacts are rated as follows: 240v @ 6A resistive load and 1.5A Inductive load. If higher capacities are required, it will be necessary to use additional relays or contactors. When the switch contacts are made the indoor unit will be enabled and the ON/OFF button on the remote will be disabled.



Raising the Standards in Air Conditioning Distribution

www.cdlweb.info








Design



# **Technical Bulletin**



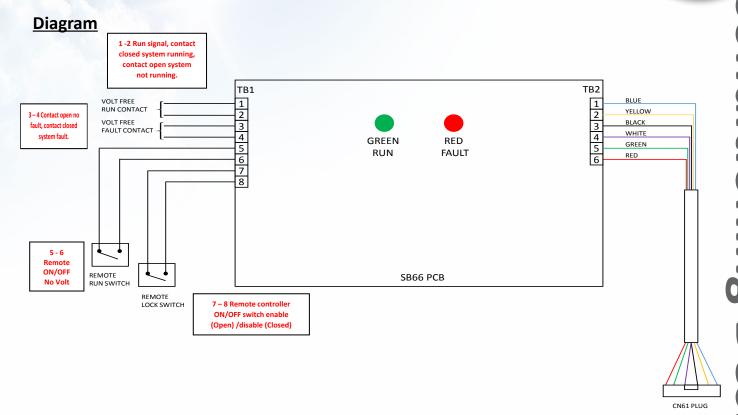

Jumper J01/JP001 must be removed on the Indoor PCB - Link Intact Pulse Signal, Link Cut Static Signal

### Limitations

It should be noted that when the external contact is operated, all connected systems will be enabled or disabled, depending on whether the contact is opened or closed. Individual units cannot be omitted from the ON/OFF control process, (When in Group Control).

The Locking function only locks the operation function, however if the remote is locked OFF it is not possible to adjust any of the functions

The cables connecting the interface to the external switching / monitoring point are to be a maximum total distance of 25 meters when using a screened cable, with a cross sectional area of 0.75mm.

Dimensions (L x W x H) 150 x 80 x 50

For further information prices availability or assistance, just contact your Cool Designs Representative or call one of our sales offices on 01915 496 964 or 01925 820 000

Cool Designs Ltd

Raising the Standards in Air Conditioning Distribution

www.cdlweb.info







& Distribution