

TOSHIBA

FILE NO. SVM-16044

SERVICE MANUAL

AIR-CONDITIONER MULTI TYPE

INDOOR UNIT

< Concealed Duct High Static Pressure Type >

MMD-AP0186HP1-E

MMD-AP0246HP1-E

MMD-AP0276HP1-E

MMD-AP0366HP1-E

MMD-AP0486HP1-E

MMD-AP0566HP1-E

MMD-AP0186HP1-TR


MMD-AP0246HP1-TR

MMD-AP0276HP1-TR

MMD-AP0366HP1-TR

MMD-AP0486HP1-TR

MMD-AP0566HP1-TR

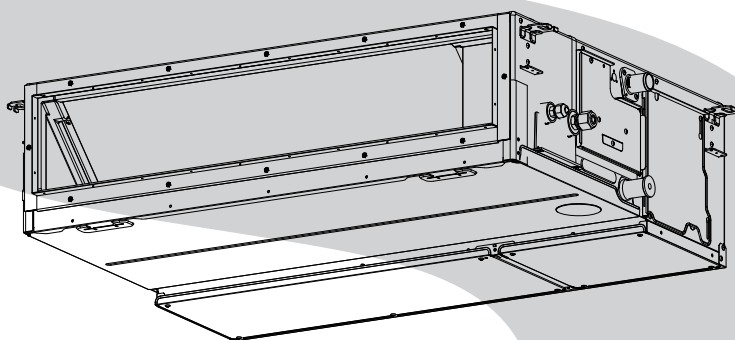

April 2016

CONTENTS

| | |
|---|----|
| PRECAUTIONS FOR SAFETY | 6 |
| 1. SPECIFICATIONS | 13 |
| 2. AIR DUCTING WORK | 15 |
| 3. CONSTRUCTION VIEWS (EXTERNAL VIEWS) | 17 |
| 4. WIRING DIAGRAMS | 20 |
| 5. PARTS RATING | 21 |
| 6. REFRIGERANT CYCLE DIAGRAM | 22 |
| 7. CONTROL OUTLINE | 23 |
| 8. APPLIED CONTROL AND FUNCTIONS (INCLUDING CIRCUIT CONFIGURATION) | 29 |
| 8-1. Indoor controller block diagram | 29 |
| 8-1-1. In Case of Connection of Wired (Simple) Remote Controller | 29 |
| 8-1-2. In Case of Connection of Wireless Remote Controller | 30 |
| 8-1-3. Connection of Both Wired (Simple) Remote Controller and Wireless Remote Controller | 31 |
| 8-2. Indoor Print Circuit Board MCC-1631 | 32 |
| 8-3. Optional connector specifications of indoor P.C. board | 33 |
| 8-4. Test operation of indoor unit | 34 |
| 8-5. Method to set indoor unit function DN code | 35 |
| 8-6. Applied control of indoor unit | 38 |
| 9. TROUBLESHOOTING | 54 |
| 9-1. Overview | 54 |
| 9-2. Troubleshooting method | 55 |
| 9-3. Troubleshooting based on information displayed on remote controller | 61 |
| 9-4. Check codes displayed on remote controller and SMMS outdoor unit (7-segment display on I/F board) and locations to be checked | 66 |
| 9-5. Sensor characteristics | 85 |
| 10. P.C. BOARD EXCHANGE PROCEDURES | 86 |
| 10-1. Replacement of indoor P.C. boards | 86 |
| 11. DETACHMENTS | 92 |
| 12. EXPLODED VIEWS AND PARTS LIST | 98 |

Original instruction

Please read carefully through these instructions that contain important information which complies with the “Machinery” Directive (Directive 2006/42/EC), and ensure that you understand them.

Generic Denomination: Air Conditioner

Definition of Qualified Installer or Qualified Service Person

The air conditioner must be installed, maintained, repaired and removed by a qualified installer or qualified service person. When any of these jobs is to be done, ask a qualified installer or qualified service person to do them for you.

A qualified installer or qualified service person is an agent who has the qualifications and knowledge described in the table below.

| Agent | Qualifications and knowledge which the agent must have |
|--------------------------|--|
| Qualified installer | <ul style="list-style-type: none"> • The qualified installer is a person who installs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation. He or she has been trained to install, maintain, relocate and remove the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations. • The qualified installer who is allowed to do the electrical work involved in installation, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. • The qualified installer who is allowed to do the refrigerant handling and piping work involved in installation, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. • The qualified installer who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. |
| Qualified service person | <ul style="list-style-type: none"> • The qualified service person is a person who installs, repairs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation. He or she has been trained to install, repair, maintain, relocate and remove the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations. • The qualified service person who is allowed to do the electrical work involved in installation, repair, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. • The qualified service person who is allowed to do the refrigerant handling and piping work involved in installation, repair, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. • The qualified service person who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. |

Definition of Protective Gear

When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.

In addition to such normal protective gear, wear the protective gear described below when undertaking the special work detailed in the table below.




Failure to wear the proper protective gear is dangerous because you will be more susceptible to injury, burns, electric shocks and other injuries.

| Work undertaken | Protective gear worn |
|---|---|
| All types of work | Protective gloves 'Safety' working clothing |
| Electrical-related work | Gloves to provide protection for electricians Insulating shoes Clothing to provide protection from electric shock |
| Work done at heights (50 cm or more) | Helmets for use in industry |
| Transportation of heavy objects | Shoes with additional protective toe cap |
| Repair of outdoor unit | Gloves to provide protection for electricians |

The important contents concerned to the safety are described on the product itself and on this Service Manual.




Please read this Service Manual after understanding the described items thoroughly in the following contents (Indications / Illustrated marks), and keep them.

[Explanation of indications]

| Indication | Explanation |
|--|---|
|  DANGER | Indicates contents assumed that an imminent danger causing a death or serious injury of the repair engineers and the third parties when an incorrect work has been executed. |
|  WARNING | Indicates possibilities assumed that a danger causing a death or serious injury of the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed. |
|  CAUTION | Indicates contents assumed that an injury or property damage (*) may be caused on the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed. |

* Property damage: Enlarged damage concerned to property, furniture, and domestic animal / pet

[Explanation of illustrated marks]







| Indication | Explanation |
|---|--|
|  | Indicates prohibited items (Forbidden items to do) The sentences near an illustrated mark describe the concrete prohibited contents. |
|  | Indicates mandatory items (Compulsory items to do) The sentences near an illustrated mark describe the concrete mandatory contents. |
|  | Indicates cautions (Including danger / warning) The sentences or illustration near or in an illustrated mark describe the concrete cautious contents. |

Warning Indications on the Air Conditioner Unit

[Confirmation of warning label on the main unit]

Confirm that labels are indicated on the specified positions





If removing the label during parts replace, stick it as the original.

| Warning indication | | Description |
|---|--|--|
|  | <p style="text-align: center;">WARNING</p> <p>ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.</p> | <p>WARNING</p> <p>ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.</p> |
|  | <p style="text-align: center;">WARNING</p> <p>Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.</p> | <p>WARNING</p> <p>Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.</p> |
|  | <p style="text-align: center;">CAUTION</p> <p>High temperature parts. You might get burned when removing this panel.</p> | <p>CAUTION</p> <p>High temperature parts. You might get burned when removing this panel.</p> |
|  | <p style="text-align: center;">CAUTION</p> <p>Do not touch the aluminium fins of the unit. Doing so may result in injury.</p> | <p>CAUTION</p> <p>Do not touch the aluminium fins of the unit. Doing so may result in injury.</p> |
|  | <p style="text-align: center;">CAUTION</p> <p>BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.</p> | <p>CAUTION</p> <p>BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.</p> |
|  | <p style="text-align: center;">CAUTION</p> <p>Do not climb onto the fan guard. Doing so may result in injury.</p> | <p>CAUTION</p> <p>Do not climb onto the fan guard. Doing so may result in injury.</p> |



PRECAUTIONS FOR SAFETY







The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual.








DANGER



| | |
|--|--|
|  Turn off braeaker | <p>Before carrying out the installation, maintenance, repair or removal work, be sure to set the circuit breaker for both the indoor and outdoor units to the OFF position. Otherwise, electric shocks may result.</p> |
| | <p>Before opening the electrical box cover of the indoor unit or service panel of the outdoor unit, set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in electric shocks through contact with the interior parts. Only a qualified installer (*1) or qualified service person (*1) is allowed to remove the intake grille of the indoor unit or service panel of the outdoor unit and do the work required.</p> |
| | <p>Before opening the suction board cover, set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in injury through contact with the rotation parts. Only a qualified installer (*1) or qualified service person (*1) is allowed to remove the suction board cover and do the work required.</p> |
| | <p>Before starting to repair the outdoor unit fan or fan guard, be absolutely sure to set the circuit breaker to the OFF position, and place a "Work in progress" sign on the circuit breaker.</p> |
| | <p>When cleaning the filter (sold separately) or other parts of the indoor unit, set the circuit breaker to OFF without fail, and place a "Work in progress" sign near the circuit breaker before proceeding with the work.</p> |
| | <p>When you have noticed that some kind of trouble (such as when an error display has appeared, there is a smell of burning, abnormal sounds are heard, the air conditioner fails to cool or heat or water is leaking) has occurred in the air conditioner, do not touch the air conditioner yourself but set the circuit breaker to the OFF position, and contact a qualified service person. Take steps to ensure that the power will not be turned on (by marking "out of service" near the circuit breaker, for instance) until qualified service person arrives. Continuing to use the air conditioner in the trouble status may cause mechanical problems to escalate or result in electric shocks or other failure.</p> |
|  Electric shock hazard | <p>When you access inside of the service panel to repair electric parts, wait for about five minutes after turning off the breaker. Do not start repairing immediately. Otherwise you may get electric shock by touching terminals of high-voltage capacitors. Natural discharge of the capacitor takes about five minutes.</p> |
| | <p>When checking the electric parts, removing the cover of the electric parts box of Indoor Unit and/or service panel of Outdoor Unit inevitably to determine the failure, use gloves to provide protection for electricians, insulating shoes, clothing to provide protection from electric shock and insulating tools. Be careful not to touch the live part. Electric shock may result. Only "Qualified service person" is allowed to do this work.</p> |
|  Prohibition | <p>Place a "Work in progress" sign near the circuit breaker while the installation, maintenance, repair or removal work is being carried out. There is a danger of electric shocks if the circuit breaker is set to ON by mistake.</p> |
| | <p>When checking the electric parts, removing the cover of the electric parts box of Indoor Unit and/or front panel of Outdoor Unit inevitably to determine the failure, put a sign "Do not enter" around the site before the work. Failure to do this may result in third person getting electric shock.</p> |
| | <p>Before operating the air conditioner after having completed the work, check that the electrical parts box cover of the indoor unit and service panel of the outdoor unit are closed, and set the circuit breaker to the ON position. You may receive an electric shock if the power is turned on without first conducting these checks.</p> |
|  Stay on protection | <p>If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, wear insulated heat-resistant gloves, insulated boots and insulated work overalls, and take care to avoid touching any live parts. You may receive an electric shock if you fail to heed this warning. Only qualified service person (*1) is allowed to do this kind of work.</p> |

 **WARNIG**

| | |
|---|--|
|  General | <p>Before starting to repair the air conditioner, read carefully through the Service Manual, and repair the air conditioner by following its instructions.</p> |
| | <p>Only qualified service person (*1) is allowed to repair the air conditioner. Repair of the air conditioner by unqualified person may give rise to a fire, electric shocks, injury, water leaks and / or other problems.</p> |
| | <p>Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.</p> |
| | <p>Only a qualified installer (*1) or qualified service person (*1) is allowed to carry out the electrical work of the air conditioner. Under no circumstances must this work be done by an unqualified individual since failure to carry out the work properly may result in electric shocks and / or electrical leaks.</p> |
| | <p>When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.</p> |
| | <p>To connect the electrical wires, repair the electrical parts or undertake other electrical jobs, wear gloves to provide protection for electricians, insulating shoes and clothing to provide protection from electric shocks. Failure to wear this protective gear may result in electric shocks.</p> |
| | <p>Electrical wiring work shall be conducted according to law and regulation in the community and installation manual. Failure to do so may result in electrocution or short circuit.</p> |
| | <p>Use wiring that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws. Use of wiring which does not meet the specifications may give rise to electric shocks, electrical leakage, smoking and/or a fire.</p> |
| | <p>Only a qualified installer (*1) or qualified service person (*1) is allowed to undertake work at heights using a stand of 50 cm or more or to remove the intake grille of the indoor unit to undertake work.</p> |
| | <p>When working at heights, use a ladder which complies with the ISO 14122 standard, and follow the procedure in the ladder's instructions. Also wear a helmet for use in industry as protective gear to undertake the work.</p> |
| | <p>Before working at heights, put a sign in place so that no-one will approach the work location, before proceeding with the work. Parts and other objects may fall from above, possibly injuring a person below. While carrying out the work, wear a helmet for protection from falling objects.</p> |
| | <p>When executing address setting, test run, or troubleshooting through the checking window on the electric parts box, put on insulated gloves to provide protection from electric shock. Otherwise you may receive an electric shock.</p> |
| | <p>Do not touch the aluminum fin of the outdoor unit. You may injure yourself if you do so. If the fin must be touched for some reason, first put on protective gloves and safety work clothing, and then proceed.</p> |
| | <p>Do not climb onto or place objects on top of the outdoor unit. You may fall or the objects may fall off of the outdoor unit and result in injury.</p> |
| | <p>Use forklift to carry in the air conditioner units and use winch or hoist at installation of them.</p> |
| | <p>When transporting the air conditioner, wear shoes with protective toe caps, protective gloves and other protective clothing.</p> |
| | <p>When transporting the air conditioner, do not take hold of the bands around the packing carton. You may injure yourself if the bands should break.</p> |
| | <p>Be sure that a heavy unit (10 kg or heavier) such as a compressor is carried by four persons.</p> |
| <p>This air conditioner has passed the pressure test as specified in IEC 60335-2-40 Annex EE.</p> | |
|  Check earth wires. | <p>Before troubleshooting or repair work, check the earth wire is connected to the earth terminals of the main unit, otherwise an electric shock is caused when a leak occurs. If the earth wire is not correctly connected, contact an electric engineer for rework.</p> |
| | <p>After completing the repair or relocation work, check that the ground wires are connected properly.</p> |
| | <p>Be sure to connect earth wire. (Grounding work) Incomplete grounding causes an electric shock. Do not connect ground wires to gas pipes, water pipes, and lightning rods or ground wires for telephone wires.</p> |

| | |
|---|---|
|  Prohibition of modification. | Do not modify the products. Do not also disassemble or modify the parts. It may cause a fire, electric shock or injury. |
|  Use specified parts. | When any of the electrical parts are to be replaced, ensure that the replacement parts satisfy the specifications given in the Service Manual (or use the parts contained on the parts list in the Service Manual). Use of any parts which do not satisfy the required specifications may give rise to electric shocks, smoking and / or a fire. |
|  Do not bring a child close to the equipment. | If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, put a sign in place so that no one will approach the work location before proceeding with the work. Third-party individuals may enter the work site and receive electric shocks if this warning is not heeded. |
|  Insulating measures | Connect the cut-off lead wires with crimp contact, etc., put the closed end side upward and then apply a watercut method, otherwise a leak or production of fire is caused at the users' side. |
|  No fire | When performing repairs using a gas burner, replace the refrigerant with nitrogen gas because the oil that coats the pipes may otherwise burn. When repairing the refrigerating cycle, take the following measures. 1) Be attentive to fire around the cycle. When using a gas stove, etc., be sure to put out fire before work; otherwise the oil mixed with refrigerant gas may catch fire. 2) Do not use a welder in the closed room. When using it without ventilation, carbon monoxide poisoning may be caused. 3) Do not bring inflammables close to the refrigerant cycle, otherwise fire of the welder may catch the inflammables. |
|  Refrigerant | The refrigerant used by this air conditioner is the R410A. Check the used refrigerant name and use tools and materials of the parts which match with it. For the products which use R410A refrigerant, the refrigerant name is indicated at a position on the outdoor unit where is easy to see. To prevent miss-charging, the route of the service port is changed from one of the former R22. Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body. For an air conditioner which uses R410A, never use other refrigerant than R410A. For an air conditioner which uses other refrigerant (R22, etc.), never use R410A. If different types of refrigerant are mixed, abnormal high pressure generates in the refrigerating cycle and an injury due to breakage may be caused. When the air conditioner has been installed or relocated, follow the instructions in the Installation Manual and purge the air completely so that no gases other than the refrigerant will be mixed in the refrigerating cycle. Failure to purge the air completely may cause the air conditioner to malfunction. Do not charge refrigerant additionally. If charging refrigerant additionally when refrigerant gas leaks, the refrigerant composition in the refrigerating cycle changes resulted in change of air conditioner characteristics or refrigerant over the specified standard amount is charged and an abnormal high pressure is applied to the inside of the refrigerating cycle resulted in cause of breakage or injury. Therefore if the refrigerant gas leaks, recover the refrigerant in the air conditioner, execute vacuuming, and then newly recharge the specified amount of liquid refrigerant. In this time, never charge the refrigerant over the specified amount. When recharging the refrigerant in the refrigerating cycle, do not mix the refrigerant or air other than R410A into the specified refrigerant. If air or others is mixed with the refrigerant, abnormal high pressure generates in the refrigerating cycle resulted in cause of injury due to breakage. After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous. Never recover the refrigerant into the outdoor unit. When the equipment is moved or repaired, be sure to recover the refrigerant with recovering device. The refrigerant cannot be recovered in the outdoor unit; otherwise a serious accident such as breakage or injury is caused. |

| | |
|---|---|
|  Assembly / Wiring | After repair work, surely assemble the disassembled parts, and connect and lead the removed wires as before. Perform the work so that the cabinet or panel does not catch the inner wires. If incorrect assembly or incorrect wire connection was done, a disaster such as a leak or fire is caused at user's side. |
|  Insulator check | After the work has finished, be sure to use an insulation tester set (500 V Megger) to check the resistance is 1 MΩ or more between the charge section and the non-charge metal section (Earth position). If the resistance value is low, a disaster such as a leak or electric shock is caused at user's side. |
|  Ventilation | When the refrigerant gas leaks during work, execute ventilation. If the refrigerant gas touches to a fire, poisonous gas generates. A case of leakage of the refrigerant and the closed room full with gas is dangerous because a shortage of oxygen occurs. Be sure to execute ventilation. If refrigerant gas has leaked during the installation work, ventilate the room immediately. If the leaked refrigerant gas comes in contact with fire, noxious gas may generate. After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous. |
|  Compulsion | When the refrigerant gas leaks, find up the leaked position and repair it surely. If the leaked position cannot be found up and the repair work is interrupted, pump-down and tighten the service valve, otherwise the refrigerant gas may leak into the room. The poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous. When installing equipment which includes a large amount of charged refrigerant such as a multi air conditioner in a sub-room, it is necessary that the density does not the limit even if the refrigerant leaks. If the refrigerant leaks and exceeds the limit density, an accident of shortage of oxygen is caused. Tighten the flare nut with a torque wrench in the specified manner. Excessive tighten of the flare nut may cause a crack in the flare nut after a long period, which may result in refrigerant leakage. Nitrogen gas must be used for the airtight test. The charge hose must be connected in such a way that it is not slack. For the installation / moving / reinstallation work, follow to the Installation Manual. If an incorrect installation is done, a trouble of the refrigerating cycle, water leak, electric shock or fire is caused. |
|  Check after repair | Once the repair work has been completed, check for refrigerant leaks, and check the insulation resistance and water drainage. Then perform a trial run to check that the air conditioner is running properly. After repair work has finished, check there is no trouble. If check is not executed, a fire, electric shock or injury may be caused. For a check, turn off the power breaker. After repair work (installation of front panel and cabinet) has finished, execute a test run to check there is no generation of smoke or abnormal sound. If check is not executed, a fire or an electric shock is caused. Before test run, install the front panel and cabinet. Be sure to fix the screws back which have been removed for installation or other purposes. |
|  Do not operate the unit with the valve closed. | Check the following matters before a test run after repairing piping. <ul style="list-style-type: none"> • Connect the pipes surely and there is no leak of refrigerant. • The valve is opened. Running the compressor under condition that the valve closes causes an abnormal high pressure resulted in damage of the parts of the compressor and etc. and moreover if there is leak of refrigerant at connecting section of pipes, the air is sucked and causes further abnormal high pressure resulted in burst or injury. |
|  Check after reinstallation | Only a qualified installer (*1) or qualified service person (*1) is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and / or vibration may result. Check the following items after reinstallation. <ol style="list-style-type: none"> 1) The earth wire is correctly connected. 2) The power cord is not caught in the product. 3) There is no inclination or unsteadiness and the installation is stable. If check is not executed, a fire, an electric shock or an injury is caused. When carrying out the pump-down work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in reputeing, injury, etc. |

| | |
|---|---|
|  Cooling check | <p>When the service panel of the outdoor unit is to be opened in order for the compressor or the area around this part to be repaired immediately after the air conditioner has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel. If you fail to heed this warning, you will run the risk of burning yourself because the compressor pipes and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.</p> |
| | <p>Take care not to get burned by compressor pipes or other parts when checking the cooling cycle while running the unit as they get heated while running. Be sure to put on gloves providing protection for heat.</p> |
|  Installation | <p>When the service panel of the outdoor unit is to be opened in order for the fan motor, reactor, inverter or the areas around these parts to be repaired immediately after the air conditioner has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel. If you fail to heed this warning, you will run the risk of burning yourself because the fan motor, reactor, inverter heat sink and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.</p> |
| | <p>Only a qualified installer or service person is allowed to do installation work. Inappropriate installation may result in water leakage, electric shock or fire.</p> |
| | <p>Before starting to install the air conditioner, read carefully through the Installation Manual, and follow its instructions to install the air conditioner.</p> |
| | <p>Be sure to use the company-specified products for the separately purchased parts. Use of non-specified products may result in fire, electric shock, water leakage or other failure. Have the installation performed by a qualified installer.</p> |
| | <p>Do not supply power from the power terminal block equipped on the outdoor unit to another outdoor unit. Capacity overflow may occur on the terminal block and may result in fire.</p> |
| | <p>Do not install the air conditioner in a location that may be subject to a risk of exposure to a combustible gas. If a combustible gas leaks and becomes concentrated around the unit, a fire may occur.</p> |
| | <p>Install the indoor unit at least 2.5 m above the floor level since otherwise the users may injure themselves or receive electric shocks if they poke their fingers or other objects into the indoor unit while the air conditioner is running.</p> |
| | <p>Install a circuit breaker that meets the specifications in the installation manual and the stipulations in the local regulations and laws.</p> |
| | <p>Install the circuit breaker where it can be easily accessed by the qualified service person (*1).</p> |
| | <p>If you install the unit in a small room, take appropriate measures to prevent the refrigerant from exceeding the limit concentration even if it leaks. Consult the dealer from whom you purchased the air conditioner when you implement the measures. Accumulation of highly concentrated refrigerant may cause an oxygen deficiency accident.</p> |
| <p>Do not place any combustion appliance in a place where it is directly exposed to the wind of air conditioner, otherwise it may cause imperfect combustion.</p> | |

Explanations given to user

If you have discovered that the fan grille is damaged, do not approach the outdoor unit but set the circuit breaker to the OFF position, and contact a qualified service person to have the repairs done. Do not set the circuit breaker to the ON position until the repairs are completed.

Relocation

- Only a qualified installer (*1) or qualified service person (*1) is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and / or vibration may result.
- When carrying out the pump-down work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in reputing, injury, etc.

(*1) Refer to the “Definition of Qualified Installer or Qualified Service Person”

Declaration of Conformity

Manufacturer: TOSHIBA CARRIER (THAILAND) CO., LTD.
144 / 9 Moo 5, Bangkadi Industrial Park, Tivanon Road, Tambol Bangkadi,
Amphur Muang, Pathumthani 12000, Thailand

Authorized Representative / Nick Ball

TCF holder: Toshiba EMEA Engineering Director
Toshiba Carrier UK Ltd.
Porsham Close, Belliver Industrial Estate,
PLYMOUTH, Devon, PL6 7DB.
United Kingdom

Hereby declares that the machinery described below:

Generic Denomination: Air Conditioner

Model / type: Indoor unit
<Concealed Duct High Static Pressure Type>
MMD-AP0186HP1-E, MMD-AP0186HP1-TR,
MMD-AP0246HP1-E, MMD-AP0246HP1-TR,
MMD-AP0276HP1-E, MMD-AP0276HP1-TR,
MMD-AP0366HP1-E, MMD-AP0366HP1-TR,
MMD-AP0486HP1-E, MMD-AP0486HP1-TR,
MMD-AP0566HP1-E MMD-AP0566HP1-TR

Commercial name: Super Modular Multi System Air Conditioner
Super Heat Recovery Multi System Air Conditioner
MiNi-Super Modular Multi System Air Conditioner (MiNi-SMMS series)

Complies with the provisions of the "Machinery" Directive (Directive 2006/42/EC) and the regulations transposing into national law

"Declaration of incorporation of partly completed machinery"

Must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of this Directive, where appropriate.

NOTE

This declaration becomes invalid if technical or operational modifications are introduced without the manufacturer's consent.

Specifications

| Model | Sound pressure level (dBA) | | Weight (kg) Main unit |
|------------------|----------------------------|---------|--------------------------|
| | Cooling | Heating | |
| MMD-AP0186HP1-E | * | * | 34 |
| MMD-AP0246HP1-E | * | * | 34 |
| MMD-AP0276HP1-E | * | * | 34 |
| MMD-AP0366HP1-E | * | * | 43 |
| MMD-AP0486HP1-E | * | * | 43 |
| MMD-AP0566HP1-E | * | * | 43 |
| MMD-AP0186HP1-TR | * | * | 34 |
| MMD-AP0246HP1-TR | * | * | 34 |
| MMD-AP0276HP1-TR | * | * | 34 |
| MMD-AP0366HP1-TR | * | * | 43 |
| MMD-AP0486HP1-TR | * | * | 43 |
| MMD-AP0566HP1-TR | * | * | 43 |

※: Under 70 dBA

1. SPECIFICATIONS

Concealed Duct High Static Pressure Type

(50Hz)

| Model name | MMD- | AP0186 HP1-E(TR) | AP0246 HP1-E(TR) | AP0276 HP1-E(TR) | AP0366 HP1-E(TR) | AP0486 HP1-E(TR) | AP0566 HP1-E(TR) |
|--|---|------------------------------------|---------------------|----------------------|---------------------------------|----------------------|---------------------|
| Cooling/Heating capacity (Note 1) | (kW) | 5.6/6.3 | 7.1/8.0 | 8.0/9.0 | 11.2/12.5 | 14.0/16.0 | 16.0/18.0 |
| Electrical characteristics | Power supply | 1phase 50Hz 230V(220V-240V) | | | | | |
| | Running current (A) | 0.52 | 0.70 | 1.17 | 1.34 | 1.68 | |
| | Power consumption (kW) | 0.085 | 0.115 | 0.198 | 0.230 | 0.290 | |
| | Starting current (A) | 0.78 | 1.05 | 1.75 | 2.01 | 2.51 | |
| Appearance | | Zinc hot dipping steel plate | | | | | |
| Dimension | Height (mm) | 298 | | | | | |
| | Width (mm) | 1000 | | | 1400 | | |
| | Depth (mm) | 750 | | | | | |
| Total weight | (kg) | 34 | | | 43 | | |
| Heat exchanger | | Finned tube | | | | | |
| Soundproof / Heat-insulating material | | Polyethylene foam | | | | | |
| Fan unit | Fan | Centrifugal fan | | | | | |
| | Standard air flow (m ³ /h) (Med./Low) | 800 (660/550) | 1,200 (970/800) | 1,920 (1560/1340) | 2,100 (1740/1420) | 2,400 (2040/1660) | |
| | Motor output (W) | 250 | | | 350 | | |
| | External static pressure (Pa) (factory setting) | 100 | | | | | |
| | External static pressure (Pa) | 50-75-100-125-150-175-200 (7steps) | | | | | |
| Controller | | Remote controller | | | | | |
| Air filter | | Sold separately (TCB-LK801D-E) | | | Sold separately (TCB-LK1401D-E) | | |
| Connecting pipe | Gas side (mm) | 12.7 | 15.9 | | | | |
| | Liquid side (mm) | 6.4 | 9.5 | | | | |
| | Drain port (mm) | 25(Polyvinyl chloride tube) | | | | | |
| Sound pressure level (Note 2) (High/Med./Low) | (dB(A)) | 37 (32/30) | 38 (34/31) | 41 (37/34) | 42 (40/35) | 45 (42/37) | |

Note 1 : The cooling capacities and electrical characteristics are measured under the conditions specified by JIS B 8615 based on the reference piping.

The reference piping consists of 5m of main piping and 2.5m of branch piping connected with 0 meter height.

Note 2 : The sound level are measured in an anechoic chamber in accordance with JIS B 8616.

Normally, the values measured in the actual operating environment become larger than the indicated valves due to the effects of external sound.

Note: Rated conditions Cooling: Indoor air temperature 27°C DB/19°C WB, Outdoor air temperature 35°C DB

Heating: Indoor air temperature 20°C DB, Outdoor air temperature 7°C DB/6°C WB

(60Hz)

| Model name | MMD- | AP0186 HP1-E | AP0246 HP1-E | AP0276 HP1-E | AP0366 HP1-E | AP0486 HP1-E | AP0566 HP1-E |
|--|--|------------------------------------|--------------------|-----------------|---------------------------------|----------------------|----------------------|
| Cooling/Heating capacity (Note 1) | (kW) | 5.6/6.3 | 7.1/8.0 | 8.0/9.0 | 11.2/12.5 | 14.0/16.0 | 16.0/18.0 |
| Electrical characteristics | Power supply | 1phase 60Hz 220V | | | | | |
| | Running current (A) | 0.54 | 0.73 | | 1.22 | 1.40 | 1.75 |
| | Power consumption (kW) | 0.085 | 0.115 | | 0.198 | 0.230 | 0.290 |
| | Starting current (A) | 0.81 | 1.10 | | 1.83 | 2.10 | 2.63 |
| Appearance | | Zinc hot dipping steel plate | | | | | |
| Dimension | Height (mm) | 298 | | | | | |
| | Width (mm) | 1000 | | | 1400 | | |
| | Depth (mm) | 750 | | | | | |
| Total weight (kg) | | 34 | | | 43 | | |
| Heat exchanger | | Finned tube | | | | | |
| Soundproof / Heat-insulating material | | Polyethylene foam | | | | | |
| Fan unit | Fan | Centrifugal fan | | | | | |
| | Standard air flow (m3/h) (Med./Low) | 800 (660/550) | 1,200 (970/800) | | 1,920 (1560/1340) | 2,100 (1740/1420) | 2,400 (2040/1660) |
| | Motor output (W) | 250 | | | 350 | | |
| | External static pressure (Pa) (factory setting) | 100 | | | | | |
| | External static pressure (Pa) | 50-75-100-125-150-175-200 (7steps) | | | | | |
| Controller | | Remote controller | | | | | |
| Air filter | | Sold separately (TCB-LK801D-E) | | | Sold separately (TCB-LK1401D-E) | | |
| Connecting pipe | Gas side (mm) | 12.7 | 15.9 | | | | |
| | Liquid side (mm) | 6.4 | 9.5 | | | | |
| | Drain port (mm) | 25(Polyvinyl chloride tube) | | | | | |
| Sound pressure level (Note 2) (High/Med./Low) | (dB(A)) | 37 (32/30) | 38 (34/31) | | 41 (37/34) | 42 (40/35) | 45 (42/37) |

Note 1 : The cooling capacities and electrical characteristics are measured under the conditions specified by JIS B 8615 based on the reference piping.

The reference piping consists of 5m of main piping and 2.5m of branch piping connected with 0 meter height.

Note 2 : The sound level are measured in an anechoic chamber in accordance with JIS B 8616.


Normally, the values measured in the actual operating environment become larger than the indicated values due to the effects of external sound.

Note: Rated conditions Cooling: Indoor air temperature 27°C DB/19°C WB, Outdoor air temperature 35°C DB


Heating: Indoor air temperature 20°C DB, Outdoor air temperature 7°C DB/6°C WB

2. AIR DUCTING WORK


AP0186 type

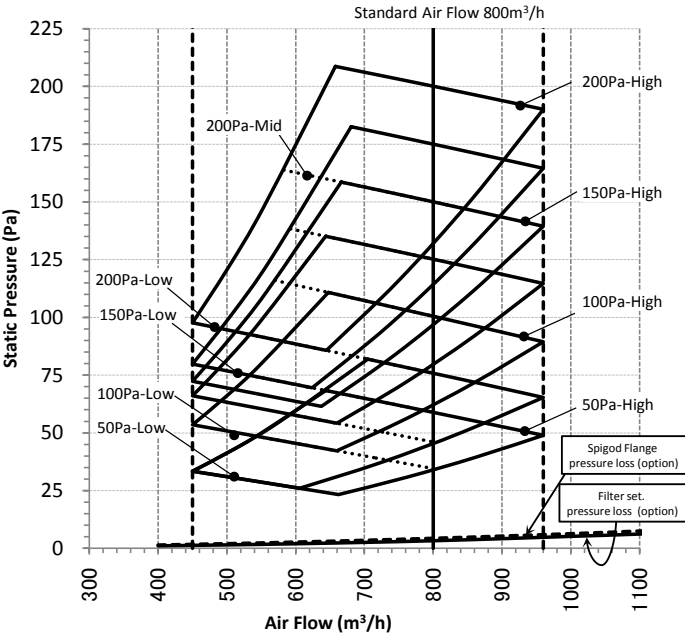


AP0246, 0276 type

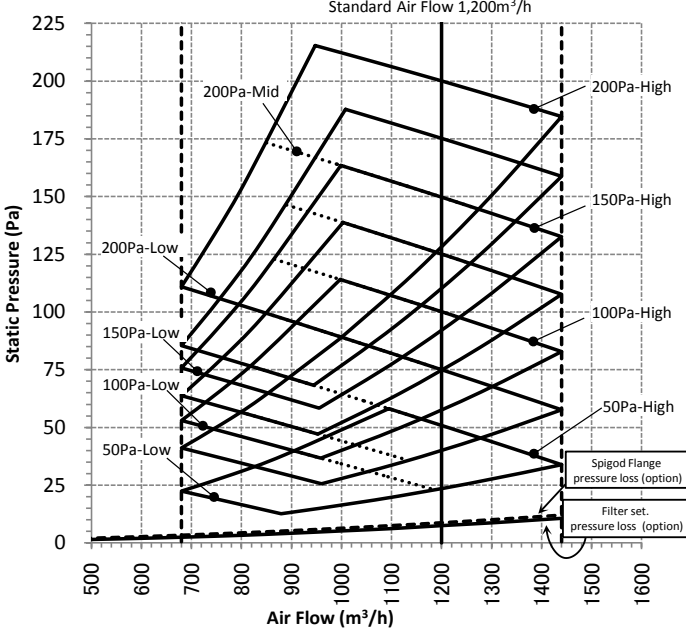


AP0366 type

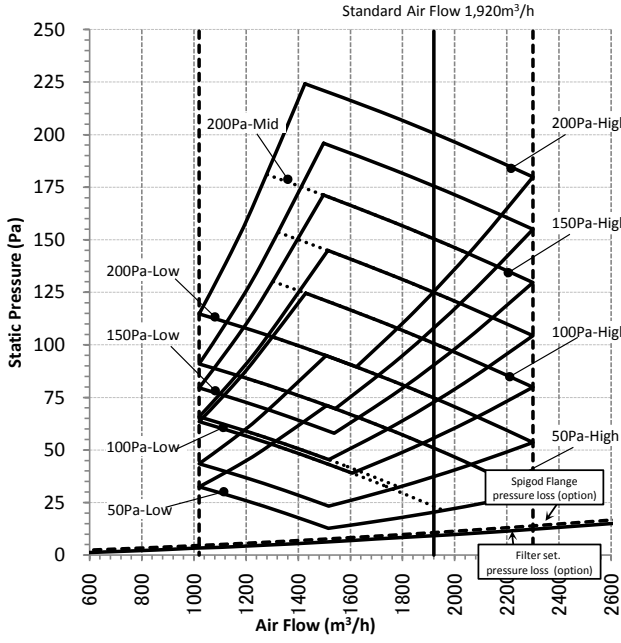


AP0486 type

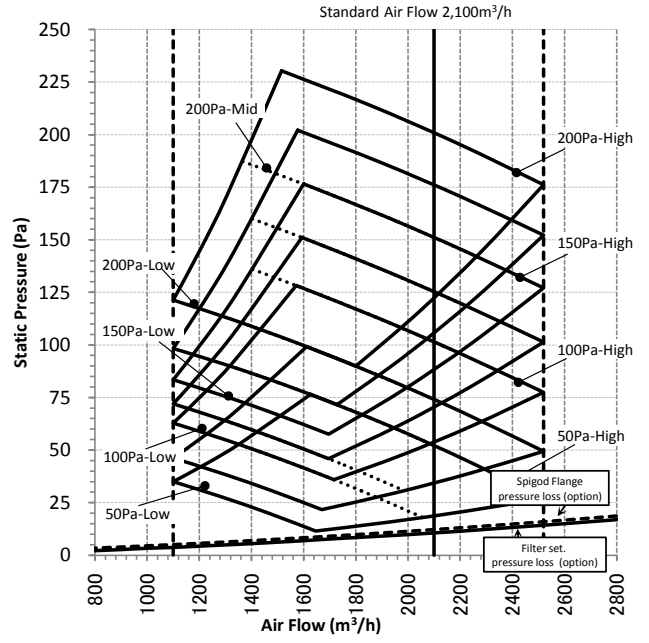

AP0566 type

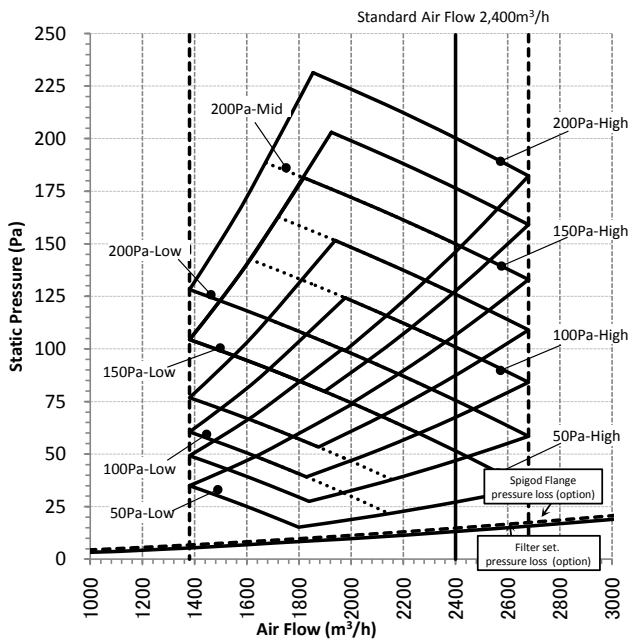


3. CONSTRUCTION VIEWS (EXTERNAL VIEWS)

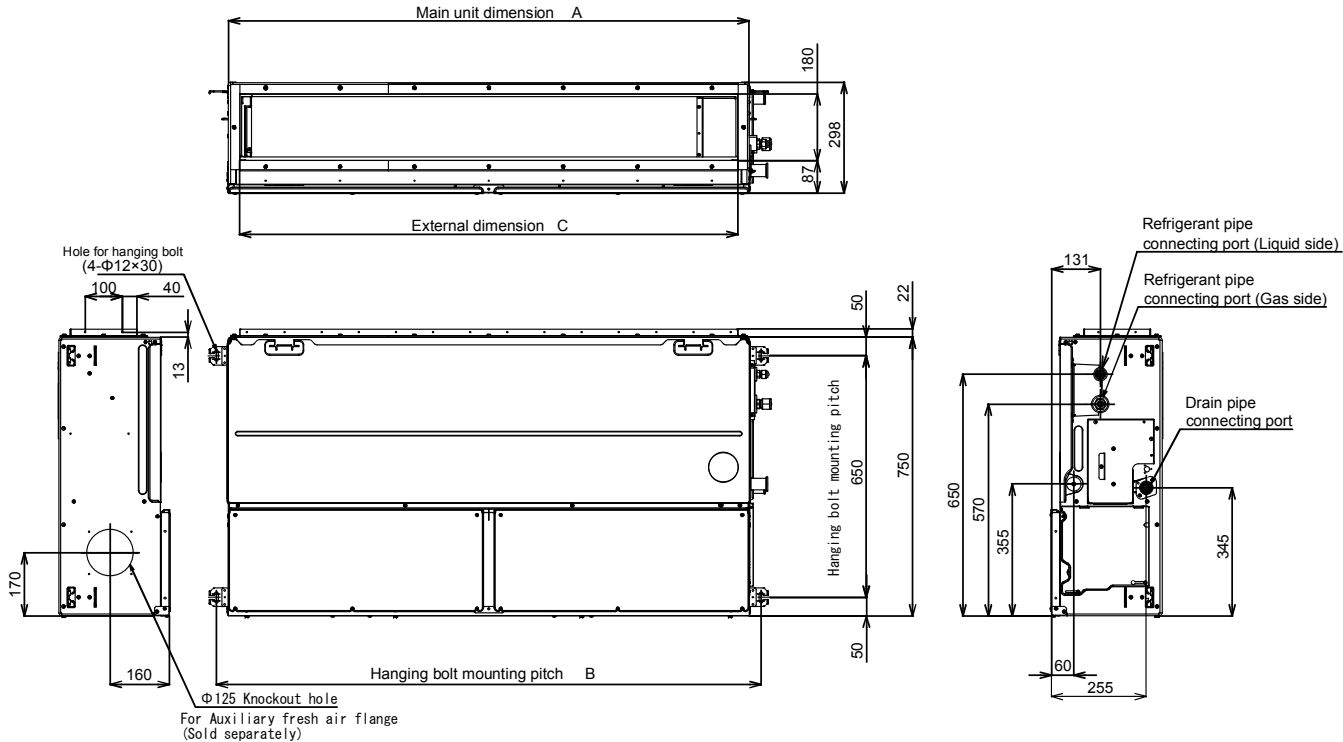

Dimension


| | A | B | C | D |
|-----------------------|----------|----------|----------|----------|
| AP018~027 type | 1000 | 1065 | 940 | 500 |
| AP036~056 type | 1400 | 1465 | 1340 | 700 |

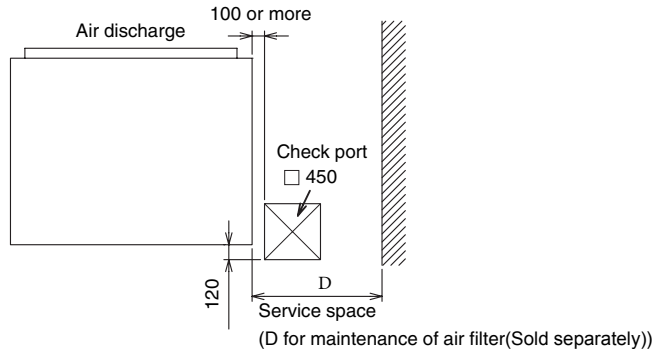


Duct arrangement

AP0186, AP0246, AP0276

<Air outlet>

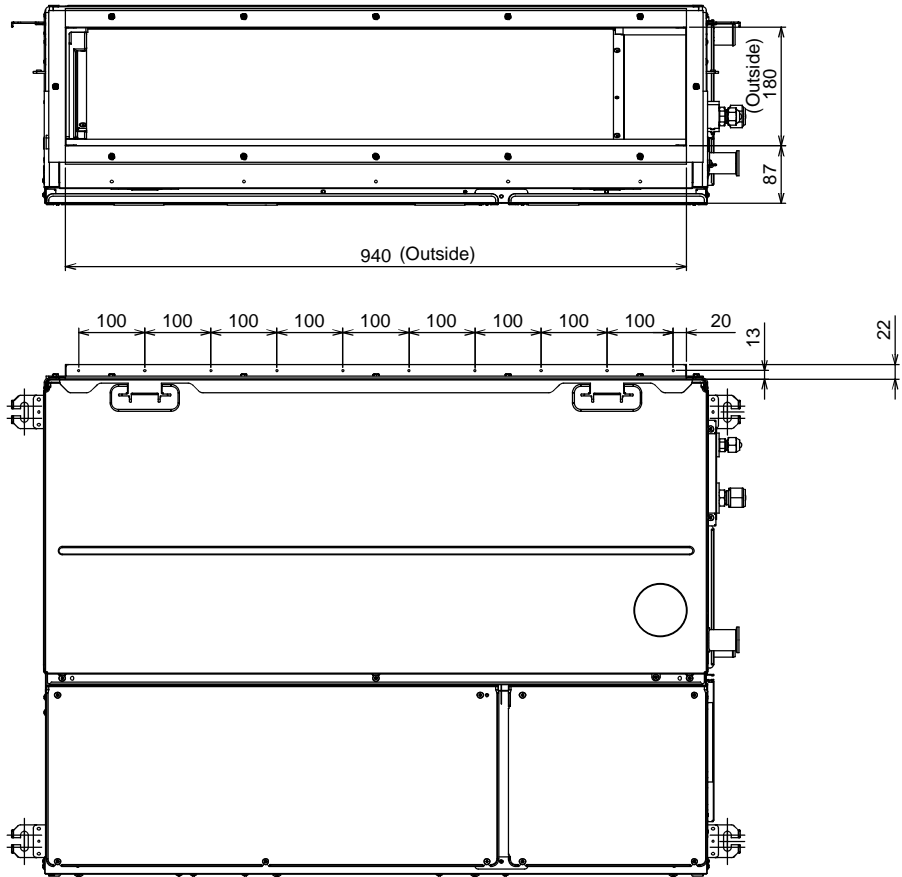


<Air inlet>

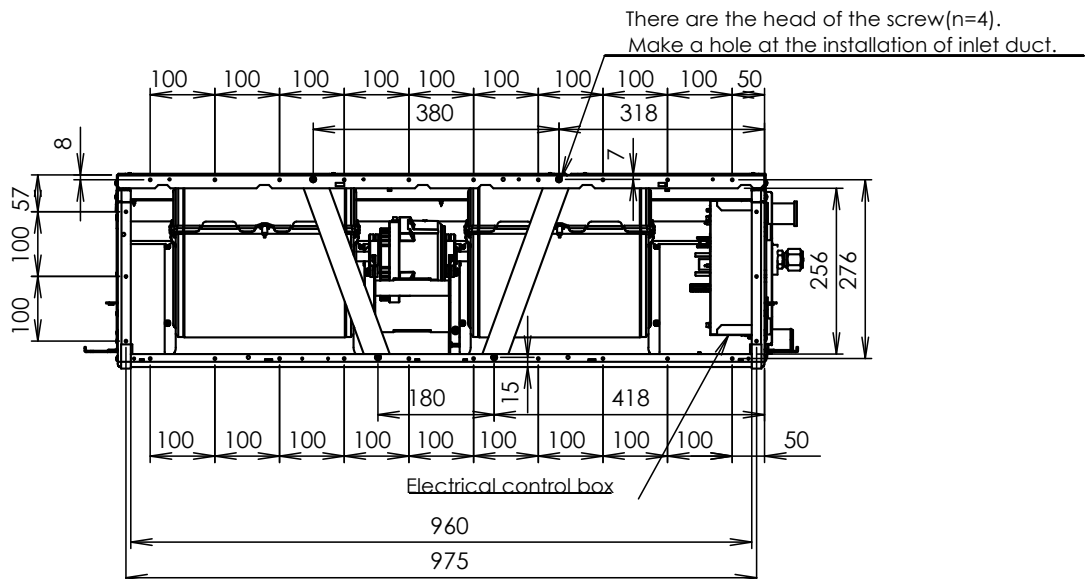


AP0366, AP0486, AP0566

<Air outlet>


(Unit : mm)

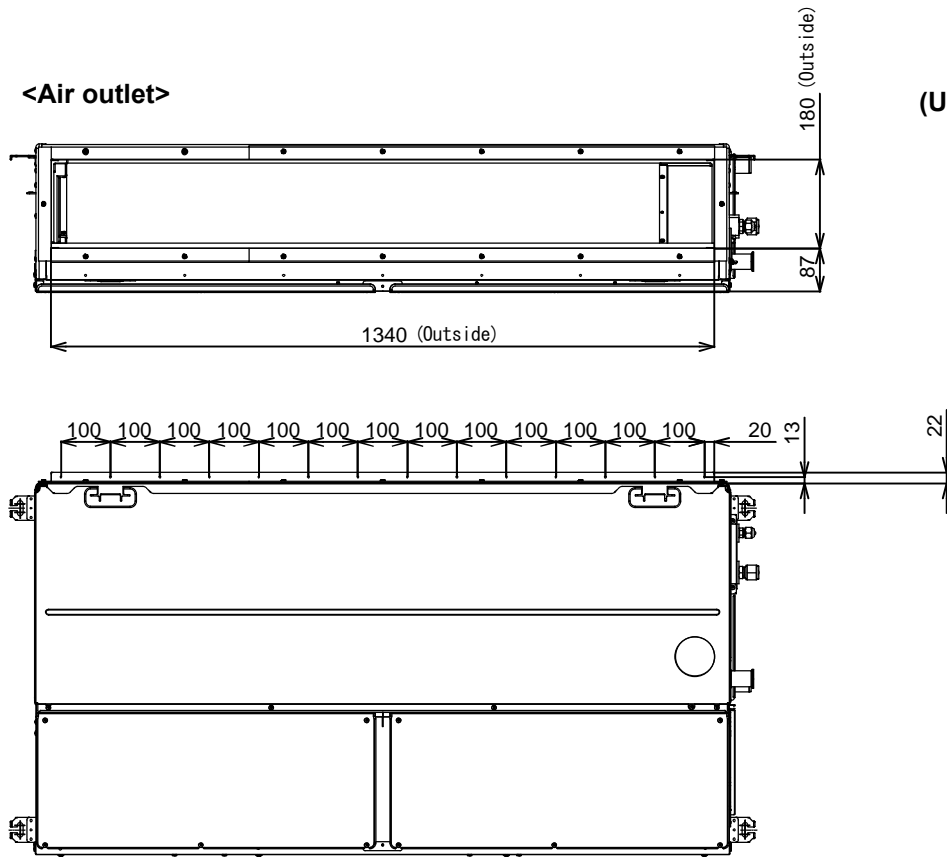

<Air inlet>

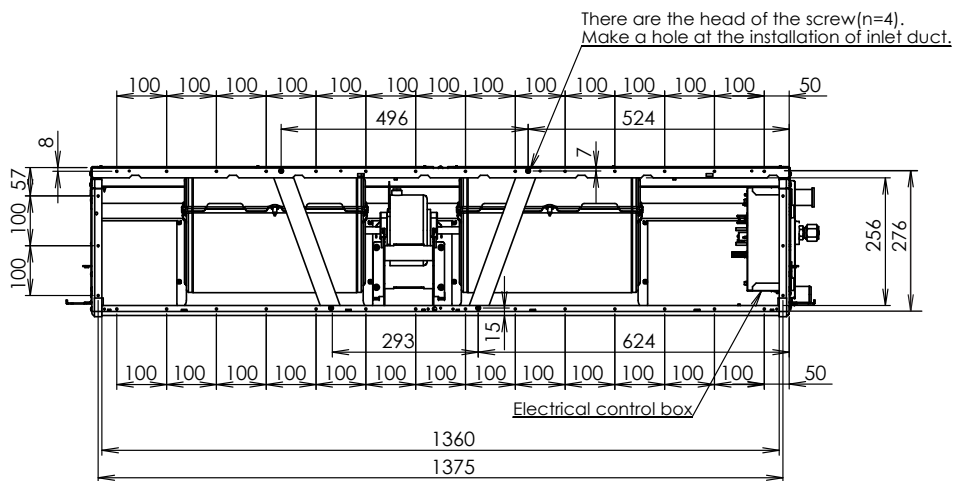

4. WIRING DIAGRAMS

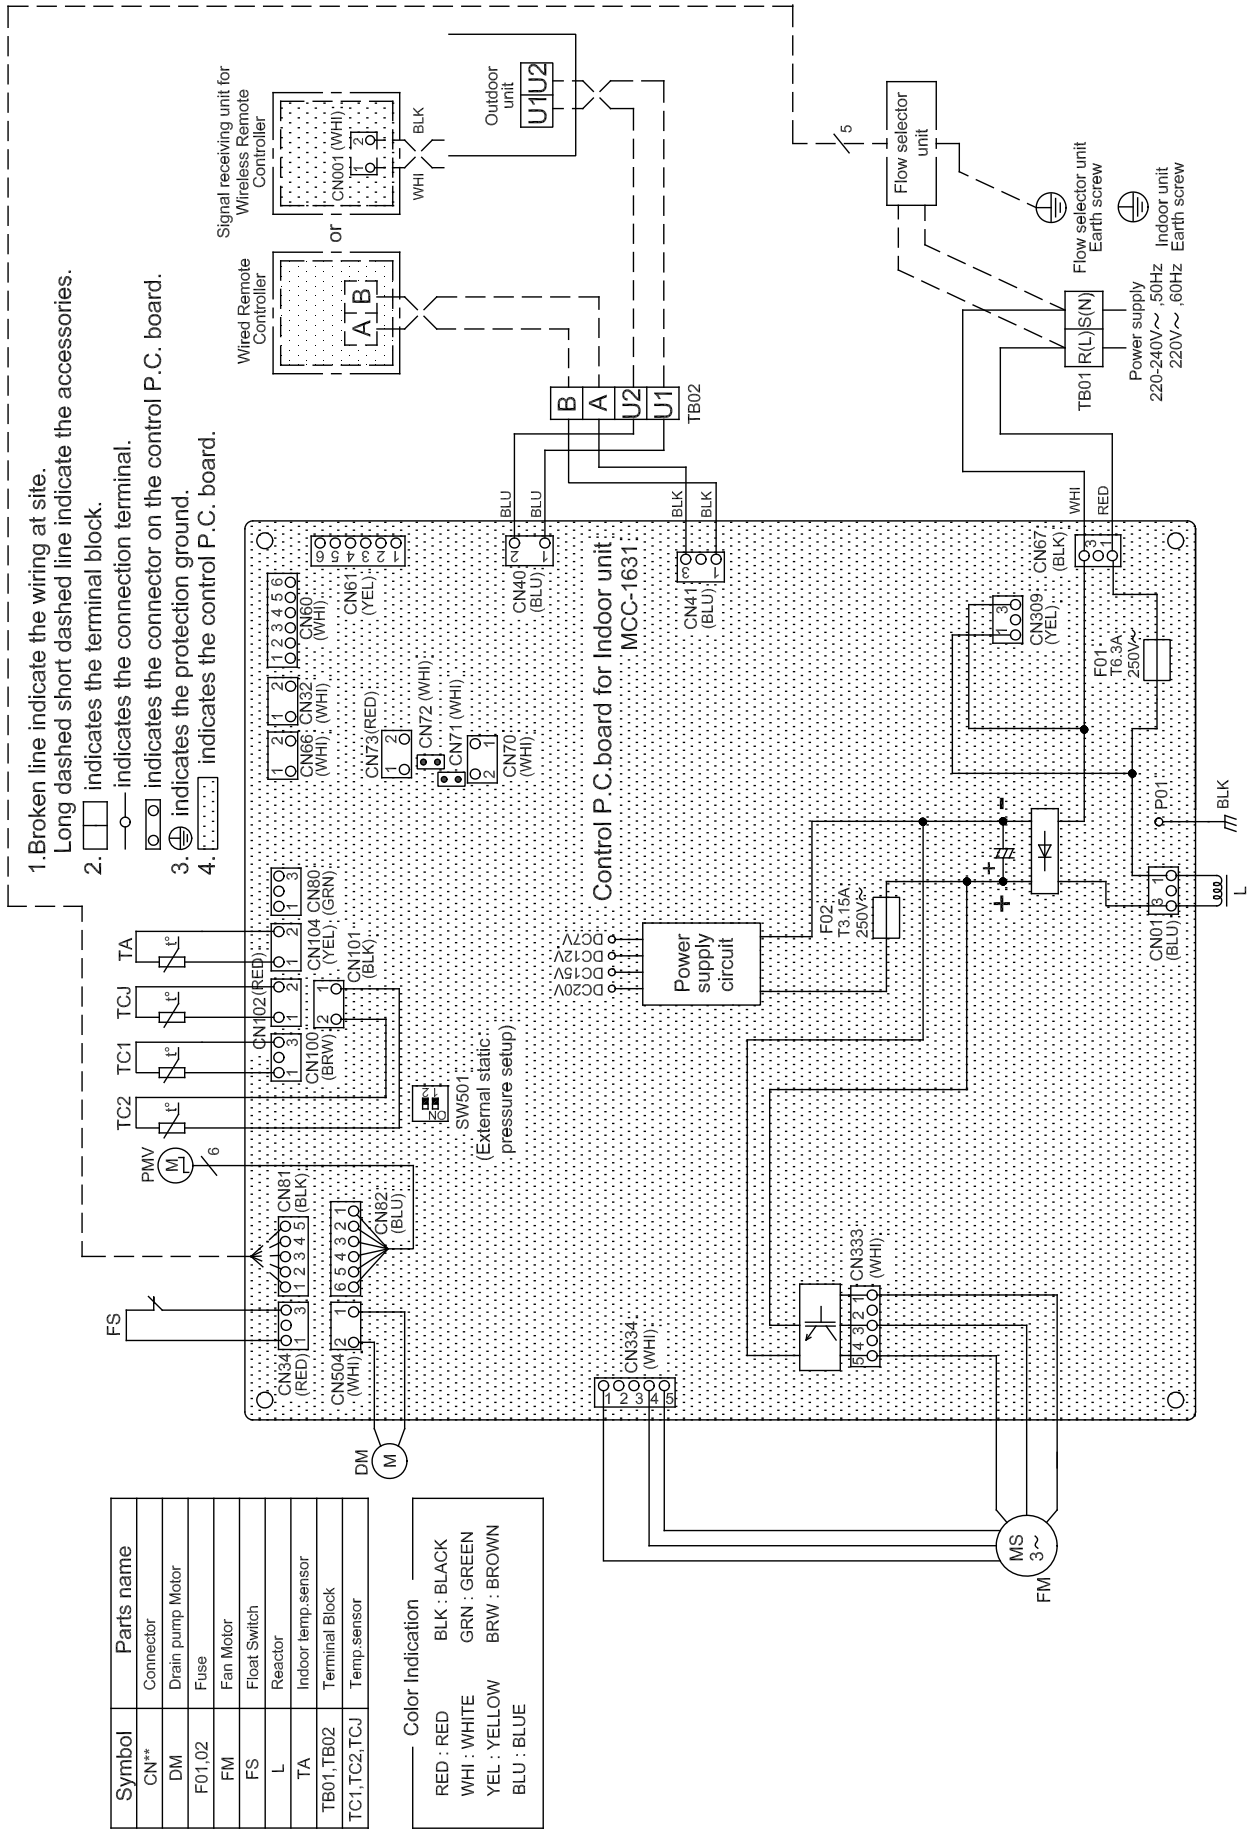


5. PARTS RATING

| Model | MMD-AP | 0186HP * | 0246HP * | 0276HP * | 0366HP * | 0486HP * | 0566HP * |
|-------------------|--------|--|----------|----------|----------------|----------|----------|
| Fan motor | | ICF-340W250-2 | | | MF-340W350-1 | | |
| Drain pump motor | | MDP-1401 | | | | | |
| Float switch | | FS-1A-31-3 | | | | | |
| Pulse motor | | EFM-MD12TF-1 | | | | | |
| Pulse motor valve | | EFM-40YGTF-1 | | | EFM-60YGTCTH-1 | | |
| TA sensor | | Lead wire length:215mm | | | | | |
| TC1 sensor | | Ø4 size lead wire length:1000mm Vinyl tube (Blue) | | | | | |
| TC2 sensor | | Ø6 size lead wire length:1000mm Vinyl tube (Black) | | | | | |
| TCJ sensor | | Ø6 size lead wire length:1000mm Vinyl tube (Red) | | | | | |

6. REFRIGERANT CYCLE DIAGRAM

Indoor unit

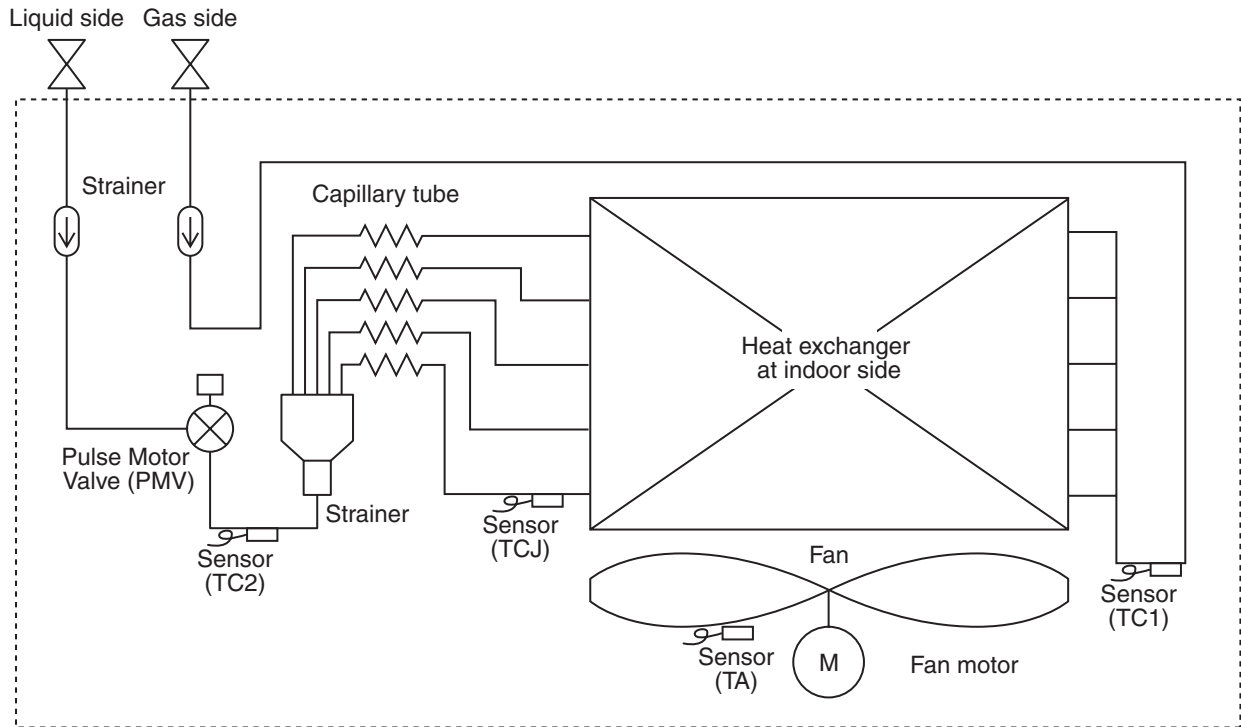

Explanation of functional parts in indoor unit




| Functional part name | | Functional outline |
|----------------------|-------|--|
| Pulse Motor Valve | PMV | (Connector CN082 (6P): Blue) 1) Controls super heat in cooling operation 2) Controls under cool in heating operation 3) Recovers refrigerant oil in cooling operation 4) Recovers refrigerant oil in heating operation |
| Temp. Sensor | 1.TA | (Connector CN104 (2P): Yellow) 1) Detects indoor suction temperature |
| | 2.TC1 | (Connector CN100 (3P): Brown) 1) Controls PMV super heat in cooling operation |
| | 3.TC2 | (Connector CN101 (2P): Black) 1) Controls PMV under cool in heating operation |
| | 4.TCJ | (Connector CN102 (2P): Red) 1) Controls PMV super heat in cooling operation |

7. CONTROL OUTLINE


■ Indoor unit



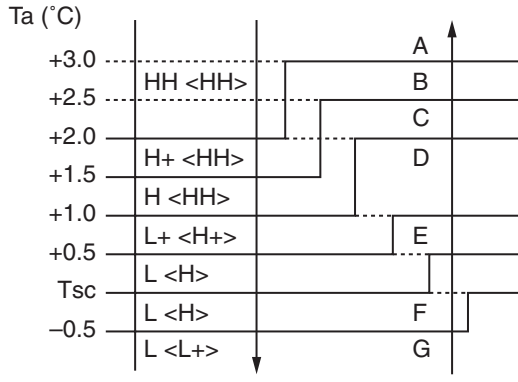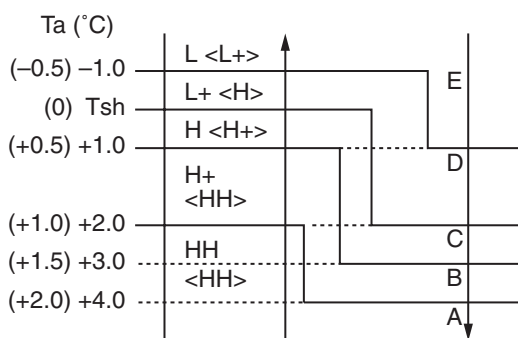

Control specifications




| NO. | Item | Specification outline | Remarks | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|----------------------------|---|---|-----------------|------|--------------------------|-------|---------------|---------------|-------------------|-------|------------------|------|-------------------|---|---|--------------------------------|-------|-------|-------|-------|------------|----------|---|---|-------------|---|---|
| 1 | Upon power supply reset | <ol style="list-style-type: none"> 1. Identification of outdoor unit When the power supply is reset, the outdoor unit is identified, and control is redirected according to the identification result. 2. Indoor fan speed and air flow direction control availability settings Settings such as indoor fan speed and air flow direction control availability are replaced on the basis of EEPROM data. 3. If power supply reset is performed in the wake of a fault, the check code is cleared. If the abnormality persists after the Start / Stop button on the remote controller is pressed to resume operation, the check code is redisplayed on the remote controller. | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | Operation selection | <ol style="list-style-type: none"> 1. The operation mode changes in response to an operation selection command issued via the remote controller. <table border="1" style="margin-left: 40px;"> <thead> <tr> <th>Remote controller command</th> <th>Control outline</th> </tr> </thead> <tbody> <tr> <td>STOP</td> <td>Air conditioner shutdown</td> </tr> <tr> <td>FAN</td> <td>Fan operation</td> </tr> <tr> <td>COOL</td> <td>Cooling operation</td> </tr> <tr> <td>DRY</td> <td>Drying operation</td> </tr> <tr> <td>HEAT</td> <td>Heating operation</td> </tr> </tbody> </table> | Remote controller command | Control outline | STOP | Air conditioner shutdown | FAN | Fan operation | COOL | Cooling operation | DRY | Drying operation | HEAT | Heating operation | Ts: Temperature setting Ta: Room temperature | | | | | | | | | | | | | |
| Remote controller command | Control outline | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| STOP | Air conditioner shutdown | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| FAN | Fan operation | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| COOL | Cooling operation | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DRY | Drying operation | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| HEAT | Heating operation | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | Room temp. control | <ol style="list-style-type: none"> 1. Adjustment range - remote controller temperature setting (°C) <table border="1" style="margin-left: 40px;"> <thead> <tr> <th></th> <th>COOL / DRY</th> <th>HEAT</th> </tr> </thead> <tbody> <tr> <td>Wired type</td> <td>18~29</td> <td>18~29</td> </tr> <tr> <td>Wireless type</td> <td>18~30</td> <td>16~30</td> </tr> </tbody> </table> 2. In heating operation, the temperature setting may be fine-tuned via the DN code "06". <table border="1" style="margin-left: 40px;"> <thead> <tr> <th>SET DATA</th> <th>0</th> <th>2</th> <th>4</th> <th>6</th> </tr> </thead> <tbody> <tr> <td>Temperature setting adjustment</td> <td>+0 °C</td> <td>+2 °C</td> <td>+4 °C</td> <td>+6 °C</td> </tr> </tbody> </table> <p>Factory default</p> <table border="1" style="margin-left: 40px;"> <thead> <tr> <th>Model type</th> <th>SET DATA</th> </tr> </thead> <tbody> <tr> <td>Floor standing (standard, concealed, cabinet)</td> <td>0</td> </tr> <tr> <td>Other model</td> <td>2</td> </tr> </tbody> </table> | | COOL / DRY | HEAT | Wired type | 18~29 | 18~29 | Wireless type | 18~30 | 16~30 | SET DATA | 0 | 2 | 4 | 6 | Temperature setting adjustment | +0 °C | +2 °C | +4 °C | +6 °C | Model type | SET DATA | Floor standing (standard, concealed, cabinet) | 0 | Other model | 2 | Shift in heating suction temperature (not applicable to remote controller thermo operation) |
| | COOL / DRY | HEAT | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Wired type | 18~29 | 18~29 | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Wireless type | 18~30 | 16~30 | | | | | | | | | | | | | | | | | | | | | | | | | | |
| SET DATA | 0 | 2 | 4 | 6 | | | | | | | | | | | | | | | | | | | | | | | | |
| Temperature setting adjustment | +0 °C | +2 °C | +4 °C | +6 °C | | | | | | | | | | | | | | | | | | | | | | | | |
| Model type | SET DATA | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Floor standing (standard, concealed, cabinet) | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Other model | 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | Automatic capacity control | <ol style="list-style-type: none"> 1. The outdoor unit determines the operational capacities of indoor units according to the difference between Ta and Ts. <div style="display: flex; justify-content: space-around; margin-left: 40px;"> <div style="text-align: center;"> <p>Cooling</p> </div> <div style="text-align: center;"> <p>Heating</p> </div> </div> | Ts: Temperature setting Ta: Room temperature | | | | | | | | | | | | | | | | | | | | | | | | | |

| NO. | Item | Specification outline | Remarks |
|-----|-------------------|--|--|
| 5 | Fan speed control | <p>1. The fan operates in one of the four speed modes of "HIGH (HH)", "MED (H)", "LOW (L)" and "AUTO" on the basis of a command issued via the remote controller. (Concealed duct high static pressure type: HH only)</p> <p>2. In AUTO fan speed mode, the air speed changes according to the difference between Ta and Ts.</p> <p><Cooling></p>  <p>The graph shows air temperature Ta (°C) on the y-axis ranging from -0.5 to +3.0. A horizontal line at Tsc represents the setpoint. The fan speed modes are shown as steps: L <L+> (Ta < Tsc), L <H> (Tsc < Ta < +0.5), L+ <H+> (+0.5 < Ta < +1.0), H <HH> (+1.0 < Ta < +1.5), H+ <HH> (+1.5 < Ta < +2.0), C (Ta < +2.5), D (+2.0 < Ta < +2.5), E (+1.5 < Ta < +2.0), F (+1.0 < Ta < +1.5), G (+0.5 < Ta < +1.0), and A (Ta > +3.0). Modes in <> are for remote controller thermo, while others are for body thermo.</p> <ul style="list-style-type: none"> Control is identical in remote controller thermo and body thermo operation. Speed modes shown in < > apply to cooling operation under AUTO air conditioner operation mode. In AUTO fan speed mode, the fan speed remains the same for 3 minutes each time a speed change occurs. However, a speed change command issued via the remote controller can override this, and the fan speed changes accordingly. At the beginning of cooling operation, a higher speed (steeper downward temperature gradient) is chosen. As long as the temperature difference remains on a boundary line, the fan speed stays the same. <p><Heating></p>  <p>The graph shows air temperature Ta (°C) on the y-axis ranging from -0.5 to +4.0. A horizontal line at Tsh represents the setpoint. The fan speed modes are shown as steps: L <L+> (Ta < -0.5), L+ <H> (-0.5 < Ta < 0), H <H+> (0 < Ta < +0.5), H+ <HH> (+0.5 < Ta < +1.0), C (+1.0 < Ta < +1.5), D (+1.0 < Ta < +2.0), E (+1.5 < Ta < +2.0), B (+1.5 < Ta < +3.0), and A (+2.0 < Ta < +4.0). Modes in <> are for remote controller thermo, while others are for body thermo.</p> <p>Figures inside () applies to remote controller thermo operation. Figures outside () applies to body thermo operation. Speed modes shown in < > apply to heating operation under AUTO air conditioner operation mode.</p> <ul style="list-style-type: none"> In AUTO fan speed mode, the fan speed remains the same for 1 minute each time a speed change occurs. However, a speed change command issued via the remote controller can override this, and the fan speed changes accordingly. At the beginning of heating operation, a higher speed (steeper upward temperature gradient) is chosen. As long as the temperature difference remains on a boundary line, the fan speed stays the same. When TC2 ≥ 60 °C, the fan speed is raised by one step. <p>3. If the air conditioner goes thermo OFF during heating operation, the fan speed drops down to LL (breeze).</p> | <p>HH > H+ > H > L+ > L > UL or LL</p> <p>DN code "32" "0000": Body thermo "0001": Remote controller thermo</p> <p>TC2: Indoor heat exchanger sensor temperature</p> <p>"HEATING STANDBY"  displayed</p> |

| NO. | Item | Specification outline | Remarks | | | | | | | | | | | | | | | |
|-----|---|--|--|-----|----------|----|------------|-------|----|-----|-------|--|----------|----|---|----|------|---|
| 6 | Cold air discharge prevention control | <p>1. In heating operation, the upper limit of the fan tap is set according to the lower of whichever is the higher between TC2 sensor and TCJ sensor temperatures, on the one hand, and TC1 sensor temperature, on the other.</p> <ul style="list-style-type: none"> • If the fan continuously operates in zone B for 6 minutes, it automatically moves into zone C. • During defrosting, the control point is shifted by +6 °C. <p>A zone: OFF B zone: 26°C or above and below 28°C breeze C zone: 28°C or above and below 30°C Low D zone: 30°C or above and below 32°C Medium E zone: High</p> | <p>TCJ: Indoor heat exchanger sensor temperature</p> <ul style="list-style-type: none"> • In zones D and E, priority is given to the remote controller fan speed setting. • In zone A, "HEATING STANDBY" is displayed. | | | | | | | | | | | | | | | |
| 7 | Freeze prevention control (low temp. release) | <p>1. During cooling, the air conditioner is operated in the manner described below according to the temperature readings of the TC1, TC2 and TCJ sensors.</p> <ul style="list-style-type: none"> • If zone J operation is detected for 5 minutes, the air conditioner is forced into thermo OFF. • In zone K, the timer is put on pause, with the current timer count retained. • If zone I operation is detected, the timer count is cleared, and the air conditioner returns to normal operation. • If continuous zone J operation forces the air conditioner into thermo OFF, the indoor fan is operated in breeze mode until it moves into zone I. The control is terminated under the following conditions: <p>Termination conditions</p> <p>1) TC1 ≥ 12 °C, TC2 ≥ 12 °C, and TCJ ≥ 12 °C</p> <table border="1" data-bbox="751 1196 1066 1290"> <thead> <tr> <th></th> <th>TC1</th> <th>TC2, TCJ</th> </tr> </thead> <tbody> <tr> <td>P1</td> <td>10°C (5°C)</td> <td>-10°C</td> </tr> <tr> <td>Q1</td> <td>0°C</td> <td>-14°C</td> </tr> </tbody> </table> <p>2) Passage of 20 minutes after stoppage</p> <p>2. During cooling, the air conditioner is operated in the manner described below according to the temperature readings of the TC2 and TCJ sensors.</p> <ul style="list-style-type: none"> • If zone M operation is detected for 45 minutes, the air conditioner is forced into thermo OFF. • In zone N, the timer is put on pause, with the current timer count retained. • When the air conditioner goes back into zone M, timer count is resumed from the retained value. <table border="1" data-bbox="751 1664 938 1758"> <thead> <tr> <th></th> <th>TC2, TCJ</th> </tr> </thead> <tbody> <tr> <td>P2</td> <td>5</td> </tr> <tr> <td>Q2</td> <td>-2.0</td> </tr> </tbody> </table> <ul style="list-style-type: none"> • If zone L operation is detected, the timer count is cleared, and the air conditioner returns to normal operation. <p>Reset conditions</p> <p>1) TC1 ≥ 12 °C, TC2 ≥ 12 °C and TCJ ≥ 12 °C</p> <p>2) Passage of 20 minutes after stoppage</p> | | TC1 | TC2, TCJ | P1 | 10°C (5°C) | -10°C | Q1 | 0°C | -14°C | | TC2, TCJ | P2 | 5 | Q2 | -2.0 | <p>TC1: Indoor heat exchanger sensor temperature</p> <p>* With models without TC2, TC2 is not part of the control parameters.</p> |
| | TC1 | TC2, TCJ | | | | | | | | | | | | | | | | |
| P1 | 10°C (5°C) | -10°C | | | | | | | | | | | | | | | | |
| Q1 | 0°C | -14°C | | | | | | | | | | | | | | | | |
| | TC2, TCJ | | | | | | | | | | | | | | | | | |
| P2 | 5 | | | | | | | | | | | | | | | | | |
| Q2 | -2.0 | | | | | | | | | | | | | | | | | |

| NO. | Item | Specification outline | Remarks |
|-----|---|---|--|
| 8 | Cooling oil (refrigerant) recovery control | <p>While the outdoor unit is recovering cooling oil (refrigerant), the indoor units perform the following control tasks: [common for operational (cooling thermo ON / thermo OFF / FAN), as well as nonoperational indoor units]</p> <ol style="list-style-type: none"> 1) Open the indoor PMV to a certain degree. 2) Engage in recovery control for a specified period of time and return to normal cooling operation at the end of this period upon terminating the control. 3) Operate the drain pump throughout the recovery control period and for about 1 minute after it. | <ul style="list-style-type: none"> • Recovery operation normally takes place roughly every 2 hours. • The opening position of the indoor PMV depending on the type and capacity of the indoor unit. |
| 9 | Heating refrigerant (oil) recovery control | <p>While the outdoor unit is recovering heating refrigerant (oil), the indoor units perform the following control tasks:</p> <ol style="list-style-type: none"> 1) Open the indoor PMV to a certain degree. 2) Control the indoor fan according to the operation mode. [Indoor units operating in heating thermo ON / OFF state] Let the indoor fan continue operating, but turn it off if the temperature of the indoor heat exchanger drops. [Indoor units operating in FAN mode] Turn off the indoor fan and display “HEATING STANDBY  ” on the remote controller. [Non-operational indoor units] Keep the indoor fan turned off. 3) Terminate the recovery operation depending on the TC2 temperature reading. The timing of termination is determined by each indoor unit. 4) Operate the indoor fan and drain pump for about 1 minute after the termination of the recovery operation. (Applicable to compact 4-way cassette type and 1-way cassette type) | <ul style="list-style-type: none"> • Recovery operation normally takes place roughly every hour. • The opening position of the indoor PMV depending on the type and capacity of the indoor unit. |
| 10 | Defrosting control | <p>While the outdoor unit is engaged in defrosting control, the indoor units perform the following control tasks:</p> <ol style="list-style-type: none"> 1) Open the indoor PMV to a certain degree. 2) Control the indoor fan according to the operation mode. [Indoor units operating in heating thermo ON / OFF state] Let the indoor fan continue operating for a while, but turn it off as the temperature of the indoor heat exchanger drops. [Indoor units operating in FAN mode] Let the indoor fan continue operating. [Non-operational indoor units] Keep the indoor fan turned off. 3) As defrosting control comes to an end, it gives way to heating refrigerant (oil) recovery control. (For control details, see “9. Heating refrigerant (oil) recovery control” above.) | <ul style="list-style-type: none"> • For defrosting commencement conditions, see 5 Control Outline “10. Defrosting control (reverse defrosting method)” in SMMS-i Outdoor Unit Service Manual A10-005 above. • The opening position of the indoor PMV depending on the type and capacity of the indoor unit. |
| 11 | Short intermittent operation compensation control | <ol style="list-style-type: none"> 1. For 5 minutes after startup, the system is forced to continue operating even if it reaches the thermo OFF region. 2. However, priority is given to cooling / heating selection, operation standby, and protective control, so that there is no overriding of thermo OFF in these cases. | |
| 12 | Drain pump control | <ol style="list-style-type: none"> 1. During cooling (including DRY operation), the drain pump is operated at all times. 2. If the float switch is activated while the drain pump is in operation, the drain pump continues operating, with the relevant check code displayed. 3. If the float switch is activated while the drain pump is turned off, thermo OFF is forced on the air conditioner, with the drain pump put into operation. If the float switch continues to be activated for about 5 minutes, the drain pump is turned off, with the relevant check code displayed. | Check code [P10] |
| 13 | Elimination of residual heat | <ol style="list-style-type: none"> 1. When the air conditioner is turned off after engaging in heating operation, the indoor fan is operated for about 30 seconds in “breeze” mode. | |


| NO. | Item | Specification outline | Remarks | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---------------------------------------|---|--|---|-------------------------|---|----------------------------|-------------------------------|--|--|--------------------|------------------------|--------------------------|---------------|---------------------|-------------------|----------------------------|------------|---|---|---|---|---|---|-------------------------------|-----------|---|---|---|---|---|---|-----------|---|---|---|---|---|---|-----------|---|---|---|---|---|---|-----------|---|---|---|---|---|---|---|
| 14 | Filter sign display (not applicable to wireless type) *Provided in the separately mounted type, TCB-AX32E2 | 1. The indoor fan's cumulative hours of operation are counted, and when these exceed the prescribed value (2500H), a filter replacement signal is sent to the remote controller to display a filter sign on it. 2. When a filter reset signal is received from the remote controller, the timer measuring cumulative hours is cleared. If the prescribed hours have been exceeded, the hours count is reset, with the sign on the remote controller display erased. <table border="1" data-bbox="422 436 941 474" style="margin-top: 10px;"> <tr> <td style="width: 30%;">Filter service life</td> <td style="text-align: center;">2500H</td> </tr> </table> | Filter service life | 2500H | "FILTER  " displayed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Filter service life | 2500H | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 15 | Operation standby Heating standby | <Operation standby> Displayed on remote controller 1. When any of the DN codes listed below is displayed <ul style="list-style-type: none"> • "P05" - Detection of an open phase in the power supply wiring • "P10" - Detection of indoor flooding in at least one indoor unit • "L30" - Detection of an interlock alarm in at least one indoor unit 2. Forced thermo OFF <ul style="list-style-type: none"> • "COOL / DRY" operation is unavailable because at least one indoor unit is operating in "HEAT" mode. • "HEAT" operation is unavailable because at least one indoor unit is operating in "COOL / DRY" mode under priority cooling setting (bit 1 of SW11 on outdoor I/ F P.C. board ON). 3. All indoor units not able to engage in any of the above operations stand by in thermo OFF state. 4. The indoor fan has been turned off because the system is engaged in a heat refrigerant (oil) recovery operation. <Heating standby> Displayed on remote controller 1. Normal thermo OFF <ul style="list-style-type: none"> • During heating, the indoor unit goes thermo OFF as the heating temperature setting is reached. 2. During heating, the fan rotates at a breeze speed (UL or lower) or remains stationary to prevent cold air from being discharged (including defrosting operation). 3. Forced thermo OFF <ul style="list-style-type: none"> • "HEAT" operation is unavailable because at least one indoor unit is operating in "COOL / DRY" mode under priority cooling setting (bit 1 of SW11 on outdoor I/ F P.C. board ON). | <ul style="list-style-type: none"> • "OPERATION STANDBY  " displayed No display provided on wireless remote controller • "HEATING STANDBY  " displayed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 16 | Selection of central control mode | 1. The range of operations that can be performed via an indoor unit remote controller can be determined through the setting of the central controller. 2. Setting details TCC-Link central control <table border="1" data-bbox="406 1456 1173 1720" style="margin-top: 10px;"> <thead> <tr> <th rowspan="2">Operation via TCCLink central control</th> <th colspan="6">Operation on RBC-AMT32E</th> <th rowspan="2">RBC-AMT32E display</th> </tr> <tr> <th>Start / stop selection</th> <th>Operation mode selection</th> <th>Timer setting</th> <th>Temperature setting</th> <th>Fan speed setting</th> <th>Air flow direction setting</th> </tr> </thead> <tbody> <tr> <td>Individual</td> <td style="text-align: center;">○</td> <td style="text-align: center;">○</td> <td style="text-align: center;">○</td> <td style="text-align: center;">○</td> <td style="text-align: center;">○</td> <td style="text-align: center;">○</td> <td rowspan="5" style="text-align: center;">"CENTRAL CONTROL IN PROGRESS"</td> </tr> <tr> <td>Central 1</td> <td style="text-align: center;">×</td> <td style="text-align: center;">○</td> <td style="text-align: center;">×</td> <td style="text-align: center;">○</td> <td style="text-align: center;">○</td> <td style="text-align: center;">○</td> </tr> <tr> <td>Central 2</td> <td style="text-align: center;">×</td> <td style="text-align: center;">×</td> <td style="text-align: center;">×</td> <td style="text-align: center;">×</td> <td style="text-align: center;">○</td> <td style="text-align: center;">○</td> </tr> <tr> <td>Central 3</td> <td style="text-align: center;">○</td> <td style="text-align: center;">×</td> <td style="text-align: center;">○</td> <td style="text-align: center;">×</td> <td style="text-align: center;">○</td> <td style="text-align: center;">○</td> </tr> <tr> <td>Central 4</td> <td style="text-align: center;">○</td> <td style="text-align: center;">×</td> <td style="text-align: center;">○</td> <td style="text-align: center;">○</td> <td style="text-align: center;">○</td> <td style="text-align: center;">○</td> </tr> </tbody> </table> (○ : Accessible × : Inaccessible) | Operation via TCCLink central control | Operation on RBC-AMT32E | | | | | | RBC-AMT32E display | Start / stop selection | Operation mode selection | Timer setting | Temperature setting | Fan speed setting | Air flow direction setting | Individual | ○ | ○ | ○ | ○ | ○ | ○ | "CENTRAL CONTROL IN PROGRESS" | Central 1 | × | ○ | × | ○ | ○ | ○ | Central 2 | × | × | × | × | ○ | ○ | Central 3 | ○ | × | ○ | × | ○ | ○ | Central 4 | ○ | × | ○ | ○ | ○ | ○ | <ul style="list-style-type: none"> • In the case of a wired remote controller, "CENTRAL CONTROL IN PROGRESS  " is displayed (lit up) while in central control mode. • The display blinks when a control function inaccessible to a remote controller is chosen. • A wireless remote controller has the same set of control functions, although there is no display. When a control operation is performed via a wireless remote controller while in central control mode, a peep sound alert (5 times) is provided. |
| Operation via TCCLink central control | Operation on RBC-AMT32E | | | | | | RBC-AMT32E display | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Start / stop selection | Operation mode selection | Timer setting | Temperature setting | Fan speed setting | Air flow direction setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Individual | ○ | ○ | ○ | ○ | ○ | ○ | "CENTRAL CONTROL IN PROGRESS" | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Central 1 | × | ○ | × | ○ | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Central 2 | × | × | × | × | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Central 3 | ○ | × | ○ | × | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Central 4 | ○ | × | ○ | ○ | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
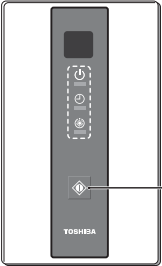
| NO. | Item | Specification outline | Remarks |
|-----|--------------------------------------|--|---|
| 17 | DC motor | 1) When the fan operation has started, positioning of the stator and the rotor are performed. (Moves slightly with tap sound) 2) The motor operates according to the command from the indoor controller. Notes) <ul style="list-style-type: none"> • When the fan rotates while the air conditioner stops due to entering of outside air, etc, the air conditioner may operate while the fan motor stops. • When a fan lock is found, the air conditioner stops, and an error is displayed. • If static pressure of the used duct does not match with the setup value of static pressure, which was decided in the static pressure setting code No. [5D], the air conditioner may stop or an error code may be displayed. | Check code "P12" |
| 18 | Power saving mode | 1. Push the  button on the remote controller 2. The "  " segment lights up on the wired remote controller display. 3. The requirement capacity ratio is limited to approximately 75 %. 4. If the power saving operation is enabled, the settings are retained when the operation is stopped, when the mode is changed, or when the power is reset. The power saving operation will be enabled the next time the operation starts. | The power saving operation cannot be set by the wireless remote controller or wired remote controller of AMT31E or older. |
| 19 | Frequency fixed operation (Test run) | <p><In case of wired remote controller></p> 1) When pushing [CHK] button for 4 seconds or more, [TEST] is displayed on the display screen and the mode enters in Test run mode. 2) Push [ON/OFF] button. 3) Using [MODE] button, set the mode to [COOL] or [HEAT]. <ul style="list-style-type: none"> • Do not use other mode than [COOL]/[HEAT] mode. • During test run operation, the temperature cannot be adjusted. • An error is detected as usual. • A frequency fixed operation is performed. 4) After the test run, push [ON/OFF] button to stop the operation. (Display in the display part is same as the procedure in Item 1.) 5) Push [CHK] button to clear the test run mode. ([TEST] display in the display part disappears and the status returns to the normal stop status.) <p><In case of wireless remote controller></p> 1) When TEMPORARY button is pushed for 10 seconds or more, "Pi!" sound is heard and the operation changes to test run. After approx. 3 minutes, a cooling operation starts forcibly. Check cool air starts blowing. If the operation does not start, check wiring again. 2) To stop a test operation, push TEMPORARY button once again (Approx. 1 second). Check wiring / piping of the indoor and outdoor units in test run. <div style="text-align: center; margin-top: 20px;">  <p>TEMPORARY button</p> </div> | Command frequency is approximately [S7] |

8. APPLIED CONTROL AND FUNCTIONS (INCLUDING CIRCUIT CONFIGURATION)


8-1. Indoor controller block diagram

8-1-1. In Case of Connection of Wired (Simple) Remote Controller

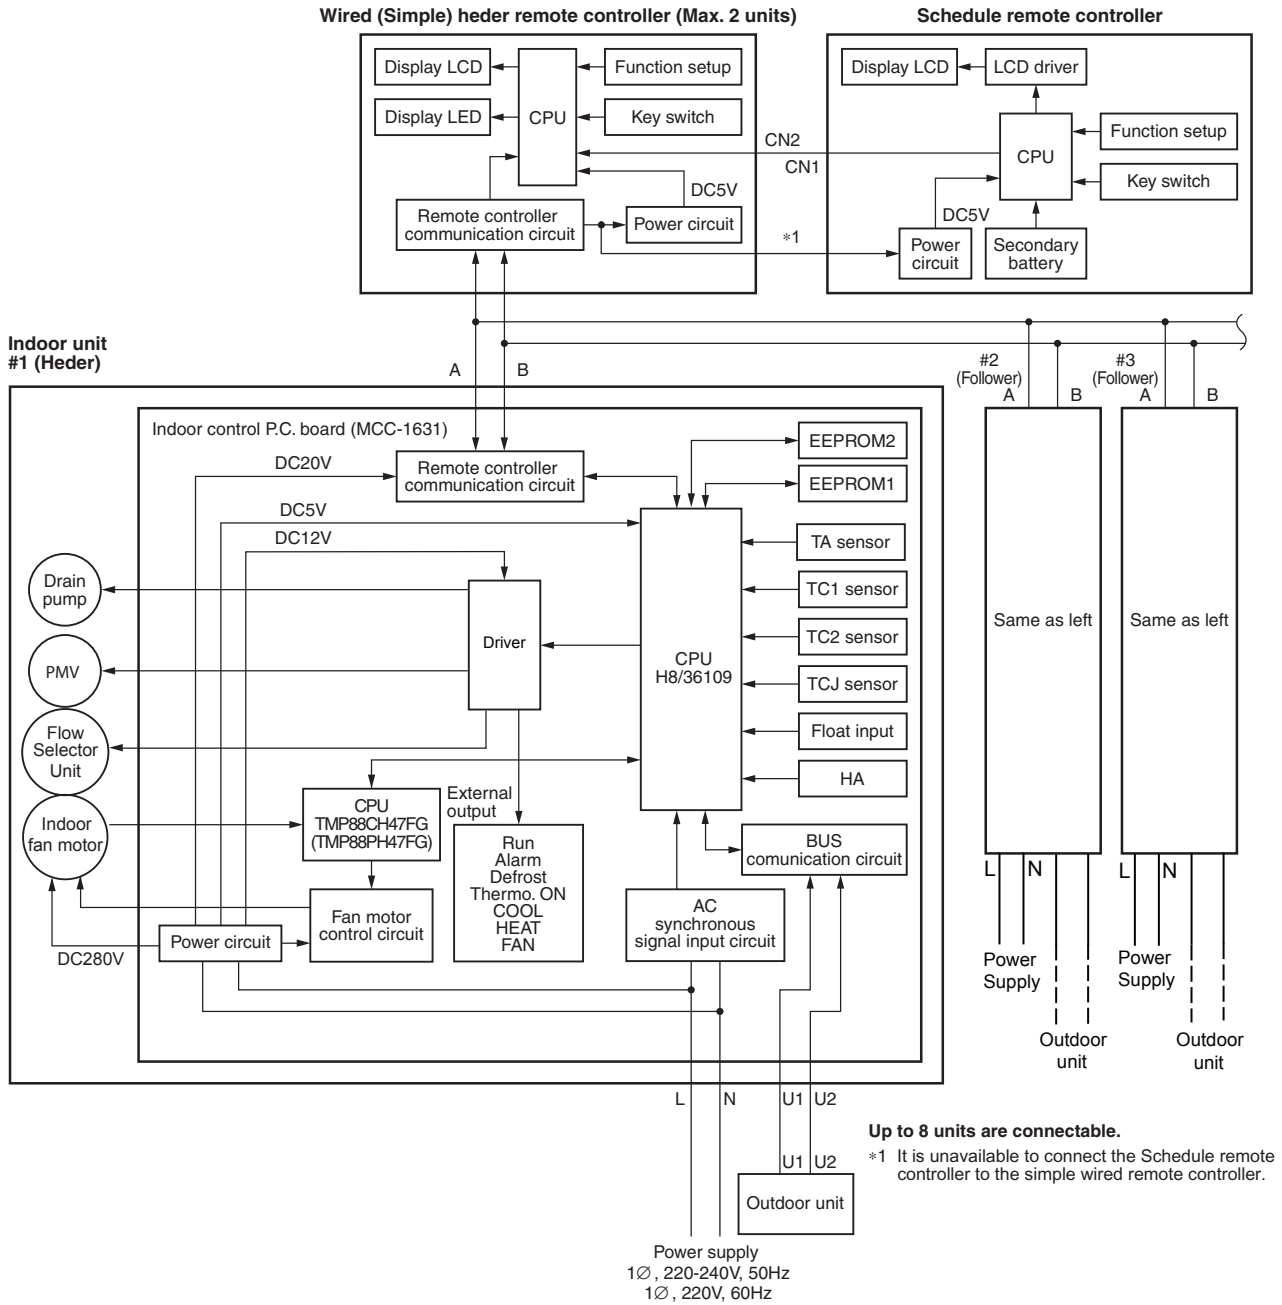


8-1-2. In Case of Connection of Wireless Remote Controller

Indoor unit
#1 (Heder)

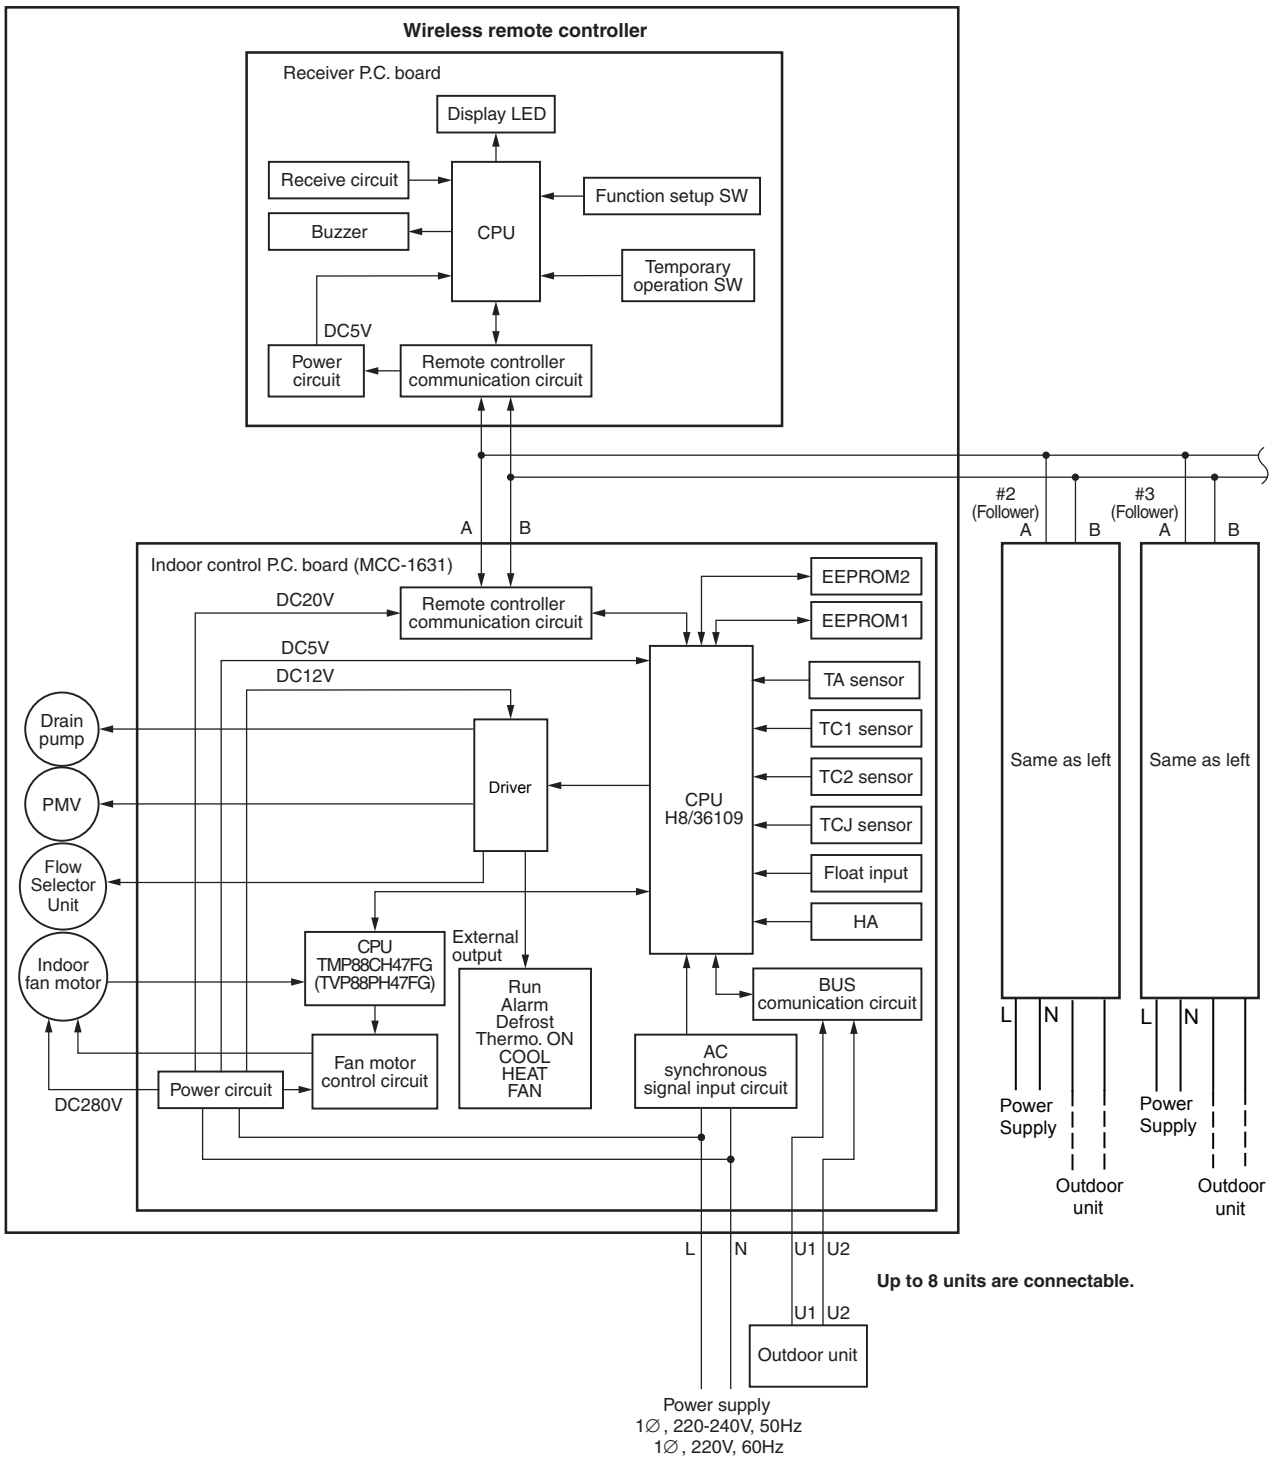


8-1-3. Connection of Both Wired (Simple) Remote Controller and Wireless Remote Controller

Indoor unit
#1 (Header)

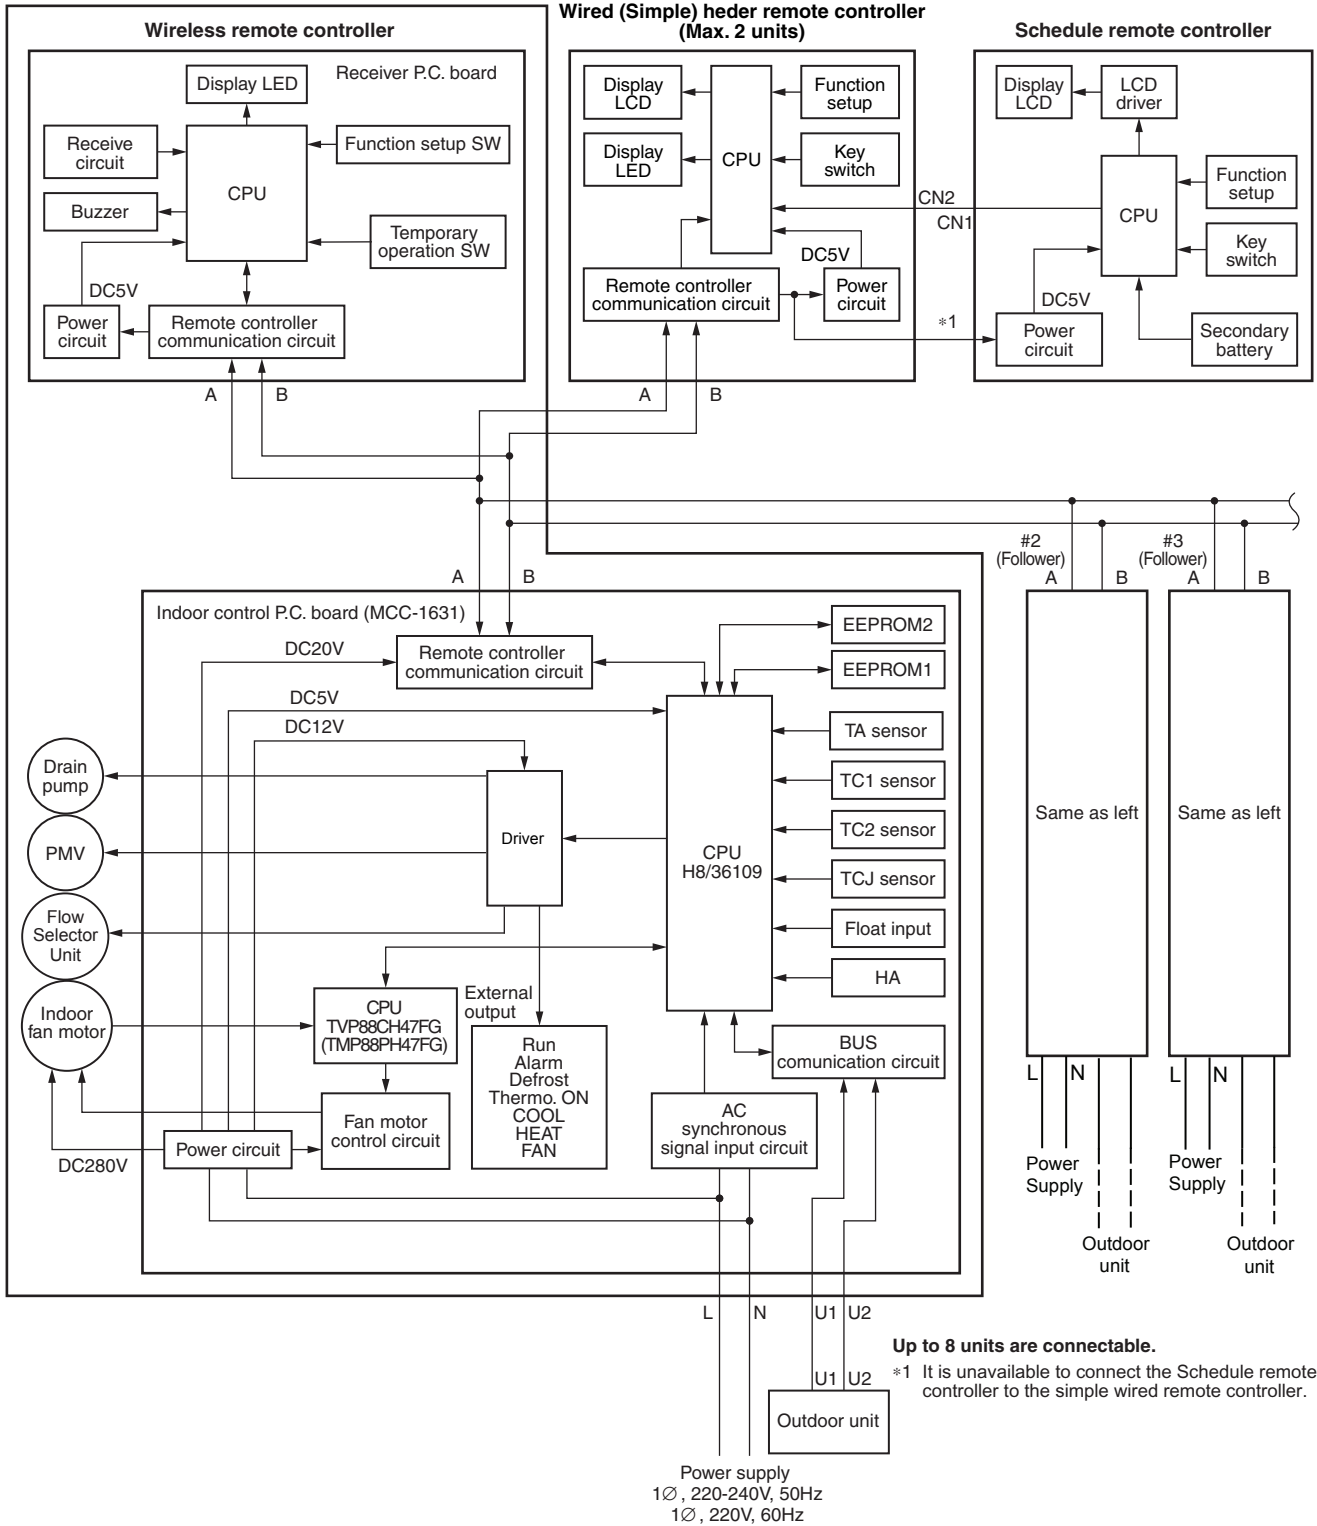

8-2. Indoor Print Circuit Board
MCC-1631

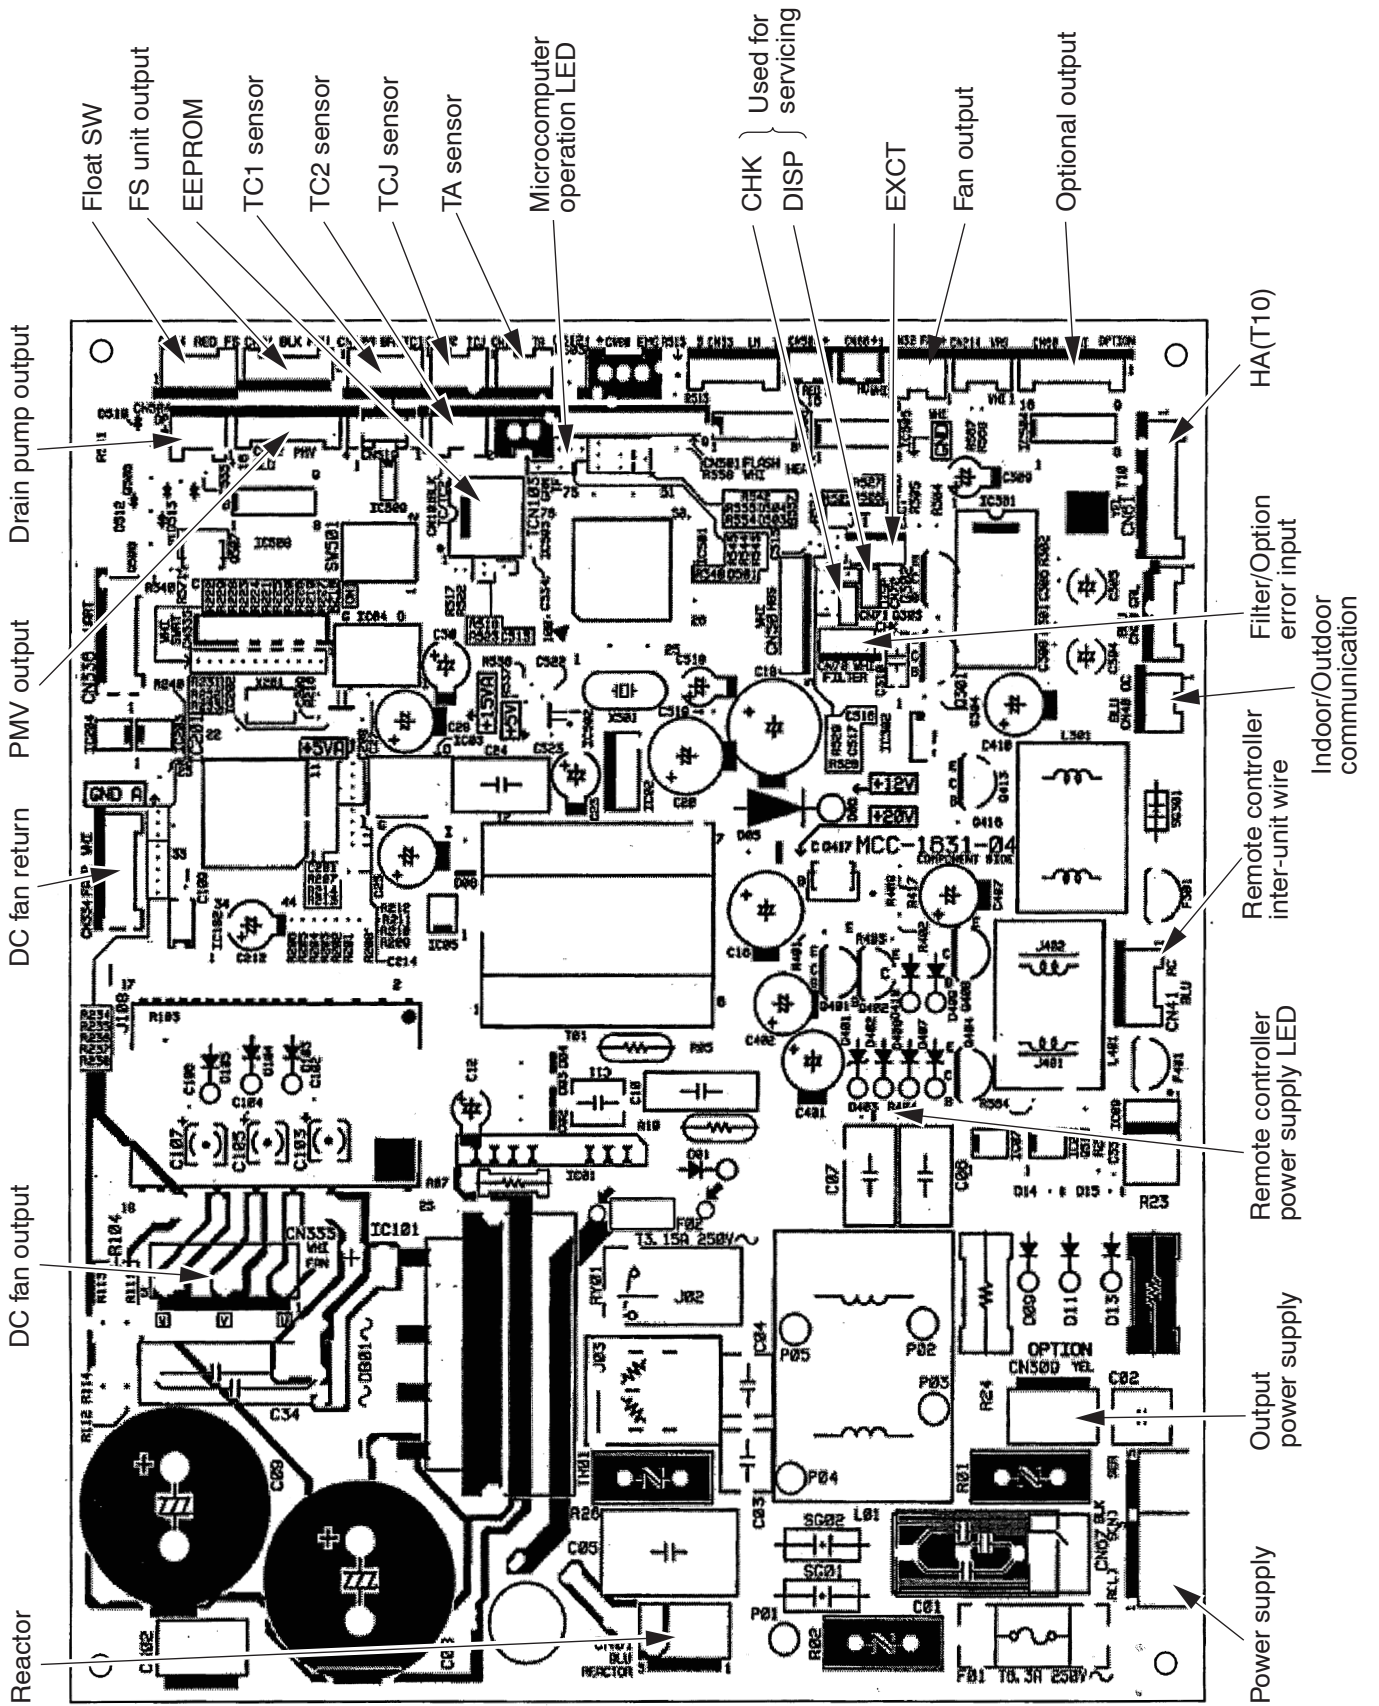

8-3. Optional connector specifications of indoor P.C. board

| Function | Connector No. | Pin No. | Specification | Remarks |
|------------------------|---------------|---------|-----------------------------------|---|
| Fan output | CN32 | 1 | DC12 V | Factory default setting: ON when indoor unit in operation and OFF when indoor unit at rest * Fan can be operated on its own by pressing FAN button on remote controller (DN = 31) |
| | | 2 | Output | |
| HA | CN61 | 1 | Start / stop input | Start / stop input for HA (J01: In place / Removed = Pulse input (factory default) / Step input) |
| | | 2 | 0 V (COM) | |
| | | 3 | Remote controller disabling input | Enables / disables start / stop control via remote controller |
| | | 4 | In-operation output | ON during operation (HA answerback signal) |
| | | 5 | DC12 V (COM) | |
| | | 6 | Alarm output | ON while alarm ON |
| Optional output | CN60 | 1 | DC12 V (COM) | |
| | | 2 | Defrosting output | ON while outdoor unit defrosted |
| | | 3 | Thermostat ON output | ON while real thermostat ON (compressor ON) |
| | | 4 | Cooling output | ON while air conditioner in cooling or related operation (COOL, DRY or cooling under AUTO mode) |
| | | 5 | Heating output | ON while air conditioner in heating operation (HEAT or heating under AUTO mode) |
| | | 6 | Fan output | ON while indoor fan ON (air cleaner in use or via interlock wiring) |
| External error input | CN80 | 1 | DC12 V (COM) | Generates test code L30 and automatically shuts down air conditioner (only if condition persists for 1 minute) |
| | | 2 | DC12 V (COM) | |
| | | 3 | External error input | |
| CHK Operation check | CN71 | 1 | Check mode input | Used for indoor operation check (prescribed operational status output, such as indoor fan "H" or drain pump ON, to be generated without communication with outdoor unit or remote controller) |
| | | 2 | 0 V | |
| DISP Display mode | CN72 | 1 | Display mode input | Product display mode - Communication just between indoor unit and remote controller enabled (upon turning on of power) Timer short-circuited out (always) |
| | | 2 | 0 V | |
| EXCT Demand | CN73 | 1 | Demand input | Imposes thermostat OFF on indoor unit |
| | | 2 | 0 V | |

8-4. Test operation of indoor unit

▼ Check function for operation of indoor unit (Functions at indoor unit side)

This function is provided to check the operation of the indoor unit singly without communication with the remote controller or the outdoor unit. This function can be used regardless of operation or stop of the system. However, if using this function for a long time, a trouble of the equipment may be caused. Limit using this function within several minutes.

[How to operate]

- 1) Short-circuit CHK pin (CN71 on the indoor P.C. board).
The operation mode differs according to the indoor unit status in that time.
Normal time: Both float SW and fan motor are normal.
Abnormal time: Either one of float SW or fan motor is abnormal.
- 2) Restricted to the normal time, if short-circuiting DISP pin (CN72 on the indoor P.C. board) in addition to short-circuit of CHK pin (CN71 on the indoor P.C. board), the minimum opening degree (30 pls) can be set to the indoor PMV only.
When open DISP pin, the maximum opening degree (1500 pls) can be obtained again.

[How to clear]

Open CHK pin. While the system is operating, it stops once but automatically returns to operation after several minutes.

| | Short-circuit of CHK pin | | |
|----------------|--------------------------------|------------------------------|------------------------------|
| | Normal time | | Abnormal time |
| | DISP pin open | DISP pin short circuit | |
| Fan motor | (H) | (H) | Stop |
| Indoor PMV (*) | Max. opening degree (1500 pls) | Min. opening degree (30 pls) | Min. opening degree (30 pls) |
| Drain pump | ON | ON | ON |
| Communication | All ignored | All ignored | All ignored |
| P.C. board LED | Lights | Lights | Flashes |

- To exchange the indoor PMV coil, set the indoor PMV to Max. opening degree.
- For the detailed positions of CHK pin (CN71 on indoor P.C. board) and DISP pin (CN72 on indoor P.C. board), refer to the indoor P.C. board.

8-5. Method to set indoor unit function DN code


(When performing this task, be sure to use a wired remote controller.)

<Procedure> To be performed only when system at rest

- 1 Push the  +  +  buttons simultaneously and hold for at least 4 seconds.

The unit No. displayed first is the address of the header indoor unit in group control.

Then the fan and louver of the selected indoor unit move.


- 2 Each time the  button (left side of the button) is pressed, one of the indoor unit Nos. under group control is displayed in turn. Then the fan and louver of the selected indoor unit move.


- 3 Use the  button to select the CODE No. (DN code) of the desired function.

- 4 Use the  button to select the desired SET DATA associated with the selected function.

- 5 Push the  button. (The display changes from flashing to steady.)

- To change the selected indoor unit, go back to step 2.
- To change the selected function, go back to step 3.

- 6 When the  button is pushed, the system returns to normal off state.

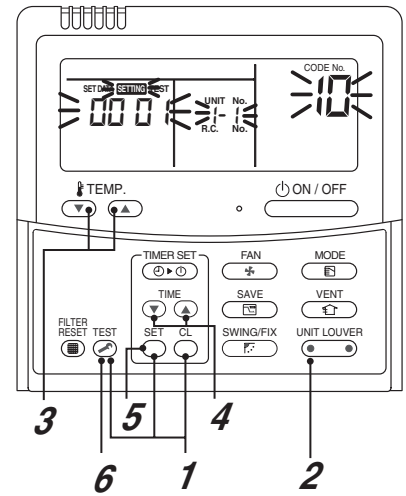

Function CODE No. (DN Code) table (includes all functions needed to perform applied control on site)

| DN | Item | Description | At shipment | | | | | | |
|--|---|---|---------------------------------------|-------|-------|--------|--------|--------|--------|
| 01 | Filter display delay timer | 0000: None 0002: 2500H 0004: 10000H 0001: 150H 0003: 5000H | According to type | | | | | | |
| 02 | Dirty state of filter | 0000: Standard 0001: High degree of dirt (Half of standard time) | 0000: Standard | | | | | | |
| 03 | Central control address | 0001: No.1 unit to 0064: No.64 unit 0099: Unfixed | 0099: Unfixed | | | | | | |
| 04 | Specific indoor unit priority | 0000: No priority 0001: Priority | 0000: No priority | | | | | | |
| 06 | Heating temp shift | 0000: No shift to 0001: +1°C 0002: +2°C to 0010: +10°C (Up to +6 recommended) | 0002: +2°C (Floor type 0000: 0 °C) | | | | | | |
| 0d | Existence of [AUTO] mode | 0000: Provided 0001: Not provided (Automatic selection from connected outdoor unit) | 0001: Not provided | | | | | | |
| 0F | Cooling only | 0000: Heat pump 0001: Cooling only (No display of [AUTO] [HEAT]) | 0000: Heat pump | | | | | | |
| 10 | Type | 0006: Concealed Duct High Static Pressure Type * refer to 36 page Type CODE No. [10] | Depending on model type | | | | | | |
| 11 | Indoor unit capacity | 0000: Unfixed to 0001 to 0034 | According to capacity type | | | | | | |
| 12 | Line address | 0001: No.1 unit to 0030: No.30 unit | 0099: Unfixed | | | | | | |
| 13 | Indoor unit address | 0001: No.1 unit to 0064: No.64 unit | 0099: Unfixed | | | | | | |
| 14 | Group address | 0000: Individual to 0001: Header unit of group 0002: Follower unit of group | 0099: Unfixed | | | | | | |
| 1E | Temp difference of [AUTO] mode selection COOL → HEAT, HEAT → COOL | 0000: 0 deg to 0010: 10 deg (For setup temperature, reversal of COOL / HEAT by } (Data value) / 2) | 0003: 3 deg (Ts ±1.5) | | | | | | |
| 28 | Automatic restart of power failure | 0000: None to 0001: Restart | 0000: None | | | | | | |
| 2A | Selection of option / error input (CN70) | 0000: Filter input to 0001: Alarm input (Air washer, etc.) 0002: None | 0002: None | | | | | | |
| 2E | HA terminal (CN61) select | 0000: Usual to 0001: Leaving-ON prevention control 0002: Fire alarm input | 0000: Usual (HA terminal) | | | | | | |
| 31 | Ventilating fan control | 0000: Unavailable to 0001: Available | 0000: Unavailable | | | | | | |
| 32 | TA sensor selection | 0000: Body TA sensor to 0001: Remote controller sensor | 0000: Body TA sensor | | | | | | |
| 33 | Temperature unit select | 0000: C (at factory shipment) to 0001: °F | 0000: °C | | | | | | |
| 5d | Static pressure selection | 0000: Standard | | | | | | | |
| | | Set data | 0000 | 0001 | 0002 | 0003 | 0004 | 0005 | 0006 |
| | | External static pressure (Factory default) | 100 Pa | 50 Pa | 75 Pa | 150 Pa | 125 Pa | 175 Pa | 200 Pa |
| The list above is when SW501-1 and SW501-2 is OFF. | | | | | | | | | |
| 60 | Timer setting (wired remote controller) | 0000: Available (can be performed) to 0001: Unavailable (cannot be performed) | 0000: Available | | | | | | |
| 92 | External interlock release condition | 0000: Operation stopped to 0001: Release signal received | 0000: Operation stopped | | | | | | |
| D0 | Whether the power saving mode can be set by the remote controller | 0000: Invalid to 0001: Valid | 0001: Valid | | | | | | |

**Type
DN code “10”**

| Value | Type | Model |
|-------|--|--------------|
| 0006 | Concealed Duct High Static Pressure Type | MMD-AP***HP* |

**Indoor Unit Capacity
DN code “11”**

| Value | Capacity |
|-------|----------|
| 0000* | Invalid |
| 0001 | 007 type |
| 0003e | 009 type |
| 0005 | 012 type |
| 0007 | 015 type |
| 0009 | 018 type |
| 0011 | 024 type |
| 0012 | 027 type |
| 0013 | 030 type |
| 0015 | 036 type |
| 0017 | 048 type |
| 0018 | 056 type |
| 0021 | 072 type |
| 0023 | 096 type |
| ~ | |

*1 Default value stored in EEPROM mounted on service P.C. board

8-6. Applied control of indoor unit

Control system using remote controller interface (TCB-IFCB-4E2)

Wiring and setting


- In the case of group control, the control system functions as long as it is connected to one of the indoor units (control P.C. board) in the group. If it is desired to access the operation and error statuses of other units, relevant signals must be brought to it from those units individually.

▼ Control items

- | | |
|-------------------------------|---|
| (1) Start / Stop input signal | Start / stop of unit |
| (2) In-operation signal | Output present while unit in normal operation |
| (3) Error signal Output | present while alarm (e.g. serial communication error or operation of protective device for indoor / outdoor unit) being activated |

▼ Wiring diagram of control system using remote controller interface (TCB-IFCB-4E2)

- Input IFCB4E2: No-voltage ON / OFF serial signal
- Output No-voltage contact (in-operation and error indication)
Contact capacity: Max. AC 240 V, 0.5 A

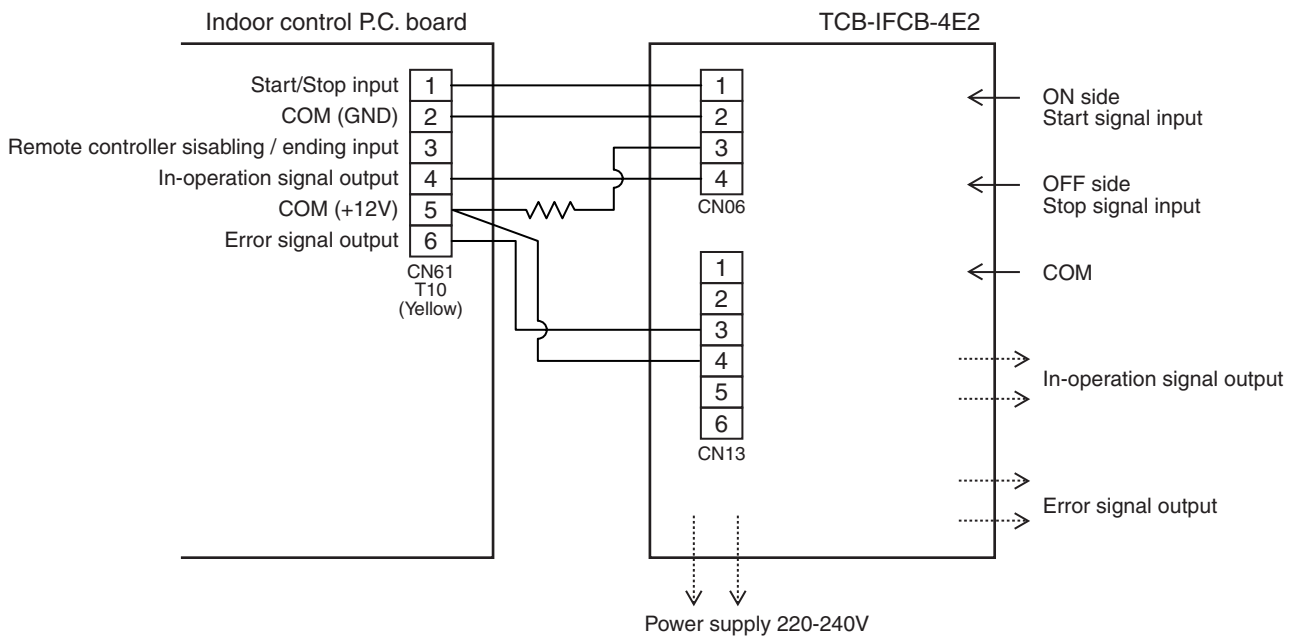

▼ Ventilating fan control from remote controller

[Function]

- The start / stop operation can be operated from the wired remote controller when air to air heat exchanger or ventilating fan is installed in the system.
- The fan can be operated even if the indoor unit is not operating.
- Use a fan which can receive the no-voltage A contact as an outside input signal.
- In a group control, the units are collectively operated and they can not be individually operated.

1. Operation

Handle a wired remote controller in the following procedure.

- * Use the wired remote controller during stop of the system.
- * Be sure to set up the wired remote controller to the header unit. (Same in group control)
- * In a group control, if the wired remote controller is set up to the header unit, both header and follower units are simultaneously operable.

1 Push concurrently + + buttons for 4 seconds or more.

The unit No. displayed firstly indicates the header indoor unit address in the group control. In this time, the fan of the selected indoor unit turns on.

2 Every pushing button (left side of the button), the indoor unit numbers in group control are displayed successively.

In this time, the fan of the selected indoor unit only turns on.

3 Using the setup temp or button, specify the CODE No. 31.

4 Using the timer time or button, select the SET DATA. (At shipment: 0000)

The setup data are as follows:


| SET DATA | Handling of operation of air to air heat exchanger or ventilating fan |
|----------|---|
| 0000 | Unavailable (At shipment) |
| 0001 | Available |

5 Push button. (OK if display goes on.)

- To change the selected indoor unit, go to the procedure 2).
- To change the item to be set up, go to the procedure 3).

6 Pushing returns the status to the usual stop status.

2. Wiring

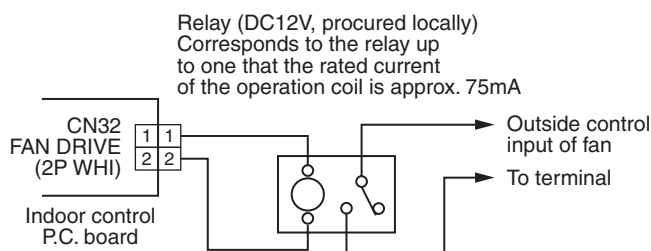

Note) Determine the cable length between the indoor control P.C. board and the relay within 2m.

▼ Leaving-ON prevention control

[Function]

- This function controls the indoor units individually. It is connected with cable to the control P.C. board of the indoor unit.
- In a group control, it is connected with cable to the indoor unit (Control P.C. board), and the CODE No. **2E** is set to the connected indoor unit.
- It is used when the start operation from outside is unnecessary but the stop operation is necessary.
- Using a card switch box, card lock, etc, the forgotten-OFF of the indoor unit can be protected.
- When inserting a card, start / stop operation from the remote controller is allowed.
- When taking out a card, the system stops if the indoor unit is operating and start / stop operation from the remote controller is forbidden.

1. Control items

- 1) Outside contact ON: The start / stop operation from the remote controller is allowed.
(Status that card is inserted in the card switch box)
- 2) Outside contact OFF: If the indoor unit is operating, it is stopped forcibly.
(Start / Stop prohibited to remote controller)
(Status that card is taken out from the card switch box)

* When the card switch box does not perform the above contact operation, convert it using a relay with b contact.


2. Operation

Handle the wired remote controller switch in the following procedure.

* Use the wired remote controller switch during stop of the system.

- 1 Push concurrently $\overset{\text{SET}}{\text{O}}$ + $\overset{\text{CL}}{\text{O}}$ + $\overset{\text{TEST}}{\text{O}}$ buttons for 4 seconds or more.**
- 2 Using the setup temp ∇ or \blacktriangle button, specify the CODE No. **2E**.**
- 3 Using the timer time ∇ or \blacktriangle button, set **000** to the SET DATA.**
- 4 Push $\overset{\text{SET}}{\text{O}}$ button.**
- 5 Push $\overset{\text{TEST}}{\text{O}}$ button. (The status returns to the usual stop status.)**


3. Wiring

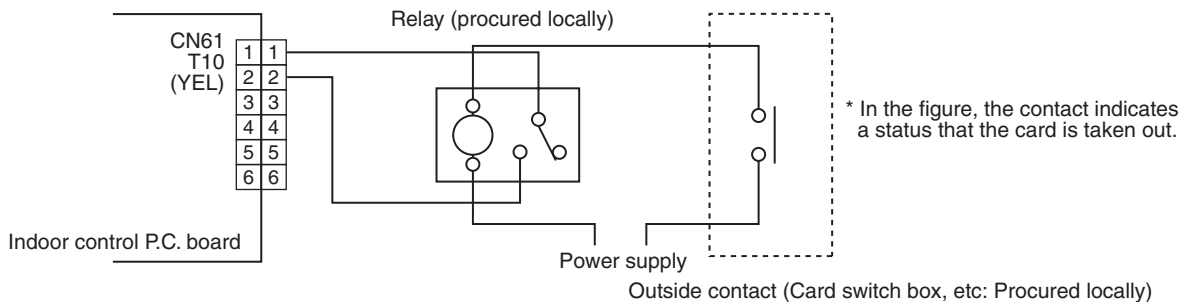

Note) Determine the cable length between the indoor control P.C. board and the relay within 2m.

▼ Power peak-cut from indoor unit

When the relay is turned on, a forced thermostat-OFF operation starts.

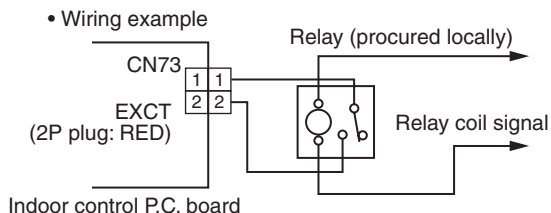


Note) Determine the cable length between the indoor or outdoor control P.C. board and the relay within 2m.

Manual address setting using the remote controller


Procedure when setting indoor units' addresses first under the condition that indoor wiring has been completed and outdoor wiring has not been started (manual setting using the remote controller)

▼ Wiring example of 2 refrigerant lines

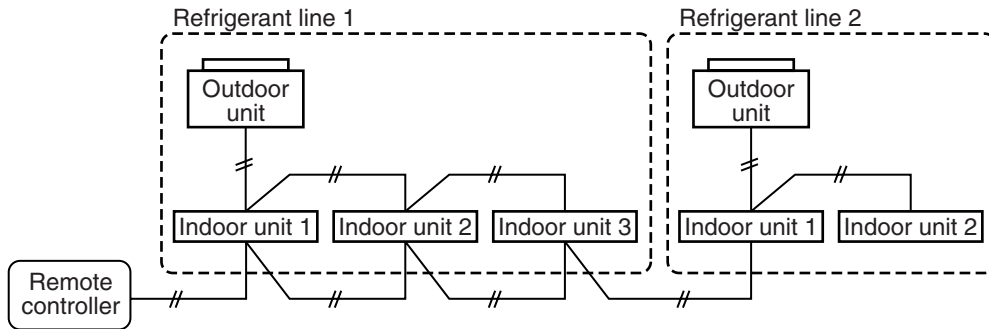

| | | | | | |
|-----------------------|------------------|--------------------|--------------------|--------------------|--------------------|
| Line (system) address | 1 | 1 | 1 | 2 | 2 |
| Indoor unit address | 1 | 2 | 3 | 1 | 2 |
| Group address | 1 Header unit | 2 Follower unit | 2 Follower unit | 2 Follower unit | 2 Follower unit |

In the example above, disconnect the remote controller connections between the indoor units and connect a wired remote controller to the target unit directly before address setting.

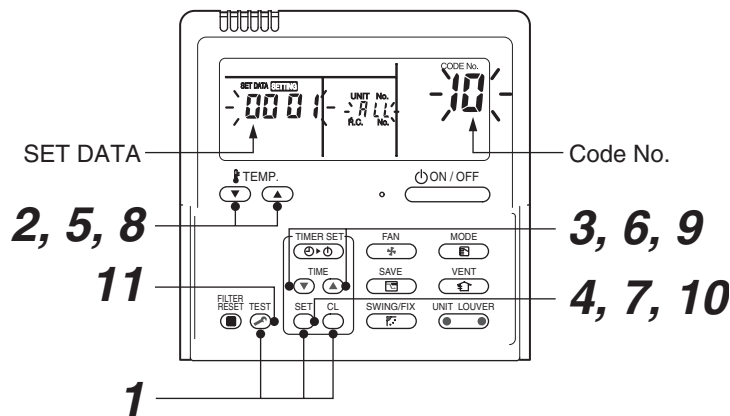

Pair the indoor unit to set and the remote controller one-to-one.

Turn on the power.

- 1 Push and hold the **SET**, **CL** and **TEST** buttons at the same time for more than 4 seconds. LCD starts flashing.







<Line (system) address>

- 2** Push the TEMP.  /  buttons repeatedly to set the CODE No. to **12**.
- 3** Push the TIME  /  buttons repeatedly to set a system address.
(Match the address with the address on the interface P.C. board of the header outdoor unit in the same refrigerant line.)
- 4** Push  button.
(It is OK if the display turns on.)

<Indoor unit address>

- 5** Push the TEMP.  /  buttons repeatedly to set the CODE No. to **13**.
- 6** Push the TIME  /  buttons repeatedly to set an indoor unit address.
- 7** Push the  button.
(It is OK if the display turns on.)

<Group address>

- 8** Push the TEMP.  /  buttons repeatedly to set the CODE No. to **14**.
- 9** Push the TIME  /  buttons repeatedly to set a group address. If the indoor unit is individual, set the address to **0000** ; header unit, **0001** ; follower unit, **0002** .
Individual : 0000
Header unit : 0001
Follower unit : 0002 } In case of group control
- 10** Push the  button.
(It is OK if the display turns on.)
- 11** Push the  button.
The address setting is complete.
(**SETTING** flashes. You can control the unit after **SETTING** has disappeared.)

NOTE


- 1. Do not use address numbers 29 or 30 when setting system addresses using the remote controller. These 2 address numbers cannot be used on outdoor units and the CODE No. [E04] (Indoor / outdoor communication error) will appear if they are mistakenly used.**
- 2. If you set addresses to indoor units in 2 or more refrigerate lines manually using the remote controller and will control them centrally, set the header outdoor unit of each line as below.**
 - Set a system address for the header outdoor unit of each line with SW13 and 14 of their interface P.C. boards.
 - Turn off dip switch 2 of SW30 on the interface P.C. boards of all the header outdoor units connected to the same central control, except the unit that has the lowest address. (For unifying the termination of the wiring for the central control of indoor and outdoor units)
 - Connect the relay connectors between the [U1, U2] and [U3, U4] terminals on the header outdoor unit of each refrigerate line.
 - After finishing all the settings above, set the address of the central control devices. (For the setting of the central control address, refer to the installation manuals of the central control devices.)

Confirming the indoor unit addresses and the position of an indoor unit using the remote controller

◆ Confirming the numbers and positions of indoor units


To see the indoor unit address of an indoor unit which you know the position of

- ▼ When the unit is individual (the indoor unit is paired with a wired remote controller one-to-one), or it is a group-controlled one.

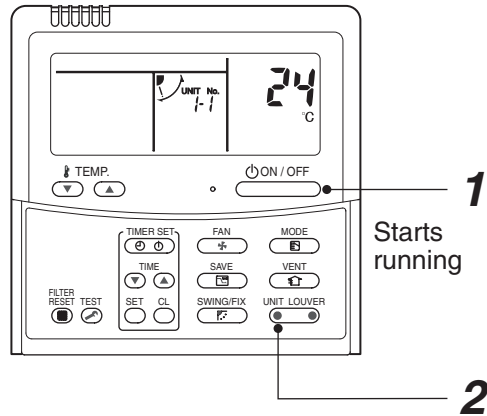

(Execute it while the units are running.)


- 1** Push the  button if the units stop.
- 2** Push the  button (left side of the button).

A unit numbers  is indicated on the LCD (it will disappear after a few seconds). The indicated number shows the system address and indoor unit address of the unit.

When 2 or more indoor units are connected to the remote controller (group-controlled units), a number of other connected units appears each time you push the  button (left side of the button).



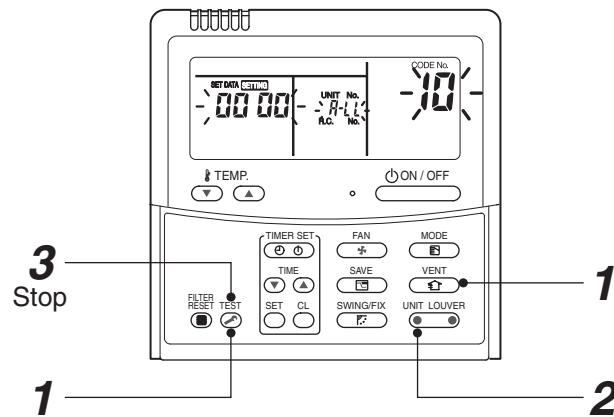

To find an indoor unit's position from its address

▼ When checking unit numbers controlled as a group




(Execute it while the units are stopped.)

The indoor unit numbers in a group are indicated one after another. The fan and louvers of the indicated units are activated.

- 1 Push and hold the  and  buttons at the same time for more than 4 seconds.**
 - **ALL** appears on UNIT No. on the LCD display.
 - The fans and louvers of all the indoor units in the group are activated.
- 2 Push the  button (left side of the button). Each time you push the button, the indoor unit numbers are indicated one after another.**
 - The first-indicated unit number is the address of the header unit.
 - Only the fan and louvers of the indicated indoor unit are activated.
- 3 Push the  button to finish the procedure.**

All the indoor units in the group stop.

- ▼ To check all the indoor unit addresses using an arbitrary wired remote controller.
(When communication wirings of 2 or more refrigerant lines are interconnected for central control)

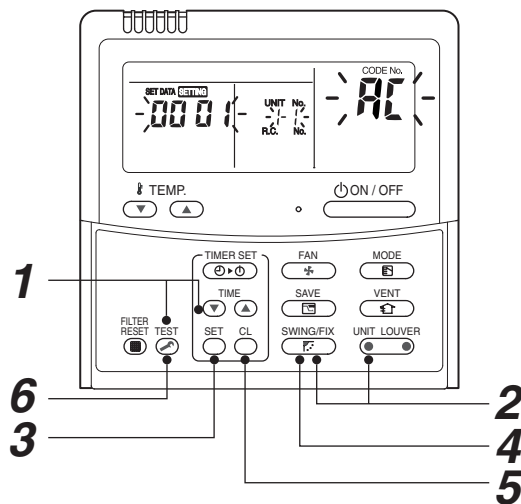

(Execute it while the units are stopped.)


You can check indoor unit addresses and positions of the indoor units in a single refrigerant line. When an outdoor unit is selected, the indoor unit numbers of the refrigerant line of the selected unit are indicated one after another and the fan and louvers of the indicated indoor units are activated.

- 1** Push and hold the **TIME** (▼) and **TEST** (🔄) buttons at the same time for more than 4 seconds. At first, the line 1 and CODE No. **RL** (Address Change) are indicated on the LCD display. (Select an outdoor unit.)
 - 2** Push the **UNIT LOUVER** (◀) button (left side of the button) and **SWING/FIX** (🔄) buttons repeatedly to select a system address.
 - 3** Push the **SET** (○) button to confirm the system address selection.
 - The address of an indoor unit connected to the selected refrigerant line is indicated on the LCD display and its fan and louvers are activated.
 - 4** Push the **UNIT LOUVER** (▶) button (right side of the button). Each time you push the button, the indoor unit numbers of the selected refrigerant line are indicated one after another.
 - Only the fan and louvers of the indicated indoor unit are activated.
- ◆ To select another system address
- 5** Push the **CL** (○) button to return to step 2.
 - After returning to step 2, select another system address and check the indoor unit addresses of the line.
 - 6** Push the **TEST** (🔄) button to finish the procedure.

◆ Changing the indoor unit address using a remote controller

To change an indoor unit address using a wired remote controller.

- ▼ The method to change the address of an individual indoor unit (the indoor unit is paired with a wired remote controller one-to-one), or an indoor unit in a group. (The method is available when the addresses have already been set automatically.)

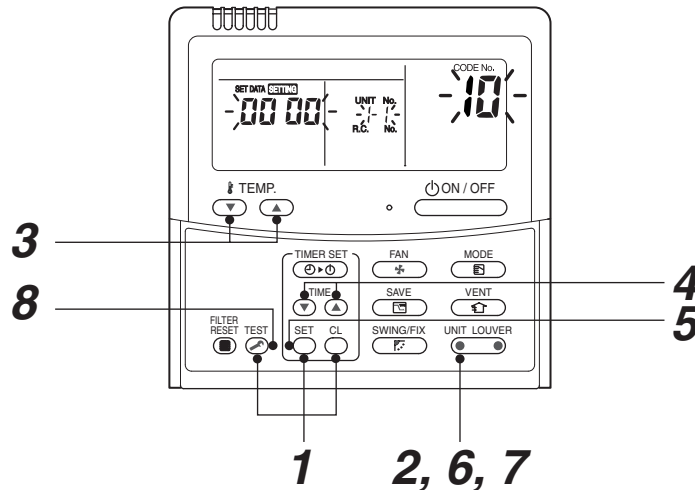

(Execute it while the units are stopped.)

- 1** Push and hold the , , and buttons at the same time for more than 4 seconds. (If 2 or more indoor units are controlled in a group, the first indicated UNIT No. is that of the head unit.)
- 2** Push the button (left side of the button) repeatedly to select an indoor unit number to change if 2 or more units are controlled in a group. (The fan and louvers of the selected indoor unit are activated.) (The fan of the selected indoor unit is turned on.)
- 3** Push the TEMP. / buttons repeatedly to select for CODE No.
- 4** Push the TIME / buttons repeatedly to change the value indicated in the SET DATA section to that you want.
- 5** Push the button.
- 6** Push the button (left side of the button) repeatedly to select another indoor UNIT No. to change. Repeat steps **4** to **6** to change the indoor unit addresses so as to make each of them unique.
- 7** Push the button (left side of the button) to check the changed addresses.
- 8** If the addresses have been changed correctly, push the button to finish the procedure.


- ▼ To change all the indoor unit addresses using an arbitrary wired remote controller. (The method is available when the addresses have already been set automatically.)

(When communication wirings of 2 or more refrigerant lines are interconnected for central control)

NOTE

You can change the addresses of indoor units in each refrigerant line using an arbitrary wired remote controller.

- * Enter the address check / change mode and change the addresses.

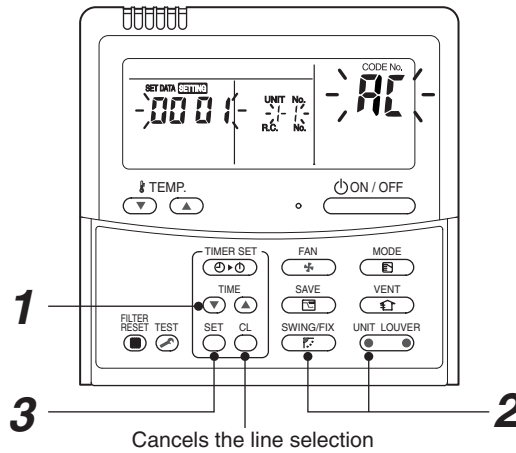


3 Cancels the line selection

If no number appears on UNIT No., no outdoor unit exists on the line. Push button and select another line following step 2.

(Execute it while the units are stopped.)

- 1 Push and hold the TIME (▼) / (▲) buttons at the same time for more than 4 seconds. At first, the line 1 and CODE No. AC (Address Change) are indicated on the LCD display.
- 2 Push the UNIT LOUVER button (left side of the button) and the SWING/FIX buttons repeatedly to select a system address.
- 3 Push the SET button.
 - The address of one of the indoor units connected to the selected refrigerant line is indicated on the LCD display and the fan and louvers of the unit are activated. At first, the current indoor unit address is displayed in SET DATA. (No system address is indicated.)

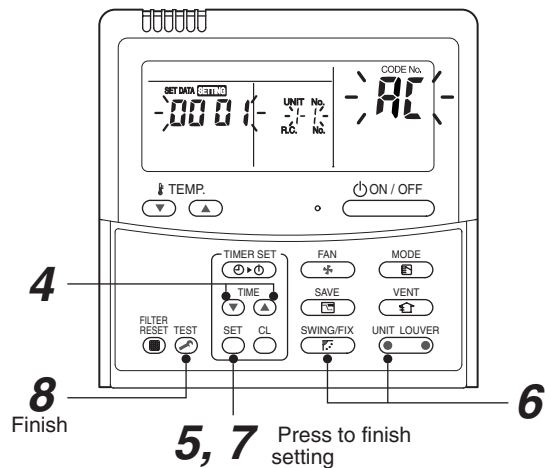

- 4** Push the TIME ∇ / \blacktriangle buttons repeatedly to change the value of the indoor unit address in SET DATA.
Change the value in SET DATA to that of a new address.
- 5** Push the $\overset{\text{SET}}{\text{O}}$ button to confirm the new address on SET DATA.
- 6** Push the $\overset{\text{UNIT LOUVER}}{\text{O}}$ button (left side of the button) repeatedly to select another address to change.
Each time you push the button, the indoor unit numbers in a refrigerant line are indicated one after another. Only the fan and louvers of the selected indoor unit are activated.
Repeat steps **4** to **6** to change the indoor unit addresses so as to make each of them unique.
- 7** Push the $\overset{\text{SET}}{\text{O}}$ button.
(All the segments on the LCD display light up.)
- 8** Push the $\overset{\text{TEST}}{\text{O}}$ button to finish the procedure.


◆ Error clearing function

How to clear the error using the wired remote controller

▼ Clearing an error of the outdoor unit

Clear the currently detected outdoor unit for each refrigerant line to which the indoor unit controlled by the remote controller is connected. (The indoor unit error is not cleared.)
Use the service monitoring function of the remote controller.

- 1 Push and hold the CL , and TEST for 4 seconds or longer to enter the service monitoring mode.
- 2 Push the TEMP. button to set CODE No. to "FF".
- 3 The display in A of the following figure counts down as follows at 5-second intervals:
"0005" → "0004" → "0003" → "0002" → "0001" → "0000".
The error is cleared when "0000" appears.
However, the display counts down from "0005" again.
- 4 Push the TEST to return the display to normal.

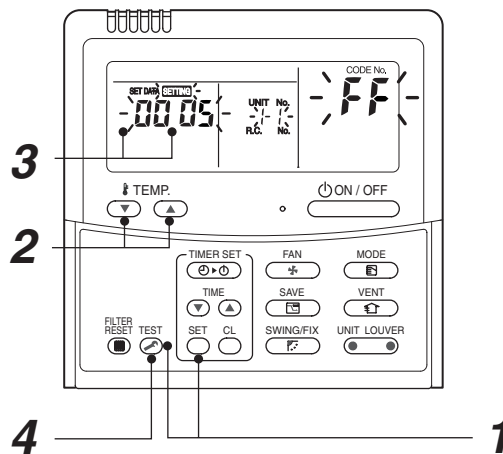


▼ Clearing an error of the indoor unit

Push the ON / OFF button on the remote controller.
(Only the error of the indoor unit controlled by the remote controller will be cleared.)



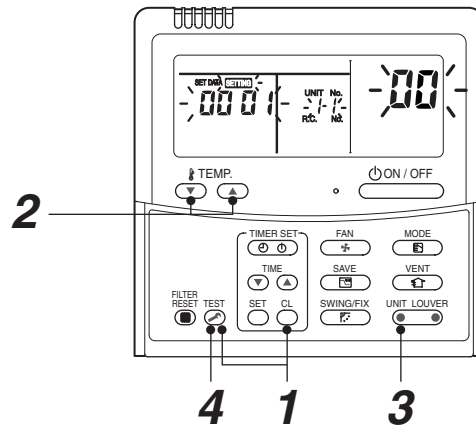


Monitoring function of wired remote controller

The following monitoring function is available if the remote controller of RBC-ATM32E is used.



▼ Content

Enter the service monitoring mode using the remote controller to check the sensor temperature or operation status of the remote controller, indoor unit, and outdoor unit.

- 1** Push and hold the , and  for 4 seconds or longer to enter the service monitoring mode.
The service monitor lights up. The temperature of CODE No. **00** appears at first.
- 2** Push the  button to change to CODE No. of the item to monitor. Refer to the following table for CODE No.
- 3** Push the left part of the  button (left side of the button) to change to the item to monitor. Monitor the sensor temperature or operation status of the indoor unit and outdoor unit in the refrigerant line
- 4** Push the  to return the display to normal.

◆ Target outdoor unit (SMMS, SHRM, Mini-SMMS – Series 1 – 2)

| | CODE No. | Data | Format | Unit | Remote controller display example |
|------------------|----------|---|--------|------|-----------------------------------|
| Indoor unit data | 00 | Room temperature (in control) *1 | ×1 | °C | [0024]=24 °C |
| | 01 | Room temperature (Remote controller) | ×1 | °C | |
| | 02 | Air Temperature (TA) | ×1 | °C | |
| | 03 | Coil Temperature (TCJ) | ×1 | °C | |
| | 04 | Coil Temperature (TC2) | ×1 | °C | |
| | 05 | Coil Temperature (TC1) | ×1 | °C | |
| | 08 | PMV | ×1 | pls | [0050]=500 pls |
| System unit data | 0A | Number of connected indoor units | ×1 | — | [0048]=48 |
| | 0B | Total horse power of connected indoor units | ×1 | HP | [0415]=41.5 HP |
| | 0C | Number of connected outdoor units | ×1 | — | [0004]=4 |
| | 0D | Total horse power of outdoor units | ×1 | HP | [0420]=42 HP |

| | CODE No. | | | | Data | Format | Unit | Remote controller display example |
|--------------------------------------|----------|----|----|----|---|--------|------|-----------------------------------|
| | U1 | U2 | U3 | U4 | | | | |
| Individual data 1 of outdoor unit *3 | 10 | 20 | 30 | 40 | Discharge temperature of compressor 1 (Td1) | ×1 | °C | [0024]=24 °C |
| | 11 | 21 | 31 | 41 | Discharge temperature of compressor 2 (Td2) | ×1 | °C | |
| | 12 | 22 | 32 | 42 | Detection pressure of high-pressure sensor (Pd) | ×1 | MPa | [0123]=1.23 MPa |
| | 13 | 23 | 33 | 43 | Detection pressure of low-pressure sensor (Ps) | ×1 | MPa | |
| | 14 | 24 | 34 | 44 | Suction Temperature (TS) | ×1 | °C | [0024]=24 °C |
| | 15 | 25 | 35 | 45 | Coil Temperature 1 (TE) | ×1 | °C | |
| | 16 | 26 | 36 | 46 | Liquid Temperature (TL) | ×1 | °C | |
| | 17 | 27 | 37 | 47 | Outdoor Temperature (TO) | ×1 | °C | |
| | 18 | 28 | 38 | 48 | Low-pressure saturation temperature (TU) | ×1 | °C | |
| | 19 | 29 | 39 | 49 | Current of compressor 1 (I1) | ×1 | A | [0135]=13.5 A |
| | 1A | 2A | 3A | 4A | Current of compressor 2 (I2) | ×1 | A | |
| | 1B | 2B | 3B | 4B | PMV1 + 2 | ×1 | pls | [0050]=500 pls |
| | 1C | 2C | 3C | 4C | PMV3 | ×1 | pls | [0050]=500 pls |
| | 1D | 2D | 3D | 4D | Compressor 1, 2 ON/OFF | *2 | — | |
| | 1E | 2E | 3E | 4E | Outdoor fan mode | ×1 | — | [0031]=Mode 31 |
| | 1F | 2F | 3F | 4F | Horse power of outdoor unit | ×1 | HP | [0016]=16HP |

*1 In the case of group connection, only the header indoor unit data can be displayed.

*2 01 ... Only compressor 1 is on

10 ... Only compressor 2 is on

11 ... Both compressor 1 and 2 are on

*3 The upper digit of CODE No. indicates the outdoor unit No.

U1 outdoor unit (Header unit)

U2 outdoor unit (follower unit 1)

U3 outdoor unit (follower unit 2)

U4 outdoor unit (follower unit 3)

◆ Target outdoor unit (SMMS-i – Series 4)

| | CODE No. | Data | Format | Unit | Remote controller display example |
|---------------------|----------|---|--------|------|-----------------------------------|
| Indoor unit data *2 | 00 | Room temperature (in control) | ×1 | °C | [0024]=24 °C |
| | 01 | Room temperature (Remote controller) | ×1 | °C | |
| | 02 | Air Temperature (TA) | ×1 | °C | |
| | 03 | Coil Temperature (TCJ) | ×1 | °C | |
| | 04 | Coil Temperature (TC2) | ×1 | °C | |
| | 05 | Coil Temperature (TC1) | ×1 | °C | |
| | 06 | Discharge temperature (TF) *1 | ×1 | °C | |
| | 08 | PMV | ×1/10 | pls | [0150]=1500 pls |
| | 09 | Air Suction Temperature of direct expansion coil (TSA) *1 | ×1 | °C | [0024]=24 °C |
| | FA | Outdoor Air Temperature (TOA) *1 | ×1 | °C | |
| System unit data | 0A | Number of connected indoor units | ×1 | — | [0048]=48 |
| | 0B | Total horse power of connected indoor units | ×10 | HP | [0415]=41.5HP |
| | 0C | Number of connected outdoor units | ×1 | — | [0004]=4 |
| | 0D | Total horse power of outdoor units | ×10 | HP | [0420]=42HP |

| | CODE No. | | | | Data | Format | Unit | Remote controller display example |
|--------------------------------------|----------|----|----|----|---|--------|------|-----------------------------------|
| | U1 | U2 | U3 | U4 | | | | |
| Individual data 1 of outdoor unit *3 | 10 | 20 | 30 | 40 | Detection pressure of high-pressure sensor (Pd) | ×100 | MPa | [0123]=1.23 MPa |
| | 11 | 21 | 31 | 41 | Detection pressure of low-pressure sensor (Ps) | ×100 | MPa | |
| | 12 | 22 | 32 | 42 | Discharge temperature of compressor 1 (Td1) | ×1 | °C | [0024]=24 °C |
| | 13 | 23 | 33 | 43 | Discharge temperature of compressor 2 (Td2) | ×1 | °C | |
| | 14 | 24 | 34 | — | Discharge temperature of compressor 3 (Td3) | ×1 | °C | |
| | 15 | 25 | 35 | 45 | Suction Temperature (TS) | ×1 | °C | |
| | 16 | 26 | 36 | 46 | Coil Temperature 1 (TE1) | ×1 | °C | |
| | 17 | 27 | 37 | — | Coil Temperature 2 (TE2) | ×1 | °C | |
| | 18 | 28 | 38 | 48 | Liquid Temperature (TL) | ×1 | °C | |
| | 19 | 29 | 39 | 49 | Outdoor Temperature (TO) | ×1 | °C | [0050]=500 pls |
| | 1A | 2A | 3A | 4A | PMV1 + 2 | ×1 | pls | |
| | 1B | 2B | 3B | — | PMV4 | ×1 | pls | [0135]=13.5 A |
| | 1C | 2C | 3C | 4C | Current of compressor 1 (I1) | ×10 | A | |
| | 1D | 2D | 3D | 4D | Current of compressor 2 (I2) | ×10 | A | |
| | 1E | 2E | 3E | — | Current of compressor 3 (I3) | ×10 | A | |
| | 1F | 2F | 3F | 4F | Outdoor fan current (IFan) | ×10 | A | |

- *1 The TF/TSA/TOA sensors are equipped only with some types of indoor units. The data does not appear for other types.
- *2 In the case of group connection, only the header indoor unit data can be displayed.
- *3 The upper digit of CODE No. indicates the outdoor unit No.
- *4 [(The upper digit of CODE No.) – 4] indicates the outdoor unit No.
 1*, 5* ... U1 outdoor unit (Header unit)
 2*, 6* ... U2 outdoor unit (follower unit 1)
 3*, 7* ... U3 outdoor unit (follower unit 2)
 4*, 8* ... U4 outdoor unit (follower unit 3)
- *5 Only CODE No. 5• of U1 outdoor unit (Header unit) is displayed.

| | CODE No. | | | | Data | Format | Unit | Remote controller display example |
|--------------------------------------|----------|----|----|----|--|---------------------------------------|------|---|
| | U1 | U2 | U3 | U4 | | | | |
| Individual data 2 of outdoor unit *4 | 50 | 60 | 70 | 80 | Rotation of compressor 1 | ×10 | rps | [0642]=64.2 rps |
| | 51 | 61 | 71 | 81 | Rotation of compressor 2 | ×10 | rps | |
| | 52 | 62 | 72 | — | Rotation of compressor 3 | ×10 | rps | |
| | 53 | 63 | 73 | 83 | Outdoor fan mode | ×1 | Mode | [0058]=Mode 58 |
| | 54 | 64 | 74 | 84 | Heat sink temperature of compressor IPDU1 | ×1 | °C | [0024]=24 °C |
| | 55 | 65 | 75 | 85 | Heat sink temperature of compressor IPDU2 | ×1 | °C | |
| | 56 | 66 | 76 | — | Heat sink temperature of compressor IPDU3 | ×1 | °C | |
| | 57 | 67 | 77 | 87 | Heat sink temperature of outdoor fan IPDU | ×1 | °C | |
| | 58 | — | — | — | In heat/cool collecting control *5 | 0: Normal 1: In collecting control | | [0010] = In heat collecting control [0001] = In cool collecting control |
| | 59 | — | — | — | Pressure release *5 | 0: Normal 1: In release control | | [0010] = In pressure release control |
| | 5A | — | — | — | Discharge temperature release *5 | | | [0001] = In discharge temperature release control |
| | 5B | — | — | — | Terminal unit release (U2 / U3 / U4 outdoor unit) *5 | | | [0100] = In U2 outdoor unit release control [0010] = In U3 outdoor unit release control [0001] = In U4 outdoor unit release control |
| | 5F | 6F | 7F | 8F | Horse power of outdoor unit | ×1 | HP | [0016]=16HP |

- *1 The TF / TSA / TOA sensors are equipped only with some types of indoor units. The data does not appear for other types.
- *2 In the case of group connection, only the header indoor unit data can be displayed.
- *3 The upper digit of CODE No. indicates the outdoor unit No.
- *4 [(The upper digit of CODE No.) – 4] indicates the outdoor unit No.
 1*, 5* ... U1 outdoor unit (Center unit)
 2*, 6* ... U2 outdoor unit (terminal unit 1)
 3*, 7* ... U3 outdoor unit (terminal unit 2)
 4*, 8* ... U4 outdoor unit (terminal unit 3)
- *5 Only CODE No. 5* of U1 outdoor unit (Center unit) is displayed.

◆ LED display of circuit board

1. D501 (Red)

- Lights up when the power is turned on (Microcomputer works)
- Blinks at 1-second intervals (0.5-second): No EEPROM, or writing error
- Blinks at 10-second intervals (5-second): No DISP mode
- Blinks at 2-second intervals (1-second): Function change being set (EEPROM)

2. D403 (Red)

- Lights up (on hardware) when the power is supplied to the remote controller

9. TROUBLESHOOTING

9-1. Overview

(1) Before engaging in troubleshooting

(a) Applicable models

All Super Module Multi (SMMS, SHRM, Mini-SMMS, SMMS-i) models.

(Indoor units: MMO-APOOO, Outdoor units: MMY-MAPOOOO*, MCY-MAPOOOHT*)

(b) Tools and measuring devices required


- Screwdrivers (Philips, flat head), spanners, long-nose pliers, nipper, pin to push reset switch, etc.
- Multimeter, thermometer, pressure gauge, etc.

(c) Things to check prior to troubleshooting (behaviors listed below are normal)

| NO. | Behavior | Possible cause |
|-----|--|--|
| 1 | A compressor would not start | <ul style="list-style-type: none"> • Could it just be the 3-minute delay period (3 minutes after compressor shutdown)? • Could it just be the air conditioner having gone thermo OFF? • Could it just be the air conditioner operating in fan mode or put on the timer? • Could it just be the system going through initial communication? |
| 2 | An indoor fan would not start | <ul style="list-style-type: none"> • Could it just be cold air discharge prevention control, which is part of heating? |
| 3 | An outdoor fan would not start or would change speed for no reason | <ul style="list-style-type: none"> • Could it just be cooling operation under low outside temperature conditions? • Could it just be defrosting operation? |
| 4 | An indoor fan would not stop | <ul style="list-style-type: none"> • Could it just be the elimination of residual heat being performed as part of the air conditioner shutdown process after heating operation? |
| 5 | The air conditioner would not respond to a start / stop command from a remote controller | <ul style="list-style-type: none"> • Could it just be the air conditioner operation under external or remote controller? |

(2) Troubleshooting procedure

When a fault occurs, proceed with troubleshooting in accordance with the procedure shown below.

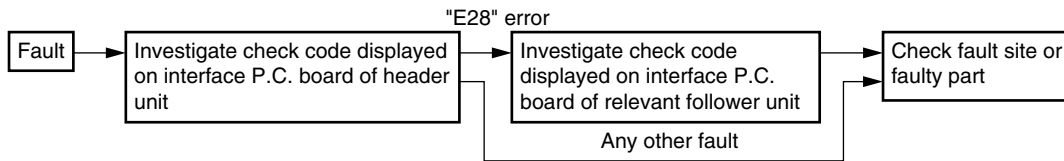

NOTE

Rather than a genuine fault (see the List of Check Codes below), the problem could have been caused by a microprocessor malfunction attributable to a poor quality of the power source or an external noise. Check for possible noise sources, and shield the remote controller wiring and signal wires as necessary.

9-2. Troubleshooting method

The remote controllers (main remote controller and central control remote controller) and the interface P.C. board of an outdoor unit are provided with an LCD display (remote controller) or a 7-segment display (outdoor interface P.C. board) to display operational status. Using this self-diagnosis feature, the fault site / faulty part may be identified in the event of a fault by following the method described below.

The list below summarizes check codes detected by various devices. Analyze the check code according to where it is displayed and work out the nature of the fault in consultation with the list.

- When investigating a fault on the basis of a display provided on the indoor remote controller or TCC-LINK central control remote controller - See the “TCC-LINK remote controller or main remote controller display” section of the list.
- When investigating a fault on the basis of a display provided on an outdoor unit - See the “Outdoor 7-segment display” section of the list.
- When investigating a fault on the basis of a wireless remote controller-controlled indoor unit - See the “Light sensor indicator light block” section of the list.

List of check codes (indoor unit)

(Error detected by indoor unit)

IPDU: Intelligent Power Drive Unit (Inverter P.C. board)

○: Lighting, ⊙: Flashing, ●: Goes off

ALT.: Flashing is alternately when there are two flashing LED

SIM: Simultaneous flashing when there are two flashing LED

| Check code | | | Display of receiving unit | | | | Typical fault site | Description of error |
|--|---------------------------|---------------------------|---------------------------|------------|------------|-------|---|---|
| TCC-LINK central control or main remote controller display | Outdoor 7-segment display | | Indicator light block | | | | | |
| | | Sub-code | Operation ⏻ | Timer ⌚ | Ready ⊙ | Flash | | |
| E03 | — | — | ⊙ | ● | ● | | Indoor-remote controller periodic communication error | Communication from remote controller or network adaptor has been lost (so has central control communication). |
| E04 | — | — | ● | ● | ⊙ | | Indoor-outdoor periodic communication error | Signals are not being received from outdoor unit. |
| E08 | E08 | Duplicated indoor address | ⊙ | ● | ● | | Duplicated indoor address | Indoor unit detects address identical to its own. |
| E10 | — | — | ⊙ | ● | ● | | Indoor inter-MCU communication error | MCU communication between main controller and motor microcontroller is faulty. |
| E18 | — | — | ⊙ | ● | ● | | Error in periodic communication between indoor header and follower unit | Periodic communication between indoor header and follower units cannot be maintained. |
| F01 | — | — | ⊙ | ⊙ | ● | ALT | Indoor heat exchanger temperature sensor (TCJ) error | Heat exchanger temperature sensor (TCJ) has been open / shortcircuited. |
| F02 | — | — | ⊙ | ⊙ | ● | ALT | Indoor heat exchanger temperature sensor (TC2) error | Heat exchanger temperature sensor (TC2) has been open / shortcircuited. |
| F03 | — | — | ⊙ | ⊙ | ● | ALT | Indoor heat exchanger temperature sensor (TC1) error | Heat exchanger temperature sensor (TC1) has been open / shortcircuited. |
| F10 | — | — | ⊙ | ⊙ | ● | ALT | Ambient temperature sensor (TA) error | Ambient temperature sensor (TA) has been open / short-circuited. |
| F11 | — | — | ⊙ | ⊙ | ● | ALT | Discharge temperature sensor (TF) error | Discharge temperature sensor (TF) has been open / shortcircuited. |
| F29 | — | — | ⊙ | ⊙ | ● | SIM | P.C. board or other indoor error | Indoor EEPROM is abnormal (some other error may be detected). |
| L03 | — | — | ⊙ | ● | ⊙ | SIM | Duplicated indoor group header unit | There is more than one header unit in group. |
| L07 | — | — | ⊙ | ● | ⊙ | SIM | Connection of group control cable to stand-alone indoor unit | There is at least one stand-alone indoor unit to which group control cable is connected. |
| L08 | L08 | — | ⊙ | ● | ⊙ | SIM | Indoor group address not set | Address setting has not been performed for one or more indoor units (also detected at outdoor unit end). |
| L09 | — | — | ⊙ | ● | ⊙ | SIM | Indoor capacity not set | Capacity setting has not been performed for indoor unit. |
| L20 | — | — | ⊙ | ○ | ⊙ | SIM | Duplicated central control address | There is duplication in central control address setting. |
| L30 | L30 | Detected indoor unit No. | ⊙ | ○ | ⊙ | SIM | Indoor external error input (interlock) | Unit shutdown has been caused by external error input (CN80). |
| P01 | — | — | ● | ⊙ | ⊙ | ALT | Indoor AC fan error | Indoor AC fan error is detected (activation of fan motor thermal relay). |
| P10 | P10 | Detected indoor unit No. | ● | ⊙ | ⊙ | ALT | Indoor overflow error | Float switch has been activated. |
| P12 | — | — | ● | ⊙ | ⊙ | ALT | Indoor DC fan error | Indoor DC fan error (e.g. overcurrent or lock-up) is detected. |
| P31 | — | — | ⊙ | ● | ⊙ | ALT | Other indoor unit error | Follower unit cannot be operated due to header unit alarm (E03 / L03 / L07 / L08). |

(Error detected by main remote controller)

| Check code | | Display of receiving unit | | Typical fault site | Description of error |
|------------------------|---------------------------|---------------------------|------------------|---|---|
| Main remote controller | Outdoor 7-segment display | Indicator light block | | | |
| | Sub-code | Operation ⏻ | Timer Ready ⏻ | | |
| E01 | — | — | ⊙ ● ● | No master remote controller, faulty remote controller communication (reception) | Signals cannot be received from indoor unit; master remote controller has not been set (including two remote controller control). |
| E02 | — | — | ⊙ ● ● | Faulty remote controller communication (transmission) | Signals cannot be transmitted to indoor unit. |
| E02 | — | — | ⊙ ● ● | Duplicated master remote controller | Both remote controllers have been set as master remote controller in two remote controller control (alarm and shutdown for header unit and continued operation for follower unit) |

(Error detected by central control device)

| Check code | | Display of receiving unit | | Typical fault site | Description of error |
|--------------------------|---------------------------|---------------------------|---|--|--|
| TCC-LINK central control | Outdoor 7-segment display | Indicator light block | | | |
| | Sub-code | Operation ⏻ | Timer Ready ⏻ | | |
| C05 | — | — | No indication (when main remote controller also in use) | Faulty central control communication (transmission) | Central control device is unable to transmit signal due to duplication of central control device (AI-NET). |
| C06 | — | — | | Faulty central control communication (reception) | Central control device is unable to receive signal. |
| — | — | — | | Multiple network adapters | Multiple network adapters are connected to remote controller communication line (AI-NET). |
| C12 | — | — | — | Blanket alarm for general-purpose device control interface | Device connected to general-purpose device control interface for TCC-LINK / AI-NET is faulty. |
| P30 | — | — | As per alarm unit (see above) | Group control follower unit error | Group follower unit is faulty (unit No. and above detail [***] displayed on main remote controller) |

Note: The same error, e.g. a communication error, may result in the display of different check codes depending on the device that detects it. Moreover, check codes detected by the main remote controller / central control device do not necessarily have a direct impact on air conditioner operation.

List of check codes (outdoor unit)

(Errors detected by SMMS outdoor interface - typical examples)

IPDU: Intelligent Power Drive Unit (Inverter P.C. board)

○ :Lighting, ⊙ : Flashing, ● : Goes off

ALT.: Flashing is alternately when there are two flashing LED

SIM: Simultaneous flashing when there are two flashing LED

| Check code | | Display of receiving unit | | | | Typical fault site | Description of error | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---------------------------|--|--|-----------------------|----------------------------|--------------|--------------------|---|--|----|---|--|--|----|---|---|----|---|--|--|----|---|---|----|---|---|--|----|--|---|----|--|---|--|----|---|---|----|---|---|--|----|---|---|----|---|---|--|----|---|---|----|---|---|---|----------------------------|--|--|----|--|--|---|--|--|--|----|---|--|---|--|--|--|-----|---|---|---|--|--------------------------|--|
| Outdoor 7-segment display | | TCC-LINK central control or main remote controller display | Indicator light block | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Sub-code | | | Operation (⏸) | Timer (⌚) | Ready (⊙) | Flash | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E06 | Number of indoor units from which signal is received normally | E06 | ● | ● | ⊙ | | Dropping out of indoor unit | Indoor unit initially communicating normally fails to return signal (reduction in number of indoor units connected). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E07 | – | (E04) | ● | ● | ⊙ | | Indoor-outdoor communication circuit error | Signal cannot be transmitted to indoor units (→ indoor units left without communication from outdoor unit). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E08 | Duplicated indoor address | (E08) | ⊙ | ● | ● | | Duplicated indoor address | More than one indoor unit is assigned same address (also detected at indoor unit end). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E12 | 01: Indoor-outdoor communication 02: Outdoor-outdoor communication | E12 | ⊙ | ● | ● | | Automatic address starting error | <ul style="list-style-type: none"> Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress. Outdoor automatic address setting is started while automatic address setting for indoor units is in progress. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E15 | – | E15 | ● | ● | ⊙ | | Indoor unit not found during automatic address setting | Indoor unit fails to communicate while automatic address setting for indoor units is in progress. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E16 | 00: Overloading 01: Number of units connected | E16 | ● | ● | ⊙ | | Too many indoor units connected / overloading | Combined capacity of indoor units is too large (more than 135 % of combined capacity of outdoor units). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E19 | 00: No header unit 02: Two or more header units | E19 | ● | ● | ⊙ | | Error in number of outdoor header units | There is no or more than one outdoor header unit in one refrigerant line. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E20 | 01: Connection of outdoor unit from other refrigerant line 02: Connection of indoor unit from other refrigerant line | E20 | ● | ● | ⊙ | | Connection to other refrigerant line found during automatic address setting | Indoor unit from other refrigerant line is detected while indoor automatic address setting is in progress. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E23 | – | E23 | ● | ● | ⊙ | | Outdoor-outdoor communication transmission error | Signal cannot be transmitted to other outdoor units. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E25 | – | E25 | ● | ● | ⊙ | | Duplicated follower outdoor address | There is duplication in outdoor addresses set manually. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E26 | Address of outdoor unit from which signal is not received normally | E26 | ● | ● | ⊙ | | Dropping out of outdoor unit | Follower outdoor unit initially communicating normally fails to do so (reduction in number of follower outdoor units connected). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E28 | Detected outdoor unit No. | E28 | ● | ● | ⊙ | | Outdoor follower unit error | Outdoor header unit detects fault relating to follower outdoor unit (detail displayed on follower outdoor unit). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E31 | <table border="1"> <thead> <tr> <th></th> <th>A3-IPDU 1</th> <th>Fan 2</th> <th>IPDU 3</th> <th>A3-IPDU 1</th> <th>Fan 2</th> <th>IPDU 3</th> </tr> </thead> <tbody> <tr> <td>01</td> <td>○</td> <td></td> <td></td> <td>0A</td> <td>○</td> <td>○</td> </tr> <tr> <td>02</td> <td>○</td> <td></td> <td></td> <td>0B</td> <td>○</td> <td>○</td> </tr> <tr> <td>03</td> <td>○</td> <td>○</td> <td></td> <td>0C</td> <td></td> <td>○</td> </tr> <tr> <td>04</td> <td></td> <td>○</td> <td></td> <td>0D</td> <td>○</td> <td>○</td> </tr> <tr> <td>05</td> <td>○</td> <td>○</td> <td></td> <td>0E</td> <td>○</td> <td>○</td> </tr> <tr> <td>06</td> <td>○</td> <td>○</td> <td></td> <td>0F</td> <td>○</td> <td>○</td> </tr> <tr> <td>07</td> <td>○</td> <td>○</td> <td>○</td> <td colspan="3">Circle (O): Faulty IPDU</td> </tr> <tr> <td>08</td> <td></td> <td></td> <td>○</td> <td colspan="3"></td> </tr> <tr> <td>09</td> <td>○</td> <td></td> <td>○</td> <td colspan="3"></td> </tr> </tbody> </table> | | A3-IPDU 1 | Fan 2 | IPDU 3 | A3-IPDU 1 | Fan 2 | IPDU 3 | 01 | ○ | | | 0A | ○ | ○ | 02 | ○ | | | 0B | ○ | ○ | 03 | ○ | ○ | | 0C | | ○ | 04 | | ○ | | 0D | ○ | ○ | 05 | ○ | ○ | | 0E | ○ | ○ | 06 | ○ | ○ | | 0F | ○ | ○ | 07 | ○ | ○ | ○ | Circle (O): Faulty IPDU | | | 08 | | | ○ | | | | 09 | ○ | | ○ | | | | E31 | ● | ● | ⊙ | | IPDU communication error | There is no communication between IPDUs (P.C. boards) in inverter box. |
| | A3-IPDU 1 | Fan 2 | IPDU 3 | A3-IPDU 1 | Fan 2 | IPDU 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 01 | ○ | | | 0A | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 02 | ○ | | | 0B | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 03 | ○ | ○ | | 0C | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 04 | | ○ | | 0D | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 05 | ○ | ○ | | 0E | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 06 | ○ | ○ | | 0F | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 07 | ○ | ○ | ○ | Circle (O): Faulty IPDU | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 08 | | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 09 | ○ | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F04 | – | F04 | ⊙ | ⊙ | ○ | ALT | Outdoor discharge temperature sensor (TD1) error | Outdoor discharge temperature sensor (TD1) has been open / short-circuited. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F05 | – | F05 | ⊙ | ⊙ | ○ | ALT | Outdoor discharge temperature sensor (TD2) error | Outdoor discharge temperature sensor (TD2) has been open / short-circuited. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F06 | 01: TE1 02: TE2 | F06 | ⊙ | ⊙ | ○ | ALT | Outdoor heat exchanger temperature sensor (TE1, TE2) error | Outdoor heat exchanger temperature sensors (TE1, TE2) have been open / short-circuited. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F07 | – | F07 | ⊙ | ⊙ | ○ | ALT | Outdoor liquid temperature sensor (TL) error | Outdoor liquid temperature sensor (TL) has been open / short-circuited. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F08 | – | F08 | ⊙ | ⊙ | ○ | ALT | Outdoor outside air temperature sensor (TO) error | Outdoor outside air temperature sensor (TO) has been open / short-circuited. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F11 | – | F11 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Check code | | Display of receiving unit | | | | Typical fault site | Description of error | |
|---------------------------|---|--|-----------------------|-----------|-----------|--------------------|---|---|
| Outdoor 7-segment display | | TCC-LINK central control or main remote controller display | Indicator light block | | | | | |
| Sub-code | | | Operation | Timer | Ready | Flash | | |
| F12 | – | F12 | | | | ALT | Outdoor suction temperature sensor (TS1) error | Outdoor suction temperature sensor (TS1) has been open / short-circuited. |
| F13 | 01: Compressor 1 02: Compressor 2 03: Compressor 3 | F13 | | | | ALT | Outdoor IGBT built-in temperature sensor (TH) error | Open-circuit or short-circuit of the outdoor IGBT built-in temperature sensor (TH) was detected. |
| F15 | – | F15 | | | | ALT | Outdoor temperature sensor (TE1, TL) wiring error | Wiring error in outdoor temperature sensors (TE1, TL) has been detected. |
| F16 | – | F16 | | | | ALT | Outdoor pressure sensor (Pd, Ps) wiring error | Wiring error in outdoor pressure sensors (Pd, Ps) has been detected. |
| F22 | – | F22 | | | | ALT | Outdoor discharge temperature sensor (TD3) error | Outdoor discharge temperature sensor (TD3) has been open / short-circuited. |
| F23 | – | F23 | | | | ALT | Low pressure sensor (Ps) error | Output voltage of low pressure sensor (Ps) is zero. |
| F24 | – | F24 | | | | ALT | High pressure sensor (Pd) error | Output voltage of high pressure sensor (Pd) is zero or provides abnormal readings when compressors have been turned off. |
| F31 | – | F31 | | | | SIM | Outdoor EEPROM error | Outdoor EEPROM is faulty (alarm and shutdown for header unit and continued operation for follower unit) |
| H01 | 01: Compressor 1 02: Compressor 2 03: Compressor 3 | H01 | | | | | Compressor breakdown | Overcurrent of the inverter current (Idc) detection circuit was detected. |
| H02 | 01: Compressor 1 02: Compressor 2 03: Compressor 3 | H02 | | | | | Compressor error (Lock) | Compressor lock was detected. |
| H03 | 01: Compressor 1 02: Compressor 2 03: Compressor 3 | H03 | | | | | Current detection circuit error | Current error was detected while the compressor was stopped. |
| H04 | | H05 | | | | | Compressor 1 case thermo activation | Compressor 1 case thermo was activated for protection. |
| H05 | – | H05 | | | | | Outdoor discharge temperature sensor (TD1) wiring error | Wiring / installation error or detachment of outdoor discharge temperature sensor (TD1) has been detected. |
| H06 | – | H06 | | | | | Activation of low-pressure protection | Low pressure (Ps) sensor detects abnormally low operating pressure. |
| H07 | – | H07 | | | | | Activation of low-pressure protection | Temperature sensor for oil level detection (TK1-5) detects abnormally low oil level. |
| H08 | 01: TK1 sensor error 02: TK2 sensor error 03: TK3 sensor error 04: TK4 sensor error 05: TK5 sensor error | H08 | | | | | Error in temperature sensor for oil level detection (TK1-5) | Temperature sensor for oil level detection (TK1-5) has been open / short-circuited. |
| H14 | – | H14 | | | | | Compressor 2 case thermo activation | Compressor 2 case thermo was activated for protection. |
| H15 | – | H15 | | | | | Outdoor discharge temperature sensor (TD2) wiring error | Wiring / installation error or detachment of outdoor discharge temperature sensor (TD2) has been detected. |
| H16 | 01: TK1 oil circuit error 02: TK2 oil circuit error 03: TK3 oil circuit error 04: TK4 oil circuit error 05: TK5 oil circuit error | H16 | | | | | Oil level detection circuit error | No temperature change is detected by temperature sensor for oil level detection (TK1-5) despite compressor having been started. |
| H25 | – | H25 | | | | | Outdoor discharge temperature sensor (TD3) wiring error | Wiring / installation error or detachment of outdoor discharge temperature sensor (TD3) has been detected. |
| L04 | – | L04 | | | | SIM | Duplicated outdoor refrigerant line address | Identical refrigerant line address has been assigned to outdoor units belonging to different refrigerant piping systems. |
| L06 | Number of priority indoor units (check code L05 or L06 depending on individual unit) | L05 | | | | SIM | Duplicated priority indoor unit (as displayed on priority indoor unit) | More than one indoor unit has been set up as priority indoor unit. |
| | | L06 | | | | SIM | Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit) | More than one indoor unit has been set up as priority indoor unit. |

| Check code | | | Display of receiving unit | | | | Typical fault site | Description of error | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---------------------------|---|--|---------------------------|-----------|----------------------------|----------|---|--|--|----------|---|---|---|---|---|---|----|--|--|--|--|----|--|--|--|----|--|--|--|--|----|--|--|--|----|--|--|--|--|----|--|--|--|----|--|--|--|--|----|--|--|--|----|--|--|--|--|----|--|--|--|----|--|--|--|--|----|--|--|--|----|--|--|--|--|----------------------------|--|--|----|--|--|--|--|--|--|--|----|--|--|--|--|--|--|--|--|--|--|--|--|--|
| Outdoor 7-segment display | | TCC-LINK central control or main remote controller display | Indicator light block | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Sub-code | | | | Operation | Timer | Ready | Flash | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L08 | — | (L08) | | | | SIM | SIM Indoor group address not set | Address setting has not been performed for one or more indoor units (also detected at indoor end). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L10 | — | L10 | | | | SIM | Outdoor capacity not set | Outdoor unit capacity has not been set (after P.C. board replacement). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L17 | — | L17 | | | | SIM | Outdoor model incompatibility error | Old model outdoor unit (prior to 3 series) has been connected. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L18 | — | L18 | | | | SIM | FS (Flow Selector) unit error | Cooling / heating cycle error resulting from piping error is detected. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L28 | | L28 | | | | SIM | Too many outdoor units connected | More than four outdoor units have been connected. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L29 | SMMS (Series 1) 01: A3-IPDU1 error 02: A3-IPDU2 error 03: A3-IPDU1/A3-IPDU2 error 04: Fan IPDU error 05: A3-IPDU1 + Fan IPDU error 06: A3-IPDU2 + Fan IPDU error 07: All IPDU error SMMS-i (Series 4) | L29 | | | | SIM | Error in number of IPDUs | There are insufficient number of IPDUs (P.C. boards) in inverter box. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | <table border="1"> <thead> <tr> <th rowspan="2"></th> <th colspan="3">A3-IPDU</th> <th rowspan="2">Fan IPDU</th> <th colspan="3">A3-IPDU</th> <th rowspan="2">Fan IPDU</th> </tr> <tr> <th>1</th> <th>2</th> <th>3</th> <th>1</th> <th>2</th> <th>3</th> </tr> </thead> <tbody> <tr> <td>01</td> <td></td> <td></td> <td></td> <td></td> <td>0A</td> <td></td> <td></td> <td></td> </tr> <tr> <td>02</td> <td></td> <td></td> <td></td> <td></td> <td>0B</td> <td></td> <td></td> <td></td> </tr> <tr> <td>03</td> <td></td> <td></td> <td></td> <td></td> <td>0C</td> <td></td> <td></td> <td></td> </tr> <tr> <td>04</td> <td></td> <td></td> <td></td> <td></td> <td>0D</td> <td></td> <td></td> <td></td> </tr> <tr> <td>05</td> <td></td> <td></td> <td></td> <td></td> <td>0E</td> <td></td> <td></td> <td></td> </tr> <tr> <td>06</td> <td></td> <td></td> <td></td> <td></td> <td>0F</td> <td></td> <td></td> <td></td> </tr> <tr> <td>07</td> <td></td> <td></td> <td></td> <td></td> <td colspan="3">Circle (O): Faulty IPDU</td> </tr> <tr> <td>08</td> <td></td> <td></td> <td></td> <td></td> <td colspan="3"></td> </tr> <tr> <td>09</td> <td></td> <td></td> <td></td> <td></td> <td colspan="3"></td> </tr> </tbody> </table> | | A3-IPDU | | | Fan IPDU | A3-IPDU | | | Fan IPDU | 1 | 2 | 3 | 1 | 2 | 3 | 01 | | | | | 0A | | | | 02 | | | | | 0B | | | | 03 | | | | | 0C | | | | 04 | | | | | 0D | | | | 05 | | | | | 0E | | | | 06 | | | | | 0F | | | | 07 | | | | | Circle (O): Faulty IPDU | | | 08 | | | | | | | | 09 | | | | | | | | | | | | | |
| | A3-IPDU | | | Fan IPDU | A3-IPDU | | | Fan IPDU | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 1 | 2 | 3 | | 1 | 2 | 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 01 | | | | | 0A | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 02 | | | | | 0B | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 03 | | | | | 0C | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 04 | | | | | 0D | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 05 | | | | | 0E | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 06 | | | | | 0F | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 07 | | | | | Circle (O): Faulty IPDU | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 08 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 09 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L30 | Detected indoor unit No. | (L30) | | | | SIM | Indoor external error input (interlock) | Indoor unit has been shut down for external error input in one refrigerant line (detected by indoor unit). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P03 | — | | | | | ALT | Outdoor discharge (TD1) temperature error | Outdoor discharge temperature sensor (TD1) has detected abnormally high temperature. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P04 | P0301: Compressor 1 02: Compressor 2 03: Compressor 3 | P04 | | | | ALT | High-pressure SW activation | High-pressure SW was activated. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P05 | 00: Open phase detected 01: Compressor 1 02: Compressor 2 03: Compressor 3 | P05 | | | | ALT | Open phase / power failure Inverter DC voltage (Vdc) error MG-CTT error | Open phase is detected when power is turned on. Inverter DC voltage is too high (overvoltage) or too low (undervoltage). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P07 | 01: Compressor 1 02: Compressor 2 03: Compressor 3 | P07 | | | | ALT | Heat sink overheating error | Temperature sensor built into IGBT (TH) detects overheating. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P10 | Indoor unit No. detected | (P10) | | | | ALT | Indoor unit overflow | Indoor unit has been shutdown in one refrigerant line due to detection of overflow (detected by indoor unit). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P13 | — | P13 | | | | ALT | Outdoor liquid backflow detection error | State of refrigerant cycle circuit indicates liquid backflow operation. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P15 | 01: TS condition 02: TD condition | P15 | | | | ALT | Gas leak detection | Outdoor suction temperature sensor (TS1) detects sustained and repeated high temperatures that exceed standard value. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P17 | — | P17 | | | | ALT | Outdoor discharge (TD2) temperature error | Outdoor discharge temperature sensor (TD2) detects abnormally high temperature. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P18 | — | P18 | | | | ALT | Outdoor discharge (TD3) temperature error | Outdoor discharge temperature sensor (TD3) detects abnormally high temperature. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P19 | Outdoor unit No. detected | P19 | | | | ALT | 4-way valve reversing error | Abnormality in refrigerating cycle is detected during heating operation. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P20 | — | P20 | | | | ALT | Activation of high-pressure protection | High pressure (Pd) sensor detects high pressure that exceeds standard value. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

MG-CTT: Magnet contactor

(Errors detected by IPDU featuring in SMMS standard outdoor unit - typical examples)

| Check code | | Display of receiving unit | | Typical fault site | Description of error | | | |
|---------------------------|--|--|-----------------------|--------------------|----------------------|-------|---|---|
| Outdoor 7-segment display | | TCC-LINK central control or main remote controller display | Indicator light block | | | | | |
| Sub-code | | | Operation | Timer | Ready | Flash | | |
| F13 | 01: Compressor 1 02: Compressor 2 03: Compressor 3 | F13 | ⊙ | ⊙ | ○ | ALT | Error in temperature sensor built into indoor IGBT (TH) | Temperature sensor built into indoor IGBT (TH) has been open / short-circuited. |
| H01 | 01: Compressor 1 02: Compressor 2 03: Compressor 3 | H01 | ● | ⊙ | ● | | Compressor breakdown | Inverter current (Idc) detection circuit detects overcurrent. |
| H02 | 01: Compressor 1 02: Compressor 2 03: Compressor 3 | H02 | ● | ⊙ | ● | | Compressor error (lockup) | Compressor lockup is detected |
| H03 | 01: Compressor 1 02: Compressor 2 03: Compressor 3 | H03 | ● | ⊙ | ● | | Current detection circuit error | Abnormal current is detected while inverter compressor is turned off. |
| P04 | 01: Compressor 1 02: Compressor 2 03: Compressor 3 | P04 | ⊙ | ● | ⊙ | ALT | Activation of high-pressure SW | High-pressure SW is activated. |
| P07 | | P07 | ⊙ | ● | ⊙ | ALT | Heat sink overheating error | Temperature sensor built into IGBT (TH) detects overheating. |
| P20 | | P20 | ⊙ | ● | ⊙ | ALT | High-pressure protection activation | High-pressure (Pd) sensor detected a value over the criteria. |
| P22 | SMMS (Series 1) 04: Rotation difference error 06: Maximum rotation exceeded 08: Out of step 0A: Idc activation 0C: Fan lock 0d: Lock 0E: Sync error 0F: Control error SMMS-i (Series 4) 0..: IGBT circuit 1...: Position detection circuit error 3...: Motor lockup error 4...: Motor current detection C...: TH sensor error D...: TH sensor error E...: Inverter DC voltage error (outdoor fan) Note: Although letters 0 to F appear at locations indicated by "*", please ignore them. | P22 | ⊙ | ● | ⊙ | ALT | Outdoor fan IPDU error | Outdoor fan IPDU detects error. |
| P26 | 01: Compressor 1 02: Compressor 2 03: Compressor 3 | P26 | ⊙ | ● | ⊙ | ALT | Activation of G-Tr (IGBT) short-circuit protection | Short-circuit protection for compressor motor driver circuit components is activated (momentary overcurrent). |
| P29 | 01: Compressor 1 02: Compressor 2 03: Compressor 3 | P29 | ⊙ | ● | ⊙ | ALT | Compressor position detection circuit error | Compressor motor position detection error is detected. |

Note: The above check codes are examples only, and different check codes may be displayed depending on the outdoor unit configuration (e.g. a Super heat recovery multi system). For details, see the service manual for the outdoor unit.

9-3. Troubleshooting based on information displayed on remote controller


Using main remote controller (RBC-AMT32E)

(1) Checking and testing

When a fault occurs to an air conditioner, a check code and indoor unit No. are displayed on the display window of the remote controller.

Check codes are only displayed while the air conditioner is in operation.

If the display has already disappeared, access error history by following the procedure described below.

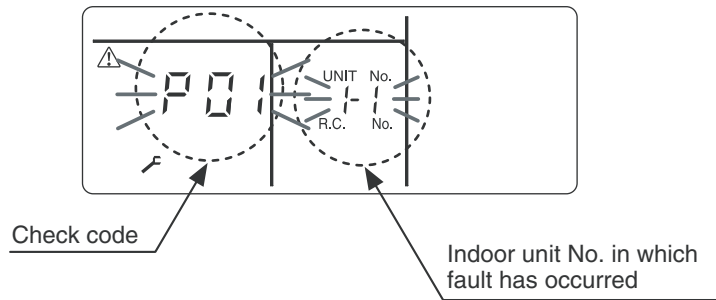

(2) Error history

The error history access procedure is described below (up to four errors stored in memory).

Error history can be accessed regardless of whether the air conditioner is in operation or shut down.

<Procedure> To be performed when system at rest


- 1 Invoke the **SERVICE CHECK** mode by pressing the **TEST** + **SET** buttons simultaneously and holding for at least 4 seconds.

The letters "SERVICE CHECK" light up, and the check code "01" is displayed, indicating the error history. This is accompanied by the indoor unit No. to which the error history is related and a check code.

- 2 To check other error history items, press the **TEMP.** button to select another check code.

Check code "01" (latest) → Check code "04" (oldest)
Note: Error history contains four items.

- 3 When the **TEST** button is pushed, normal display is restored.

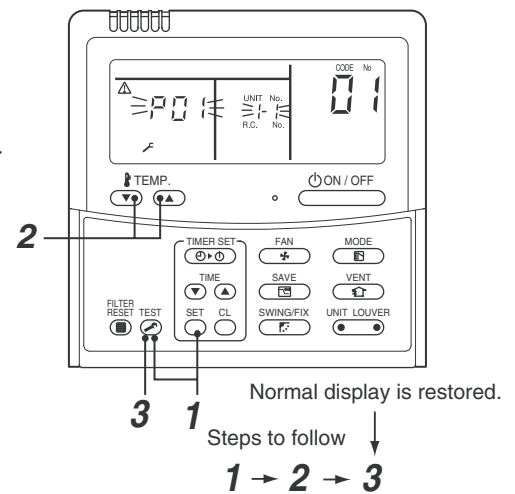

REQUIREMENT

Do not push the **CL** button as it would erase the whole error history of the indoor unit.

How to read displayed information

<7-segment display symbols>



<Corresponding alphanumerical letters>


0 1 2 3 4 5 6 7 8 9 A b C d E F H J L P

Using TCC-LINK central control remote controller (TCB-SC642TLE2)

(1) Checking and testing

When a fault occurs to an air conditioner, a check code and indoor unit No. are displayed on the display window of the remote controller. Check codes are only displayed while the air conditioner is in operation.

If the display has already disappeared, access error history by following the procedure described below.

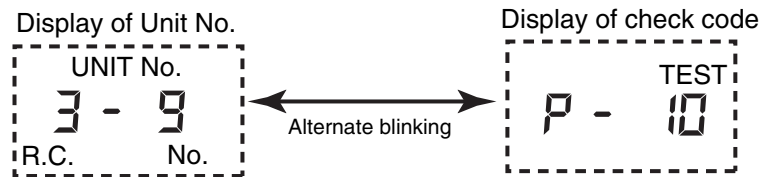


(2) Error history

The error history access procedure is described below (up to four errors stored in memory).

Error history can be accessed regardless of whether the air conditioner is in operation or shut down.

- 1** Push the + buttons simultaneously and hold for at least 4 seconds.
- 2** The letters “ SERVICE CHECK” light up, and the check code “01” is displayed.
- 3** When a group No. is selected (blinking), if there is an error history, the UNIT No. and the latest error history information are displayed alternately.

* During this procedure, the temperature setting feature is unavailable.

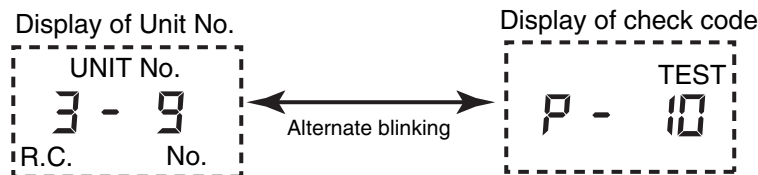

- 4** To check other error history items, push the button to select another check code (01-04.).
- 5** To check check code relating to another group, push (ZONE) and (GROUP) buttons to select a group No.
Do not push the button as it would erase the whole error history of the selected group.
- 6** To finish off the service check, push the button.








Using indoor unit indicators (receiving unit light block) (wireless type)


To identify the check code, check the 7-segment display on the header unit. To check for check codes not displayed on the 7-segment display, consult the “List of Check Codes (Indoor Unit)” in “9-2. Troubleshooting method”.

● : Goes off ○ : Lighting ☉ : Blinking (0.5 seconds)



| Light block | Check code | Cause of fault | | |
|---|---|---|---------------------|--|
| Operation ● Timer ● Ready ● All lights out | – | Power turned off or error in wiring between receiving and indoor units | | |
| Operation ☉ Timer ● Ready ● Blinking | E01 | Faulty reception | Receiving unit | Error or poor contact in wiring between receiving and indoor units |
| | E02 | Faulty transmission | | |
| | E03 | Loss of communication | | |
| | E08 | Duplicated indoor unit No. (address) | | Setting error |
| | E09 | Duplicated master remote controller | | |
| | E10 | Indoor unit inter-MCU communication error | | |
| | E12 | Automatic address starting error | | |
| | E18 | Error or poor contact in wiring between indoor units, indoor power turned off | | |
| Operation ● Timer ● Ready ☉ Blinking | E04 | Error or poor contact in wiring between indoor and outdoor units (loss of indoor-outdoor communication) | | |
| | E06 | Faulty reception in indoor-outdoor communication (dropping out of indoor unit) | | |
| | E07 | Faulty transmission in indoor-outdoor communication | | |
| | E15 | Indoor unit not found during automatic address setting | | |
| | E16 | Too many indoor units connected / overloading | | |
| | E19 | Error in number of outdoor header units | | |
| | E20 | Detection of refrigerant piping communication error during automatic address setting | | |
| | E23 | Faulty transmission in outdoor-outdoor communication | | |
| | E25 | Duplicated follower outdoor address | | |
| | E26 | Faulty reception in outdoor-outdoor communication, dropping out of outdoor unit | | |
| | E28 | Outdoor follower unit error | | |
| | E31 | IPDU communication error | | |
| | Operation ● Timer ☉ Ready ☉ Alternate blinking | P01 | Indoor AC fan error | |
| P10 | | Indoor overflow error | | |
| P12 | | Indoor DC fan error | | |
| P13 | | Outdoor liquid backflow detection error | | |
| Operation ☉ Timer ● Ready ☉ Alternate blinking | P03 | Outdoor discharge (TD1) temperature error | | |
| | P04 | Activation of outdoor high-pressure SW | | |
| | P05 | Open phase / power failure Inverter DC voltage (Vdc) error MG-CTT error | | |
| | P07 | Outdoor heat sink overheating error - Poor cooling of electrical component (IGBT) of outdoor unit | | |
| | P15 | Gas leak detection - insufficient refrigerant charging | | |
| | P17 | Outdoor discharge (TD2) temperature error | | |
| | P18 | Outdoor discharge (TD3) temperature error | | |
| | P19 | Outdoor 4-way valve reversing error | | |
| | P20 | Activation of high-pressure protection | | |
| | P22 | Outdoor fan IPDU error | | |
| | P26 | Outdoor G-Tr short-circuit error | | |
| | P29 | Compressor position detection circuit error | | |
| | P31 | Shutdown of other indoor unit in group due to fault (group follower unit error) | | |

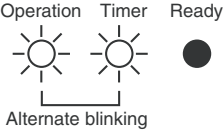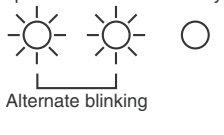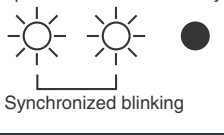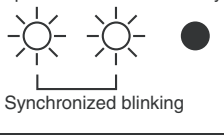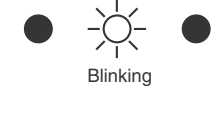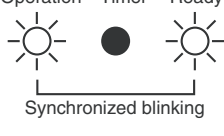MG-CTT: Magnet contactor

| Light block | Check code | Cause of fault | |
|--|------------|---|--|
| Operation Timer Ready  | F01 | Heat exchanger temperature sensor (TCJ) error | Indoor unit temperature sensor errors |
| | F02 | Heat exchanger temperature sensor (TC2) error | |
| | F03 | Heat exchanger temperature sensor (TC1) error | |
| | F10 | Ambient temperature sensor (TA) error | |
| | F11 | Discharge temperature sensor (TF) error | |
| Operation Timer Ready  | F04 | Discharge temperature sensor (TD1) error | Outdoor unit temperature sensor errors |
| | F05 | Discharge temperature sensor (TD2) error | |
| | F06 | Heat exchanger temperature sensor (TE1, TE2) error | |
| | F07 | Liquid temperature sensor (TL) error | |
| | F08 | Outside air temperature sensor (TO) error | |
| | F12 | Suction temperature sensor (TS1) error | |
| | F13 | Heat sink sensor (TH) error | |
| | F15 | Wiring error in heat exchanger sensor (TE1) and liquid temperature sensor (TL) Outdoor unit temperature sensor wiring / installation error | Outdoor unit pressure sensor errors |
| | F16 | Wiring error in outdoor high pressure sensor (Pd) and low pressure sensor (Ps) Outdoor pressure sensor wiring error | |
| | F22 | Outdoor discharge temperature sensor (TD3) error | |
| Operation Timer Ready  | F23 | Low pressure sensor (Ps) error | Outdoor unit pressure sensor errors |
| | F24 | High pressure sensor (Pd) error | |
| Operation Timer Ready  | F29 | Fault in indoor EEPROM | |
| Operation Timer Ready  | H01 | Compressor breakdown | Outdoor unit compressor related errors |
| | H02 | Compressor lockup | |
| | H03 | Current detection circuit error | |
| | H05 | Wiring / installation error or detachment of outdoor discharge temperature sensor (TD1) | Protective shutdown of outdoor unit |
| | H06 | Abnormal drop in low-pressure sensor (Ps) reading | |
| | H07 | Abnormal drop in oil level | |
| | H08 | Error in temperature sensor for oil level detection circuit (TK1, TK2, TK3, TK4 or TK5) | |
| | H15 | Wiring / installation error or detachment of outdoor discharge temperature sensor (TD2) | Protective shutdown of outdoor unit |
| | H16 | Oil level detection circuit error - Error in outdoor unit TK1, TK2, TK3, TK4 or TK5 circuit | |
| | H25 | Wiring / installation error or detachment of outdoor discharge temperature sensor (TD3) | |
| Operation Timer Ready  | L03 | Duplicated indoor group header unit | |
| | L05 | Duplicated priority indoor unit (as displayed on priority indoor unit) | |
| | L06 | Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit) | |
| | L07 | Connection of group control cable to stand-alone indoor unit | |
| | L08 | Indoor group address not set | |
| | L09 | Indoor capacity not set | |
| Operation Timer Ready  | L04 | Duplicated outdoor refrigerant line address | |
| | L10 | Outdoor capacity not set | |
| | L17 | Outdoor model incompatibility error | |
| | L18 | Flow selector units error | |
| | L20 | Duplicated central control address | |
| | L28 | Too many outdoor units connected | |
| | L29 | Error in number of IPDUs | |
| | L30 | Indoor external interlock error | |

| Light block | Check code | Cause of fault |
|---|------------|----------------------|
| <p>Operation Timer Ready</p>  <p>Synchronized blinking</p> | F31 | Outdoor EEPROM error |

Other (indications not involving check code)

| Light block | Check code | Cause of fault |
|---|------------|---|
| <p>Operation Timer Ready</p>  <p>Synchronized blinking</p> | - | Test run in progress |
| <p>Operation Timer Ready</p>  <p>Alternate blinking</p> | - | Setting incompatibility (automatic cooling / heating setting for model incapable of it and heating setting for cooling-only model) |

9-4. Check codes displayed on remote controller and SMMS outdoor unit (7-segment display on I/F board) and locations to be checked

For other types of outdoor units, refer to their own service manuals.

| Check code | | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) |
|------------------------|---------------------------|--|-----------------------|--|----------------------------|---|--|
| Main remote controller | Outdoor 7-segment display | | | | | | |
| | Check code | Sub-code | | | | | |
| E01 | — | — | Remote controller | Indoor-remote controller communication error (detected at remote controller end) | Stop of corresponding unit | Communication between indoor P.C. board and remote controller is disrupted. | Check remote controller inter-unit tie cable (A / B). Check for broken wire or connector bad contact. Check indoor power supply. Check for defect in indoor P.C. board. Check remote controller address settings (when two remote controllers are in use). Check remote controller P.C. board. |
| E02 | — | — | Remote controller | Remote controller transmission error | Stop of corresponding unit | Signal cannot be transmitted from remote controller to indoor unit. | Check internal transmission circuit of remote controller. --- Replace remote controller as necessary. |
| E03 | — | — | Indoor unit | Indoor-remote controller communication error (detected at indoor end) | Stop of corresponding unit | There is no communication from remote controller (including wireless) or network adaptor. | Check remote controller and network adaptor wiring. |
| E04 | — | — | Indoor unit | Indoor-outdoor communication circuit error (detected at indoor end) | Stop of corresponding unit | Indoor unit is not receiving signal from outdoor unit. | Check order in which power was turned on for indoor and outdoor units. Check indoor address setting. Check indoor-outdoor tie cable. Check outdoor termination resistance setting (SW30, Bit 2). |
| E06 | E06 | No. of indoor units from which signal is received normally | I/F | Dropping out of indoor unit | All stop | Indoor unit initially communicating normally fails to return signal for specified length of time. | Check power supply to indoor unit. (Is power turned on?) Check connection of indoor-outdoor communication cable. Check connection of communication connectors on indoor P.C. board. Check connection of communication connectors on outdoor P.C. board. Check for defect in indoor P.C. board. Check for defect in outdoor P.C. board (I/F). |
| — | E07 | — | I/F | Indoor-outdoor communication circuit error (detected at outdoor end) | All stop | Signal cannot be transmitted from outdoor to indoor units for 30 seconds continuously. | Check outdoor termination resistance setting (SW30, Bit 2). Check connection of indoor-outdoor communication circuit. |

| Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) | |
|------------------------|---------------------------|--|-------------------|--|------------------------------|---|---|
| Main remote controller | Outdoor 7-segment display | | | | | | |
| | Check code | | | | | | Sub-code |
| E08 | E08 | Duplicated indoor address | Indoor unit I/F | Duplicated indoor address | All stop | More than one indoor unit is assigned same address. | Check indoor addresses. Check for any change made to remote controller connection (group / individual) since indoor address setting. |
| E09 | — | — | Remote controller | Duplicated master remote controller | Stop of corresponding unit | In two remote controller configuration (including wireless), both controllers are set up as master. (Header indoor unit is shut down with alarm, while follower indoor units continue operating.) | Check remote controller settings. Check remote controller P.C. boards. |
| E10 | — | — | Indoor unit | Indoor inter-MCU communication error | Stop of corresponding unit | Communication cannot be established / maintained upon turning on of power or during communication. | Check for defect in indoor P.C. board |
| E12 | E12 | 01: Indoor-outdoor communication 02: Outdooroutdoor communication | I/F | Automatic address starting error | All stop | Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress. Outdoor automatic address setting is started while automatic address setting for indoor units is in progress. | Perform automatic address setting again after disconnecting communication cable to that refrigerant line. |
| E15 | E15 | — | I/F | Indoor unit not found during automatic address setting | All stop | Indoor unit cannot be detected after indoor automatic address setting is started. | Check connection of indoor-outdoor communication line. Check for error in indoor power supply system. Check for noise from other devices. Check for power failure. Check for defect in indoor P.C. board. |
| E16 | E16 | 00: Overloading 01-: No. of units connected | I/F | Too many indoor units connected | All stop | Combined capacity of indoor units exceeds 135 % of combined capacity of outdoor units. Note: If this code comes up after backup setting for outdoor unit failure is performed, perform "No overloading detected" setting. < "No overloading detected " setting method> Turn on SW09/Bit 2 on I/F P.C. board of outdoor header unit. More than 48 indoor units are connected. | Check capacities of indoor units connected. Check combined HP capacities of indoor units. Check HP capacity settings of outdoor units. Check No. of indoor units connected. Check for defect in outdoor P.C. board (I/F). |

| Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) | |
|------------------------|---------------------------|---|-------------|---|------------------------------|---|---|
| Main remote controller | Outdoor 7-segment display | | | | | | |
| | Check code | | | | | | Sub-code |
| E18 | — | — | Indoor unit | Error in communication between indoor header and follower units | Stop of corresponding unit | Periodic communication between indoor header and follower units cannot be maintained. | Check remote controller wiring. Check indoor power supply wiring. Check P.C. boards of indoor units. |
| E19 | E19 | 00: No header unit 02: Two or more header units | I/F | Error in number of outdoor header units | All stop | There is more than one outdoor header unit in one line. There is no outdoor header unit in one line. | Outdoor header unit is outdoor unit to which indoor outdoor cable (U1,U2) is connected. Check connection of indoor-outdoor communication line. Check for defect in outdoor P.C. board (I/F). |
| E20 | E20 | 01: Connection of outdoor unit from other line 02: Connection of indoor unit from other line | I/F | Connection to other line found during automatic address setting | All stop | Equipment from other line is found to have been connected when indoor automatic address setting is in progress. | Disconnect inter-line tie cable in accordance with automatic address setting method explained in gAddress setting h section. |
| E23 | E23 | — | I/F | Outdooroutdoor communication transmission error | All stop | Signal cannot be transmitted to other outdoor units for at least 30 seconds continuously. | Check power supply to outdoor units. (Is power turned on?) Check connection of tie cables between outdoor units for bad contact or broken wire. Check communication connectors on outdoor P.C. boards. Check for defect in outdoor P.C. board (I/F). Check termination resistance setting for communication between outdoor units. |
| E25 | E25 | — | I/F | Duplicated follower outdoor address | All stop | There is duplication in outdoor addresses set manually. | Note: Do not set outdoor addresses manually. |
| E26 | E26 | Address of outdoor unit from which signal is not received normally | I/F | Dropping out of outdoor unit | All stop | Outdoor unit initially communicating normally fails to return signal for specified length of time. | Backup setting is being used for outdoor units. Check power supply to outdoor unit. (Is power turned on?) Check connection of tie cables between outdoor units for bad contact or broken wire. Check communication connectors on outdoor P.C. boards. Check for defect in outdoor P.C. board (I/F). |
| E28 | E28 | Detected outdoor unit No. | I/F | Outdoor follower unit error | All stop | Outdoor header unit receives error code from outdoor follower unit. | Check check code displayed on outdoor follower unit. <Convenient functions> If SW04 is pressed and held for at least 1 second while [E28] is displayed on the 7-segmentdisplay of outdoor header unit, the fan of the outdoor unit that has been shut down due to an error comes on. If SW04 and SW05 are pressed simultaneously, the fans of normal outdoor units come on. To stop the fan or fans, press SW05 on its own. |

| Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------|---------------------------|--|-------------|-------------------------|------------------------------|---|---|---|---|---|----|---|--|--|--|----|---|--|--|--|----|---|---|--|--|----|--|--|---|--|----|---|--|---|--|----|--|---|---|--|----|---|---|---|--|----|--|--|--|---|----|---|--|--|---|----|---|--|--|---|----|---|---|--|---|----|--|--|---|---|----|---|--|---|---|----|---|---|---|---|----|---|---|---|---|-----|--------------------------|----------|---|--|
| Main remote controller | Outdoor 7-segment display | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Check code | Sub-code | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| E31 | E31 | SMMS (Series 1) 01: A3-IPDU1 error 02: A3-IPDU2 error 03: A3-IPDU1/A3-IPDU2 error 04: Fan IPDU error 05: A3-IPDU1 + Fan IPDU error 06: A3-IPDU2 + Fan IPDU error 07: All IPDU error or Communication error between IPDU and I/F circuit board or Outdoor I/F circuit board error SMMS-i (Series 4) <table border="1" style="margin-left: 20px;"> <thead> <tr> <th rowspan="2"></th> <th colspan="3">A3-IPDU</th> <th rowspan="2">Fan IPDU</th> </tr> <tr> <th>1</th> <th>2</th> <th>3</th> </tr> </thead> <tbody> <tr><td>01</td><td>○</td><td></td><td></td><td></td></tr> <tr><td>02</td><td>○</td><td></td><td></td><td></td></tr> <tr><td>03</td><td>○</td><td>○</td><td></td><td></td></tr> <tr><td>04</td><td></td><td></td><td>○</td><td></td></tr> <tr><td>05</td><td>○</td><td></td><td>○</td><td></td></tr> <tr><td>06</td><td></td><td>○</td><td>○</td><td></td></tr> <tr><td>07</td><td>○</td><td>○</td><td>○</td><td></td></tr> <tr><td>08</td><td></td><td></td><td></td><td>○</td></tr> <tr><td>09</td><td>○</td><td></td><td></td><td>○</td></tr> <tr><td>0A</td><td>○</td><td></td><td></td><td>○</td></tr> <tr><td>0B</td><td>○</td><td>○</td><td></td><td>○</td></tr> <tr><td>0C</td><td></td><td></td><td>○</td><td>○</td></tr> <tr><td>0D</td><td>○</td><td></td><td>○</td><td>○</td></tr> <tr><td>0E</td><td>○</td><td>○</td><td>○</td><td>○</td></tr> <tr><td>0F</td><td>○</td><td>○</td><td>○</td><td>○</td></tr> </tbody> </table> Symbol ○ signifies site of IPDU error. | | A3-IPDU | | | Fan IPDU | 1 | 2 | 3 | 01 | ○ | | | | 02 | ○ | | | | 03 | ○ | ○ | | | 04 | | | ○ | | 05 | ○ | | ○ | | 06 | | ○ | ○ | | 07 | ○ | ○ | ○ | | 08 | | | | ○ | 09 | ○ | | | ○ | 0A | ○ | | | ○ | 0B | ○ | ○ | | ○ | 0C | | | ○ | ○ | 0D | ○ | | ○ | ○ | 0E | ○ | ○ | ○ | ○ | 0F | ○ | ○ | ○ | ○ | I/F | IPDU communication error | All stop | Communication is disrupted between IPDUs (P.C. boards) in inverter box. | <ul style="list-style-type: none"> Check wiring and connectors involved in communication between IPDU-I/F P.C. board for bad contact or broken wire. Check for defect in outdoor P.C. board (I/F, A3-IPDU or Fan IPDU). Check for external noise. |
| | A3-IPDU | | | Fan IPDU | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 1 | 2 | 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 01 | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 02 | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 03 | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 04 | | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 05 | ○ | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 06 | | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 07 | ○ | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 08 | | | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 09 | ○ | | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0A | ○ | | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0B | ○ | ○ | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0C | | | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0D | ○ | | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0E | ○ | ○ | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0F | ○ | ○ | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F01 | — | — | Indoor unit | Indoor TCJ sensor error | Stop of corresponding unit | Sensor resistance is infinity or zero (open / short circuit). | Check connection of TCJ sensor connector and wiring. Check resistance characteristics of TCJ sensor. Check for defect in indoor P.C. board. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F02 | — | — | Indoor unit | Indoor TC2 sensor error | Stop of corresponding unit | Sensor resistance is infinity or zero (open / short circuit). | Check connection of TC2 sensor connector and wiring. Check resistance characteristics of TC2 sensor. Check for defect in indoor P.C. board. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F03 | — | — | Indoor unit | Indoor TC1 sensor error | Stop of corresponding unit | Sensor resistance is infinity or zero (open / short circuit). | Check connection of TC1 sensor connector and wiring. Check resistance characteristics of TC1 sensor. Check for defect in indoor P.C. board. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F04 | F04 | — | I/F | TD1 sensor error | All stop | Sensor resistance is infinity or zero (open / short circuit). | Check connection of TD1 sensor connector. Check resistance characteristics of TD1 sensor. Check for defect in outdoor P.C. board (I/F). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F05 | F05 | — | I/F | TD2 sensor error | All stop | Sensor resistance is infinity or zero (open / short circuit). | Check connection of TD2 sensor connector. Check resistance characteristics of TD2 sensor. Check for defect in outdoor P.C. board (I/F). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| F06 | F06 | TE1 sensor error 02: TE2 sensor error | I/F | TE1/TE2 sensor error | All stop | Sensor resistance is infinity or zero (open / short circuit). | Check connection of TE1/TE2 sensor connectors. Check resistance characteristics of TE1/TE2 sensors. Check for defect in outdoor P.C. board (I/F). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) |
|------------------------|---------------------------|---|-------------|---|------------------------------|---|
| Main remote controller | Outdoor 7-segment display | | | | | |
| | Check code | Sub-code | | | | |
| F07 | F07 | — | I/F | TL sensor error | All stop | Sensor resistance is infinity or zero (open / short circuit). Check connection of TL sensor connector. Check resistance characteristics of TL sensor. Check for defect in outdoor P.C. board (I/F). |
| F08 | F08 | — | I/F | TO sensor error | All stop | Sensor resistance is infinity or zero (open / short circuit). Check connection of TO sensor connector. Check resistance characteristics of TO sensor. Check for defect in outdoor P.C. board (I/F). |
| F10 | — | — | Indoor unit | Indoor TA sensor error | Stop of corresponding unit | Sensor resistance is infinity or zero (open / short circuit). Check connection of TA sensor connector and wiring. Check resistance characteristics of TA sensor. Check for defect in indoor P.C. board. |
| F11 | — | — | Indoor unit | Indoor TF sensor error | Stop of corresponding unit | Sensor resistance is infinity or zero (open / short circuit). Check connection of TF sensor connector and wiring. Check resistance characteristics of TF sensor. Check for defect in indoor P.C. board. |
| F12 | F12 | — | I/F | TS1 sensor error | All stop | Sensor resistance is infinity or zero (open / short circuit). Check connection of TS1 sensor connector. Check resistance characteristics of TS1 sensor. Check for defect in outdoor P.C. board (I/F). |
| F13 | | 01: Compressor 1 side 02: Compressor 2 side 03: Compressor 3 side | IPDU | TH sensor error | All stop | Sensor resistance is infinity or zero (open / short circuit). Defect in IGBT built-in temperature sensor → Replace A3-IPDU P.C. board. |
| F15 | F15 | — | I/F | Outdoor temperature sensor wiring error (TE1, TL) | All stop | During compressor operation in HEAT mode, TE1 continuously provides temperature reading higher than indicated by TL by at least specified margin for 3 minutes or more. Check installation of TE1 and TL sensors. Check resistance characteristics of TE1 and TL sensors. Check for outdoor P.C. board (I/F) error. |
| F16 | F16 | — | I/F | Outdoor pressure sensor wiring error (Pd, Ps) | All stop | Readings of high-pressure Pd sensor and lowpressure Ps sensor are switched. Output voltages of both sensors are zero. Check connection of high-pressure Pd sensor connector. Check connection of low-pressure Ps sensor connector. Check for defect in pressure sensors Pd and Ps. Check for error in outdoor P.C. board (I/F). Check for deficiency in compressive output of compressor. |
| F22 | F22 | — | I/F | TD3 sensor error | All stop | Sensor resistance is infinity or zero. (open / short circuit) Check connection of TD3 sensor connector. Check resistance characteristics of TD3 sensor. Check for defect in outdoor P.C. board (I/F). |
| F23 | F23 | — | I/F | Ps sensor error | All stop | Output voltage of Ps sensor is zero. Check for connection error involving Ps sensor and Pd sensor connectors. Check connection of Ps sensor connector. Check for defect in Ps sensor. Check for deficiency in compressive output of compressor. Check for defect in 4-way valve. Check for defect in outdoor P.C. board (I/F). Check for defect in SV4 circuit. |

| Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) | |
|------------------------|---------------------------|---|-------------|---|------------------------------|---|--|
| Main remote controller | Outdoor 7-segment display | | | | | | |
| | Check code | Sub-code | | | | | |
| F24 | F24 | – | I/F | Pd sensor error | All stop | Output voltage of Pd sensor is zero (sensor open-circuited). Pd > 4.15 MPa despite compressor having been turned off. | Check connection of Pd sensor connector. Check for defect in Pd sensor. Check for defect in outdoor P.C. board (I/F). |
| F29 | – | – | Indoor unit | Other indoor error | Stop of corresponding unit | Indoor P.C. board does not operate normally. | Check for defect in indoor P.C. board (faulty EEPROM) |
| F31 | F31 | – | I/F | Outdoor EEPROM error | All stop *1 | Outdoor P.C. board (I/F) does not operate normally. | Check power supply voltage. Check power supply noise. Check for defect in outdoor P.C. board (I/F). |
| H01 | H01 | 01: Compressor 1 side 02: Compressor 2 side 03: Compressor 3 side | IPDU | Compressor breakdown | All stop | Inverter current detection circuit detects overcurrent and shuts system down. | Check power supply voltage. (380-415V ± 10 %). Check for defect in compressor. Check for possible cause of abnormal overloading. Check for defect in outdoor P.C. board (A3-IPDU). |
| H02 | H02 | 01: Compressor 1 side 02: Compressor 2 side 03: Compressor 3 side | IPDU | Compressor error (lockup) MG-CTT error | All stop | Overcurrent is detected several seconds after startup of inverter compressor. | Check for defect in compressor. Check power supply voltage. (380-415V ± 10 %). Check compressor system wiring, particularly for open phase. Check connection of connectors / terminals on A3-IPDU P.C. board. Check conductivity of case heater. (Check for refrigerant entrapment inside compressor.) Check for defect in outdoor P.C. board (A3-IPDU). Check outdoor MG-CTT. |
| H03 | H03 | 01: Compressor 1 side 02: Compressor 2 side 03: Compressor 3 side | IPDU | Current detection circuit error | All stop | Current flow of at least specified magnitude is detected despite inverter compressor having been shut turned off. | Check current detection circuit wiring. Check defect in outdoor P.C. board (A3-IPDU). |
| H05 | H05 | – | I/F | TD1 sensor miswiring (incomplete insertion) | All stop | Discharge temperature of compressor 1 (TD1) does not increase despite compressor being in operation. | Check installation of TD1 sensor. Check connection of TD1 sensor connector and wiring. Check resistance characteristics of TD1 sensor. Check for defect in outdoor P.C. board (I/F). |
| H06 | H06 | – | I/F | Activation of low-pressure protection | All stop | Low-pressure Ps sensor detects operating pressure lower than 0.02 MPa. | Check service valves to confirm full opening (both gas and liquid sides). Check outdoor PMVs for clogging (PMV1, 2). Check for defect in SV2 or SV4 circuits. Check for defect in low-pressure Ps sensor. Check indoor filter for clogging. Check valve opening status of indoor PMV. Check refrigerant piping for clogging. Check operation of outdoor fan (during heating). Check for insufficiency in refrigerant quantity. |

*1 Total shutdown in case of header unit
Continued operation in case of follower unit

MG-CTT: Magnet contactor

| Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) | |
|------------------------|---------------------------|--|-------------|---|------------------------------|---|---|
| Main remote controller | Outdoor 7-segment display | | | | | | |
| | Check code | | | | | | Sub-code |
| H07 | H07 | — | I/F | Low oil level protection | All stop | Operating compressor detects continuous state of low oil level for about 2 hours. | <p><All outdoor units in corresponding line to be checked></p> <p>Check balance pipe service valve to confirm full opening.</p> <p>Check connection and installation of TK1, TK2, TK3, TK4, and TK5 sensors.</p> <p>Check resistance characteristics of TK1, TK2, TK3, TK4, and TK5 sensors.</p> <p>Check for gas or oil leak in same line.</p> <p>Check for refrigerant entrapment inside compressor casing.</p> <p>Check SV3A, SV3B, SV3C, SV3D, SV3E, and SV3F valves for defect.</p> <p>Check oil return circuit of oil separator for clogging.</p> <p>Check oil equalizing circuit for clogging.</p> |
| H08 | H08 | 01: TK1 sensor error 02: TK2 sensor error 03: TK3 sensor error 04: TK4 sensor error 05: TK5 sensor error | I/F | Error in temperature sensor for oil level detection | All stop | Sensor resistance is infinity or zero (open / short circuit). | Check connection of TK1 sensor connector. Check resistance characteristics of TK1 sensor. Check for defect in outdoor P.C. board (I/F). |
| | | | | | All stop | Sensor resistance is infinity or zero (open / short circuit). | Check connection of TK2 sensor connector. Check resistance characteristics of TK2 sensor. Check for defect in outdoor P.C. board (I/F). |
| | | | | | All stop | Sensor resistance is infinity or zero (open / short circuit). | Check connection of TK3 sensor connector. Check resistance characteristics of TK3 sensor. Check for defect in outdoor P.C. board (I/F). |
| | | | | | All stop | Sensor resistance is infinity or zero (open / short circuit). | Check connection of TK4 sensor connector. Check resistance characteristics of TK4 sensor. Check for defect in outdoor P.C. board (I/F). |
| | | | | | All stop | Sensor resistance is infinity or zero (open / short circuit). | Check connection of TK5 sensor connector. Check resistance characteristics of TK5 sensor. Check for defect in outdoor P.C. board (I/F). |

| Check code | | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) |
|------------------------|---------------------------|----------|-----------------------|---|---------------|---|--|
| Main remote controller | Outdoor 7-segment display | | | | | | |
| | Check code | Sub-code | | | | | |
| H14 | H14 | – | I/F | Compressor 2 case thermo activation | All stop | Compressor 2 case thermo was activated. | <p>Check Compressor 2 case thermo circuit. (Connector, Wiring, Circuit board) Open and check the service valve. (Gas side, Liquid side) Check the outdoor PMV clogging (PMV1, 2). Check the SV42 circuit. Check the SV4 circuit (SV41 / 42 miswiring). Check the opening status of indoor PMV. Check the four-way valve error. Check the refrigerant shortage.</p> |
| H15 | H15 | – | I/F | TD2 sensor miswiring (incomplete insertion) | All stop | Air discharge temperature of (TD2) does not increase despite compressor 2 being in operation. | <p>Check installation of TD2 sensor. Check connection of TD2 sensor connector and wiring. Check resistance characteristics of TD2 sensor. Check for defect in outdoor P.C. board (I/F).</p> |

| Main remote controller | Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) |
|------------------------|---------------------------|--|-----------------------|-----------------------------------|---------------|---|--|
| | Outdoor 7-segment display | | | | | | |
| | Check code | Sub-code | | | | | |
| H16 | H16 | SMMS (1 series) 01: TK1 oil circuit error 02: TK2 oil circuit error 03: TK3 oil circuit error 04: TK4 oil circuit error | I/F | Oil detection circuit error | All stop | The temperature change of TK1 cannot be detected even after Compressor 1 starts operating. | Check the TK1 sensor installation. Check the TK1 sensor resistant characteristics. Check the misconnection of TK1, TK2, TK3, or TK4. Check the SV3E valve error. Check the oil circuit capillary clogging and non-return valve error Check the hibernating refrigerant in compressor. |
| | | SMMS (1 series) 01: TK1 oil circuit error 02: TK2 oil circuit error 03: TK3 oil circuit error 04: TK4 oil circuit error | I/F | Oil detection circuit error | All stop | The temperature change of TK2 cannot be detected even after Compressor 2 starts operating. | Check the TK2 sensor installation. Check the TK2 sensor resistant characteristics. Check the misconnection of TK1, TK2, TK3, or TK4. Check the SV3E valve error. Check the oil circuit capillary clogging and non-return valve error. Check the hibernating refrigerant in compressor. |
| | | | | | | The temperature change of TK3 cannot be detected even after Compressor 3 starts operating. | Check the TK3 sensor installation. Check the TK3 sensor resistant characteristics. Check the misconnection of TK1, TK2, TK3, or TK4. Check the SV3E valve error. Check the oil circuit capillary clogging and non-return valve error. Check the hibernating refrigerant in compressor. |
| | | | | | | The temperature change of TK4 cannot be detected even after Compressor 4 starts operating, or the temperature difference from that of the other TK sensor changes only in the specified range for a given time or longer. | Check the TK4 sensor installation. Check the TK4 sensor resistant characteristics. Check the misconnection of TK1, TK2, TK3, or TK4. Check the SV3E valve error. Check the oil circuit capillary clogging and non-return valve error. Check the hibernating refrigerant in compressor. |
| | | SMMS-i (4 series) 01: TK1 oil circuit error 02: TK2 oil circuit error 03: TK3 oil circuit error 04: TK4 oil circuit error 05: TK5 oil circuit error | I/F | Oil level detection circuit error | All stop | No temperature change is detected by TK1 despite compressor 1 having been started. | Check for disconnection of TK1 sensor. Check resistance characteristics of TK1 sensor. Check for connection error involving TK1, TK2, TK3, TK4, and TK5 sensors Check for faulty operation in SV3E or SV3F valve. Check for clogging in oil equalizing circuit capillary and faulty operation in check valve. Check for refrigerant entrapment inside compressor. |
| | | | | | | No temperature change is detected by TK2 despite compressor 2 having been started. | Check for disconnection of TK2 sensor. Check resistance characteristics of TK2 sensor. Check for connection error involving TK1, TK2, TK3, TK4, and TK5 sensors Check for faulty operation in SV3E or SV3F valve. Check for clogging in oil equalizing circuit capillary and faulty operation in check valve. Check for refrigerant entrapment inside compressor. |
| | | | | | | No temperature change is detected by TK3 despite compressor 3 having been started. | Check for disconnection of TK3 sensor. Check resistance characteristics of TK3 sensor. Check for connection error involving TK1, TK2, TK3, TK4, and TK5 sensors Check for faulty operation in SV3E or SV3F valve. Check for clogging in oil equalizing circuit capillary and faulty operation in check valve. Check for refrigerant entrapment inside compressor. |

| Main remote controller | Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) |
|------------------------|---------------------------|--|-----------------------|---|------------------------------|---|--|
| | Outdoor 7-segment display | | | | | | |
| | Check code | Sub-code | | | | | |
| H16 | H16 | SMMS-i (4 series) 01: TK1 oil circuit error 02: TK2 oil circuit error 03: TK3 oil circuit error 04: TK4 oil circuit error 05: TK5 oil circuit error | I/F | Oil level detection circuit error | All stop | No temperature change is detected by TK4 despite compressor having been started. | Check for disconnection of TK4 sensor. Check resistance characteristics of TK4 sensor. Check for connection error involving TK1, TK2, TK3, TK4, and TK5 sensors Check for faulty operation in SV3E or SV3F valve. Check for clogging in oil equalizing circuit capillary and faulty operation in check valve. Check for refrigerant entrapment inside compressor. |
| | | | | | | No temperature change is detected by TK5 despite compressor having been started. | Check for disconnection of TK5 sensor. Check resistance characteristics of TK5 sensor. Check for connection error involving TK1, TK2, TK3, TK4, and TK5 sensors Check for faulty operation in SV3E valve. Check for clogging in oil equalizing circuit capillary and faulty operation in check valve. Check for refrigerant entrapment inside compressor. |
| H25 | H25 | – | I/F | TD3 sensor miswiring (incomplete insertion) | All stop | Air discharge temperature (TD3) does not increase despite compressor 3 being in operation. | Check installation of TD3 sensor. Check connection of TD3 sensor connector and wiring. Check resistance characteristics of TD3 sensor. Check for defect in outdoor P.C. board (I/F). |
| L02 | L02 | – | Indoor unit | Outdoor unit model mismatch error | Only the target unit stopped | An error was found on the outdoor unit model. | Check the model name of the outdoor unit. Check the miswiring of the communication line between indoor and outdoor. |
| L03 | – | – | Indoor unit | Duplicated indoor header unit | Stop of corresponding unit | There is more than one header unit in group. | Check indoor addresses. Check for any change made to remote controller connection (group / individual) since indoor address setting. |
| L04 | L04 | – | I/F | Duplicated outdoor line address | All stop | There is duplication in line address setting for outdoor units belonging to different refrigerant piping systems. | Check line addresses. |
| L05 | – | – | I/F | Duplicated priority indoor unit (as displayed on priority indoor unit) | All stop | More than one indoor unit has been set up as priority indoor unit. | Check display on priority indoor unit. |
| L06 | L06 | No. of priority indoor units | I/F | Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit) | All stop | More than one indoor unit have been set up as priority indoor unit. | Check displays on priority indoor unit and outdoor unit. |
| L07 | – | – | Indoor unit | Connection of group control cable to stand-alone indoor unit | Stop of corresponding unit | There is at least one stand-alone indoor unit to which group control cable is connected. | Check indoor addresses. |
| L08 | L08 | – | Indoor unit | Indoor group / addresses not set | Stop of corresponding unit | Address setting has not been performed for indoor units. | Check indoor addresses. Note: This code is displayed when power is turned on for the first time after installation. |
| L09 | – | – | Indoor unit | Indoor capacity not set | Stop of corresponding unit | Capacity setting has not been performed for indoor unit. | Set indoor capacity. (DN = 11) |

| Main remote controller | Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------|---------------------------|--|-----------------------|------------------------------------|------------------------------|--|--|--|---|---|---|--|----|---|--|--|--|----|--|---|--|--|----|---|---|--|--|----|--|--|--|---|----|---|--|---|--|----|--|---|---|--|----|---|---|---|--|----|--|--|--|---|----|---|--|--|---|----|--|---|--|---|----|---|---|--|---|----|--|--|---|---|----|---|--|---|---|----|--|---|---|---|----|---|---|---|---|-----|-----------------------|----------|--|---|
| | Outdoor 7-segment display | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Check code | Sub-code | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L10 | L10 | — | I/F | Outdoor capacity not set | All stop | Jumper wire provided on P.C. board for servicing I/F P.C. board has not been removed as required for given model. | Check model setting of P.C. board for servicing outdoor I/F P.C. board. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L17 | L17 | Target indoor address | I/F | Outdoor unit model mismatch error | | The outdoor unit model is duplicate. The Cool/Heat Flex series 1/2 are duplicate. | Check the outdoor unit model. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L18 | L18 | — | I/F | Cool / heat switch unit error | Only the target unit stopped | The heating operation was performed without the cool-only setting configured in a cool-only room where a cool/heat switch unit is not connected. | Check the remote controller setting. (DN="0F") Check the cool / heat switching unit. Check the piping connection of the switching unit. (Miswiring of discharge gas / suction gas) Check the SVS / SVD valve miswiring / misinstallation. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L20 | — | — | AI-NET Indoor unit | Duplicated central control address | All stop | There is duplication in central control address setting. | Check central control addresses. Check network adaptor P.C. board (applicable to AI-NET). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L28 | L28 | — | I/F | Too many outdoor units connected | All stop | There are more than four outdoor units. | Check No. of outdoor units connected (Only up to 4 units per system allowed). Check communication lines between outdoor units. Check for defect in outdoor P.C. board (I/F). | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| L29 | L29 | SMMS (Series 1) 01: A3-IPDU1 error 02: A3-IPDU2 error 03: A3-IPDU1/A3-IPDU2 error 04: Fan IPDU error 05: A3-IPDU1 + Fan IPDU error 06: A3-IPDU2 + Fan IPDU error 07: All IPDU error or Communication error between IPDU and I/F circuit board or Outdoor I/F circuit board error SMMS-i (Series 4) <table border="1" style="display: inline-table; vertical-align: top;"> <thead> <tr> <th></th> <th colspan="3">A3-IPDU</th> <th>Fan IPDU</th> </tr> <tr> <th></th> <th>1</th> <th>2</th> <th>3</th> <th></th> </tr> </thead> <tbody> <tr><td>01</td><td>○</td><td></td><td></td><td></td></tr> <tr><td>02</td><td></td><td>○</td><td></td><td></td></tr> <tr><td>03</td><td>○</td><td>○</td><td></td><td></td></tr> <tr><td>04</td><td></td><td></td><td></td><td>○</td></tr> <tr><td>05</td><td>○</td><td></td><td>○</td><td></td></tr> <tr><td>06</td><td></td><td>○</td><td>○</td><td></td></tr> <tr><td>07</td><td>○</td><td>○</td><td>○</td><td></td></tr> <tr><td>08</td><td></td><td></td><td></td><td>○</td></tr> <tr><td>09</td><td>○</td><td></td><td></td><td>○</td></tr> <tr><td>0A</td><td></td><td>○</td><td></td><td>○</td></tr> <tr><td>0B</td><td>○</td><td>○</td><td></td><td>○</td></tr> <tr><td>0C</td><td></td><td></td><td>○</td><td>○</td></tr> <tr><td>0D</td><td>○</td><td></td><td>○</td><td>○</td></tr> <tr><td>0E</td><td></td><td>○</td><td>○</td><td>○</td></tr> <tr><td>0F</td><td>○</td><td>○</td><td>○</td><td>○</td></tr> </tbody> </table> Symbol O signifies site of IPDU error. | | A3-IPDU | | | Fan IPDU | | 1 | 2 | 3 | | 01 | ○ | | | | 02 | | ○ | | | 03 | ○ | ○ | | | 04 | | | | ○ | 05 | ○ | | ○ | | 06 | | ○ | ○ | | 07 | ○ | ○ | ○ | | 08 | | | | ○ | 09 | ○ | | | ○ | 0A | | ○ | | ○ | 0B | ○ | ○ | | ○ | 0C | | | ○ | ○ | 0D | ○ | | ○ | ○ | 0E | | ○ | ○ | ○ | 0F | ○ | ○ | ○ | ○ | I/F | Error in No. of IPDUs | All stop | Insufficient number of IPDUs are detected when power is turned on. | Check model setting of P.C. board for servicing outdoor I/F P.C. board. Check connection of UART communication connector. Check A3-IPDU, fan IPDU, and I/F P.C. board for defect. |
| | A3-IPDU | | | Fan IPDU | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 1 | 2 | 3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 01 | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 02 | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 03 | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 04 | | | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 05 | ○ | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 06 | | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 07 | ○ | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 08 | | | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 09 | ○ | | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0A | | ○ | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0B | ○ | ○ | | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0C | | | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0D | ○ | | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0E | | ○ | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0F | ○ | ○ | ○ | ○ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) | |
|------------------------|---------------------------|---|-------------|-----------------------------------|------------------------------|---|---|
| Main remote controller | Outdoor 7-segment display | | | | | | |
| | Check code | | | | | | Sub-code |
| L30 | L30 | Detected indoor address | Indoor unit | External interlock of indoor unit | Stop of corresponding unit | Signal is present at external error input terminal (CN80) for 1 minute. | When external device is connected to CN80 connector: 1) Check for defect in external device. 2) Check for defect in indoor P.C. board. When external device is not connected to CN80 connector: 1) Check for defect in indoor P.C. board. |
| – | L31 | – | I/F | Extended IC error | Continued operation | There is part failure in P.C. board (I/F). | Check outdoor P.C. board (I/F). |
| P01 | – | – | Indoor unit | Indoor fan motor error | Stop of corresponding unit | | Check the lock of fan motor (AC fan). Check wiring. |
| P03 | P03 | – | I/F | Discharge temperature TD1 error | All stop | Discharge temperature (TD1) exceeds 115 °C. | Check outdoor service valves (gas side, liquid side) to confirm full opening. Check outdoor PMVs (PMV1, 2, 4) for clogging. Check resistance characteristics of TD1 sensor. Check for insufficiency in refrigerant quantity. Check for defect in 4-way valve. Check for leakage of SV4 circuit. Check SV4 circuit (wiring or installation error in SV41, SV42 or SV43). |
| P04 | P04 | 01: Compressor 1 side 02: Compressor 2 side 03: Compressor 3 side | IPDU | Activation of high-pressure SW | All stop | High-pressure SW is activated. | Check connection of high-pressure SW connector. Check for defect in Pd pressure sensor. Check outdoor service valves (gas side, liquid side) to confirm full opening. Check for defect in outdoor fan. Check for defect in outdoor fan motor. Check outdoor PMVs (PMV1, 2) for clogging. Check indoor / outdoor heat exchangers for clogging. Check for short-circuiting of outdoor suction / discharge air flows. Check SV2 circuit for clogging. Check for defect in outdoor P.C. board (I/F). Check for error in indoor fan system (possible cause of air flow reduction). Check opening status of indoor PMV. Check indoor-outdoor communication line for wiring error. Check for faulty operation of check valve in discharge pipe convergent section. Check gas balancing SV4 valve circuit. Check SV5 valve circuit. Check for refrigerant overcharging. |

| Main remote controller | Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) |
|------------------------|---------------------------|---|-----------------------|--|----------------------------|--|---|
| | Outdoor 7-segment display | | | | | | |
| | Check code | Sub-code | | | | | |
| P05 | P05 | SMMS (Series 1) 01: Open phase detected 02: Phase sequence error | I/F | Open phase detected, Phase sequence error | All stop | Phase sequence error was detected when the power is turned on. Open phase error was detected when the power is turned on. | Check the phase sequence of outdoor power wiring. Check the outdoor PC board (I/F) error. |
| | | SMMS-i (Series 4) 00: | I/F | Detection of open phase / phase sequence | All stop | Open phase is detected when power is turned on. Inverter DC voltage is too high (overvoltage) or too low (undervoltage). | Check for defect in outdoor P.C. board (I/F). |
| | | 01: Compressor 1 side 02: Compressor 2 side 03: Compressor 3 side | | Inverter DC voltage (Vdc) error (compressor) MG-CTT error | | | |
| P07 | P07 | 01: Compressor 1 side 02: Compressor 2 side 03: Compressor 3 side | IPDU I/F | Heat sink overheating error | All stop | Temperature sensor built into IGBT (TH) is overheated. | Check power supply voltage. Check outdoor fan system error. Check heat sink cooling duct for clogging. Check IGBT and heat sink for thermal performance for faulty installation. (e.g. mounting screws and thermal conductivity) Check for defect in A3-IPDU. (faulty IGBT built-in temperature sensor (TH)) |
| P10 | P10 | Detected indoor address | Indoor unit | Indoor overflow error | All stop | Float switch operates. Float switch circuit is open-circuited or disconnected at connector. | Check float switch connector. Check operation of drain pump. Check drain pump circuit. Check drain pipe for clogging. Check for defect in indoor P.C. board. |
| P12 | — | — | Indoor unit | Indoor fan motor error | Stop of corresponding unit | Motor speed measurements continuously deviate from target value. Overcurrent protection is activated. | Check connection of fan connector and wiring. Check for defect in fan motor. Check for defect in indoor P.C. board. Check impact of outside air treatment (OA). Check static pressure setting. |

MG-CTT: Magnet contactor

| Main remote controller | Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) |
|------------------------|---------------------------|------------------|-----------------------|---|---------------|---|--|
| | Outdoor 7-segment display | | | | | | |
| | Check code | Sub-code | | | | | |
| P13 | P13 | — | I/F | Outdoor liquid backflow detection error | All stop | <During cooling operation> When system is in cooling operation, high pressure is detected in follower unit that has been turned off. <During heating operation> When system is in heating operation, outdoor PMV 1 or 2 continuously registers opening of 100p or less while under SH control. | Check full-close operation of outdoor PMV (1, 2, 4). Check for defect in Pd or Ps sensor. Check gas balancing circuit (SV2) for clogging. Check balance pipe. Check SV3B circuit for clogging. Check defect in outdoor P.C. board (I/F). Check capillary of oil separator oil return circuit for clogging. Check for leakage of check valve in discharge pipe convergent section. |
| P15 | P15 | 01: TS condition | I/F | Gas leakdetection (TS1 condition) | All stop | Protective shutdown due to sustained suction temperature at or above judgment criterion for at least 10 minutes is repeated four times or more. <TS error judgment criterion> In cooling operation: 60 °C In heating operation: 40 °C | Check for insufficiency in refrigerant quantity. Check outdoor service valves (gas side, liquid side) to confirm full opening. Check PMVs (PMV1, 2) for clogging. Check resistance characteristics of TS1 sensor. Check for defect in 4-way valve. Check SV4 circuit for leakage |
| | | 02: TD condition | I/F | Gas leak detection (TD condition) | All stop | Protective shutdown due to sustained discharge temperature (TD1, TD2 or TD3) at or above 108 °C for at least 10 minutes is repeated four times or more. | Check for insufficiency in refrigerant quantity. Check PMVs (PMV 1, 2) for clogging. Check resistance characteristics of TD1, TD2 and TD3 sensors. Check indoor filter for clogging. Check piping for clogging. Check SV4 circuit (for leakage or coil installation error). |
| P17 | P17 | — | I/F | Discharge temperature TD2 error | All stop | Discharge temperature (TD2) exceeds 115 °C. | Check outdoor service valves (gas side, liquid side) to confirm full opening. Check outdoor PMVs (PMV1, 2, 4) for clogging. Check resistance characteristics of TD2 sensor. Check for defect in 4-way valve. Check SV4 circuit for leakage. Check SV4 circuit (for wiring or installation error involving SV41, SV42 and SV43). |
| P18 | P18 | — | I/F | Discharge temperature TD3 error | All stop | Discharge temperature (TD3) exceeds 115 °C. | Check outdoor service valves (gas side, liquid side) to confirm full opening. Check outdoor PMVs (PMV1, 2, 4) for clogging. Check resistance characteristics of TD3 sensor. Check for defect in 4-way valve. Check SV43 circuit for leakage. Check SV4 circuit (for wiring or installation error involving SV41, SV42 and SV43). |


| Main remote controller | Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) |
|------------------------|---------------------------|---------------------------|-----------------------|--|---------------|--|--|
| | Outdoor 7-segment display | | | | | | |
| | Check code | Sub-code | | | | | |
| P19 | P19 | Detected outdoor unit No. | I/F | 4-way valve reversing error | All stop | Abnormal refrigerating cycle data is collected during heating operation. | Check for defect in main body of 4-way valve. Check for coil defect in 4-way valve and loose connection of its connector. Check resistance characteristics of TS1 and TE1 sensors. Check output voltage characteristics of Pd and Ps pressure sensors. Check for wiring error involving TE1 and TL sensors. |
| P20 | P20 | — | I/F | Activation of high-pressure protection | All stop | Pd sensor detects pressure equal to or greater than 3.6 MPa. | Check for defect in Pd pressure sensor. Check service valves (gas side, liquid side) to confirm full opening. Check for defect in outdoor fan. Check for defect in outdoor fan motor. Check outdoor PMVs (PMV1, 2, 4) for clogging. Check indoor / outdoor heat exchangers for clogging. Check for short-circuiting of outdoor suction / discharge air flows. Check SV2 circuit for clogging. Check for defect in outdoor P.C. board (I/F). Check for defect in indoor fan system (possible cause of air flow reduction). Check opening status of indoor PMV. Check indoor-outdoor communication line for wiring error. Check for faulty operation of check valve in discharge pipe convergent section. Check gas balancing SV4 valve circuit. Check SV5 valve circuit. Check for refrigerant overcharging. |

| | | Check code | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) |
|------------------------|---------------------------|---|-----|------------------------|-------------|--|---|-------------------------|
| Main remote controller | Outdoor 7-segment display | | | | | | | |
| | Check code | Sub-code | | | | | | |
| P22 | P22 | SMMS (Series 1) 08: Out of step 0A: IDC activation 0E: Sync error 0F: Control error 06: Maximum rotation exceeded 04: Rotation difference error 0D: Lock 0C: Fan lock | PDU | Outdoor fan IPDU error | All stop | (Sub code: 08) FAN IPDU position detection circuit Position detection is not performed properly. | Check the fan motor. Check the connector connection for fan motor. Check the error of IPDU board for fan. | |
| | | | | | All stop | (Sub code: 0A) FAN IPDU overcurrent protection circuit Overcurrent was detected when the fan started running or during operation. | Check the fan motor. Check the error of IPDU board for fan. | |
| | | | | | All stop | (Sub code: 0E) FAN IPDU position detection circuit Position detection is not performed properly. | Check the fan motor. Check the connector connection for fan motor. Check the error of IPDU board for fan. | |
| | | | | | All stop | (Sub code: 0F) FAN IPDU position detection circuit Position detection is not performed properly. | Check the fan motor. Check the connector connection for fan motor. Check the error of IPDU board for fan. | |
| | | | | | All stop | (Sub code: 06) External factors such as blast Position detection is not performed properly. (Restarted in 6 seconds) | Check the fan motor. Check the error of IPDU board for fan. | |
| | | | | | All stop | (Sub code: 04) External factors such as blast The difference between targeted rotation and actual rotation is 25% or more. (Restarted in 6 seconds) | Check the fan motor. Check the error of IPDU board for fan. | |
| | | | | | All stop | (Sub code: 0D) FAN IPDU position detection circuit Position detection is not performed properly. (No wind) | Check the fan motor. Check the connector connection for fan motor. Check the error of IPDU board for fan. | |
| | | | | | All stop | (Sub code: 0C) External factors such as blast Position detection is not performed properly. (Wind blows) (Restarted in 6 seconds) | Check the fan motor. Check the error of IPDU board for fan. | |

| Check code | | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) |
|------------------------|---------------------------|--|-----------------------|--|----------------------------|---|--|
| Main remote controller | Outdoor 7-segment display | | | | | | |
| | Check code | Sub-code | | | | | |
| P22 | P22 | SMMS-i (Series 4) 0*: IGBT circuit 1*: Position detection circuit error 3*: Motor lockup error 4*: Motor current detection C*: TH sensor temperature error D*: TH sensor error E*: Inverter DC voltage error (outdoor fan) Note: Although letters 0 to F appear at locations indicated by " * ", please ignore them. | IPDU | Outdoor fan IPDU error | All stop | (Sub code: 0*) Fan IPDU over current protection circuit Flow of current equal to or greater than the specified value is detected during startup of the fan. | Check fan motor. Check for defect in fan IPDU P.C. board. |
| | | | | | All stop | (Sub code: 1*) Fan IPDU position detection circuit Position detection is not going on normally. | Check fan motor. Check connection of fan motor connector. Check for defect in fan IPDU P.C. board. |
| | | | | | All stop | (Sub code: 3*) Gusty wind, an obstruction, or another external factor Speed estimation is not going on normally. | Check fan motor. Check for defect in fan IPDU P.C. board. |
| | | | | | All stop | (Sub code: 4*) Fan IPDU over current protection circuit Flow of current equal to or greater than the specified value is detected during operation of the fan. | Check fan motor. Check connection of fan motor connector. Check for defect in fan IPDU P.C. board. |
| | | | | | All stop | (Sub code: C*) Higher temperature than the specified value is detected during operation of the fan. | Check fan motor. Check for defect in fan IPDU P.C. board. |
| | | | | | All stop | (Sub code: D*) The resistance value of the sensor is infinite or zero (open or short circuit). | Check for defect in fan IPDU P.C. board. |
| | | | | | All stop | (Sub code: E*) Fan IPDU DC voltage protection circuit The DC voltage higher or lower than the specified value is detected. | Check power voltage of the main power supply. Check for defect in fan IPDU P.C. board. Check connection of fan IPDU P.C. board. |
| P26 | P26 | 01: Compressor 1 side 02: Compressor 2 side 03: Compressor 3 side | IPDU | G-TR shortcircuit protection error | All stop | Overcurrent is momentarily detected during startup of compressor. | Check connector connection and wiring on A3-IPDU P.C. board. Check for defect in compressor (layer short-circuit). Check for defect in outdoor P.C. board (A3-IPDU). |
| P29 | P29 | 01: Compressor 1 side 02: Compressor 2 side 03: Compressor 3 side | IPDU | Compressor position detection circuit error | All stop | Position detection is not going on normally. | Check wiring and connector connection. Check for compressor layer short-circuit. Check for defect in A3-IPDU P.C. board. |
| P31 | — | — | Indoor unit | Other indoor error (group follower unit error) | Stop of corresponding unit | There is error in other indoor unit in group, resulting in detection of E07/L07/L03/L08. | Check indoor P.C. board. |

Errors detected by TCC-LINK central control device

| Check code | | | Location of detection | Description | System status | Error detection condition(s) | Check items (locations) |
|------------------------|--|----------|----------------------------|--|---------------------|---|---|
| Main remote controller | Outdoor 7-segment display | | | | | | |
| | Check code | Sub-code | | | | | |
| C05 | – | | TCC-LINK | TCC-LINK central control device transmission error | Continued operation | Central control device is unable to transmit signal. | Check for defect in central control device. Check for defect in central control communication line. Check termination resistance setting. |
| C06 | – | | | TCC-LINK central control device reception error | Continued operation | Central control device is unable to receive signal. | Check for defect in central control device. Check for defect in central control communication line. Check termination resistance setting. Check power supply for devices at other end of central control communication line. Check defect in P.C. boards of devices at other end of central control communication line. |
| C12 | – | | General-purpose device I/F | Blanket alarm for general-purpose device control interface | Continued operation | Error signal is input to control interface for general-purpose devices. | Check error input. |
| P30 | Differs according to nature of alarm-causing error | | TCC-LINK | Group control follower unit error | Continued operation | Error occurs in follower unit under group control. ([P30] is displayed on central control remote controller.) | Check check code of unit that has generated alarm. |
| | (L20 displayed.) | | | Duplicated central control address | Continued operation | There is duplication in central control addresses. | Check address settings. |

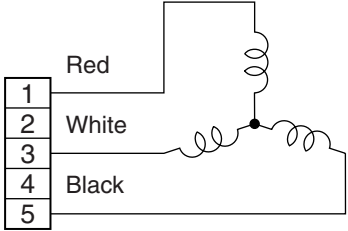
| Part name | Checking procedure | | | | | | | | | | | | | | | | |
|--|---|----------|------------------|-----------|--------------|-------------|--------------|-----------|--------------|----------|------------------|-----------|--------------|-------------|--------------|-----------|--------------|
| <p data-bbox="156 219 389 300">Concealed Duct High Static Pressure Type Fan motor</p> <p data-bbox="156 483 389 591">ICF-340W250-2 (MMD-AP0186HP* AP0246HP* AP0276HP*)</p> <p data-bbox="156 640 389 748">MF-340W350-1 (MMD-AP0366HP* AP0486HP* AP0566HP*)</p> | <p data-bbox="434 219 1145 246">Measure the resistance value of each winding by using the tester.</p> <div data-bbox="906 300 1085 327" style="text-align: right;">ICF-340W250-2</div> <table border="1" data-bbox="898 331 1430 535"> <thead> <tr> <th>Position</th> <th>Resistance value</th> </tr> </thead> <tbody> <tr> <td>Black-Red</td> <td>12.4 ± 1.2 Ω</td> </tr> <tr> <td>Black-White</td> <td>12.4 ± 1.2 Ω</td> </tr> <tr> <td>Red-White</td> <td>12.4 ± 1.2 Ω</td> </tr> </tbody> </table> <div data-bbox="906 566 1078 593" style="text-align: right;">MF-340W350-1</div> <table border="1" data-bbox="898 598 1430 801"> <thead> <tr> <th>Position</th> <th>Resistance value</th> </tr> </thead> <tbody> <tr> <td>Black-Red</td> <td>12.4 ± 1.2 Ω</td> </tr> <tr> <td>Black-White</td> <td>12.4 ± 1.2 Ω</td> </tr> <tr> <td>Red-White</td> <td>12.4 ± 1.2 Ω</td> </tr> </tbody> </table> <p data-bbox="1295 810 1430 837" style="text-align: right;">Under 20 °C</p> <div data-bbox="443 479 791 506" style="text-align: center;">Fan motor inside wiring diagram</div>  | Position | Resistance value | Black-Red | 12.4 ± 1.2 Ω | Black-White | 12.4 ± 1.2 Ω | Red-White | 12.4 ± 1.2 Ω | Position | Resistance value | Black-Red | 12.4 ± 1.2 Ω | Black-White | 12.4 ± 1.2 Ω | Red-White | 12.4 ± 1.2 Ω |
| Position | Resistance value | | | | | | | | | | | | | | | | |
| Black-Red | 12.4 ± 1.2 Ω | | | | | | | | | | | | | | | | |
| Black-White | 12.4 ± 1.2 Ω | | | | | | | | | | | | | | | | |
| Red-White | 12.4 ± 1.2 Ω | | | | | | | | | | | | | | | | |
| Position | Resistance value | | | | | | | | | | | | | | | | |
| Black-Red | 12.4 ± 1.2 Ω | | | | | | | | | | | | | | | | |
| Black-White | 12.4 ± 1.2 Ω | | | | | | | | | | | | | | | | |
| Red-White | 12.4 ± 1.2 Ω | | | | | | | | | | | | | | | | |

9-5. Sensor characteristics

Indoor unit


▼ Temperature sensor characteristics

Indoor TA sensor

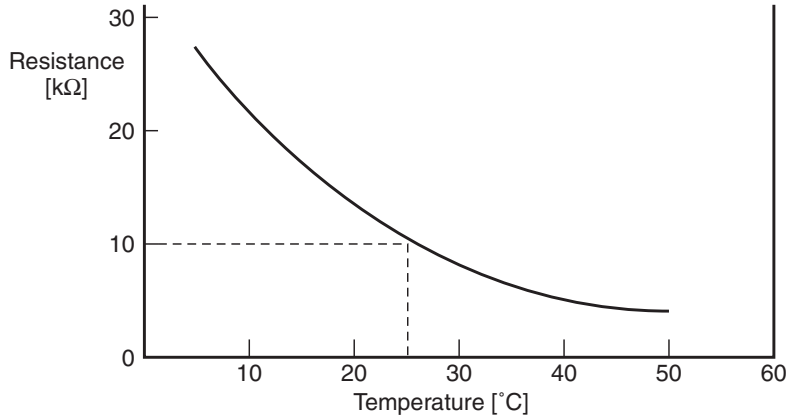


| Temperature [°C] | Resistance [kΩ] |
|------------------|-----------------|
| 0 | 33.9 |
| 5 | 26.1 |
| 10 | 20.3 |
| 15 | 15.9 |
| 20 | 12.6 |
| 25 | 10.0 |
| 30 | 8.0 |
| 35 | 6.4 |
| 40 | 5.2 |
| 45 | 4.2 |
| 50 | 3.5 |
| 55 | 2.6 |
| 60 | 2.4 |

Indoor TC1 sensor

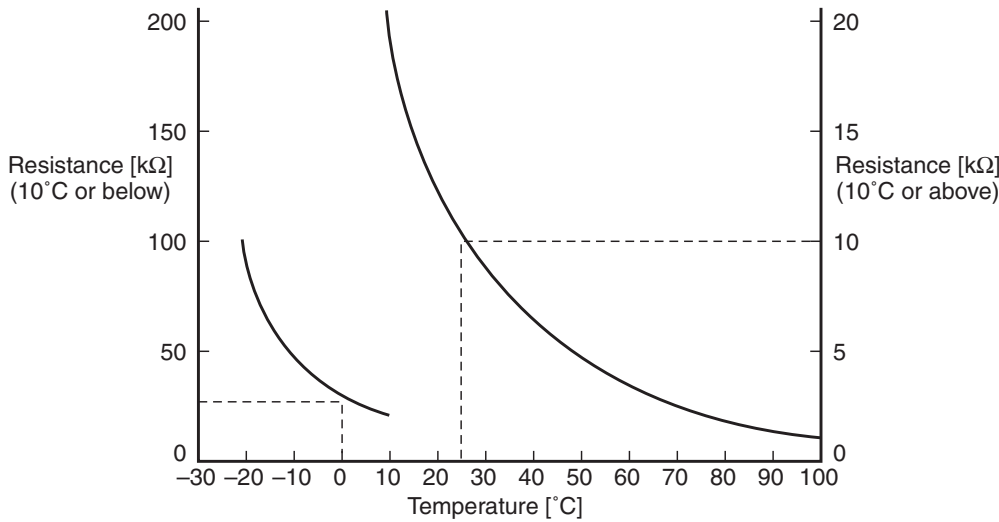

| Temperature [°C] | Resistance [kΩ] |
|------------------|-----------------|
| -20 | 99.9 |
| -15 | 74.1 |
| -10 | 55.6 |
| -5 | 42.2 |
| 0 | 32.8 |
| 5 | 25.4 |
| 10 | 19.8 |
| 15 | 15.6 |
| 20 | 12.4 |
| 25 | 10.0 |
| 30 | 8.1 |
| 35 | 6.5 |
| 40 | 5.3 |
| 45 | 4.4 |
| 50 | 3.6 |
| 55 | 3.0 |
| 60 | 2.5 |
| 65 | 2.1 |
| 70 | 1.8 |
| 75 | 1.5 |
| 80 | 1.3 |
| 85 | 1.1 |
| 90 | 1.0 |
| 95 | 0.8 |
| 100 | 0.7 |

Indoor TC2 and TCJ sensors

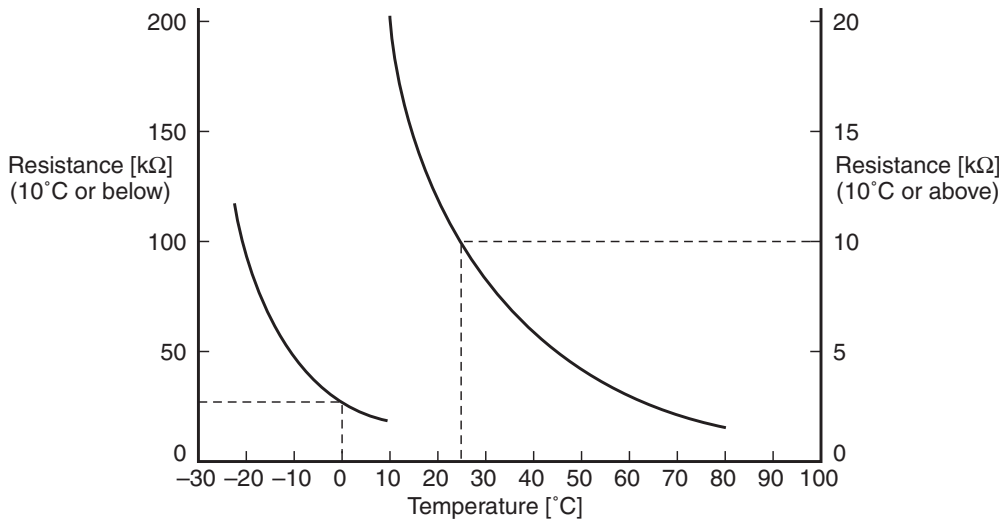

| Temperature [°C] | Resistance [kΩ] |
|------------------|-----------------|
| -20 | 115.2 |
| -15 | 84.2 |
| -10 | 62.3 |
| -5 | 46.6 |
| 0 | 35.2 |
| 5 | 26.9 |
| 10 | 20.7 |
| 15 | 16.1 |
| 20 | 12.6 |
| 25 | 10.0 |
| 30 | 8.0 |
| 35 | 6.4 |
| 40 | 5.2 |
| 45 | 4.2 |
| 50 | 3.5 |
| 55 | 2.8 |
| 60 | 2.4 |
| 65 | 2.0 |
| 70 | 1.6 |
| 75 | 1.4 |
| 80 | 1.2 |

10. P.C. BOARD EXCHANGE PROCEDURES

■ Indoor unit

10-1. Replacement of indoor P.C. boards

| Part code | Model type | P.C. board type |
|-----------|----------------------|-----------------|
| 43T6V690 | MMD-AP***6HP* series | MCC-1631 |

Points to note when replacing indoor P.C. board assembly

The electrically erasable programmable read-only memory (hereinafter EEPROM) mounted on an indoor P.C. board holds important setting data, including the type and capacity codes intrinsic to the model (set at the factory), as well as the line / indoor / group addresses, high ceiling adjustment setting and the like (during installation, either automatically or manually). Proceed with the replacement of an indoor P.C. board assembly in accordance with the procedure described below.

After completion of the work, check the settings again, including the indoor unit No. and group header / follower designation, and confirm the integrity of the refrigerating cycle by conducting a test operation, etc.

<Replacement procedure>

Method 1

If it is possible to turn on the indoor unit and read the setting data from the P.C. board to be replaced via a wired remote controller -

Reading EEPROM data: **Procedure 1**



Replacing P.C. board and turning on power: **Procedure 2**



Writing EEPROM data in new EEPROM: **Procedure 3**



Resetting power supply (applicable to all indoor units connected to remote controller in case of group operation)

Method 2

If it is not possible to turn on the indoor unit or read the setting data from the P.C. board to be replaced via a wired remote controller or operate the remote controller due to the failure of its power supply circuit -

Replacing EEPROM (For the location of this component and the method to replace it, see the “EEPROM location diagram” section.)

- The EEPROM on the P.C. board to be replaced needs to be removed and mounted on the service P.C. board.



Replacing P.C. board and turning on power: **Procedure 2**



Reading EEPROM data: **Procedure 1**

- If data cannot be read, go to Method 3.



Replacing EEPROM again (For the location of this component and the method to replace it, see the “EEPROM location diagram” section.)

- The old EEPROM, supplied with the P.C. board to be replaced and now mounted on the service P.C. board, needs to be replaced with the new EEPROM, supplied with the service P.C. board.



Replacing P.C. board and turning on power: **Procedure 2**



Writing EEPROM data in new EEPROM: **Procedure 3**



Resetting power supply (applicable to all indoor units connected to remote controller in case of group operation)

Method 3

If it is not possible to read the setting data due to the failure of the EEPROM itself -

Replacing P.C. board and turning on power: **Procedure 2**



Writing EEPROM data on basis of information supplied by customer (e.g. External static pressure selection setting and optional connection setting): **Procedure 3**




Resetting power supply (applicable to all indoor units connected to remote controller in case of group operation)

<EEPROM layout>

EEPROM is attached to IC socket. To remove it, use a pair of tweezers, etc.







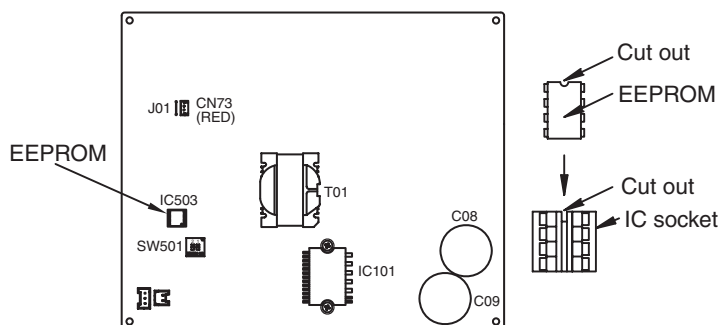
To attach EEPROM, arrange the direction as shown in the following figures.

” In exchanging time, pay attention not to bend the lead wire of IC.



Procedure 1: reading setting data from EEPROM

(Read the setting data from EEPROM, including both the factory settings and any modifications made to them on site.)


- 1** Push the  +  +  buttons simultaneously and hold for at least 4 seconds. (This number corresponds to the same number shown on the Remote Controller Operation Diagram.)
 - * In the case of group control, the unit No. displayed first is the indoor unit No. of the header unit.
At the same time, the CODE No. (DN code) 10 is displayed, and the fan of the selected indoor unit comes on, with the louver swinging, depending on the model.
- 2** Each time the  button (left side of the button) is pushed, one of the indoor unit No. under group control is displayed in turn.
 - * The fan of the selected indoor unit comes on, with the louvers swinging, depending on the model.
- 3** The  button allows you to move the CODE No. (DN code) up / down by one place.
- 4** First, change the CODE No. (DN code) from 10 to 01. (To set filter sign lighting time)
Jot down the setting data displayed.
- 5** Change the CODE No. (DN code) using the  button.
Again, jot down the setting data displayed.
- 6** Repeat step 5 until all the setting data has been jotted down. (See the CODE No. list.)
 - * CODE No. (DN code) go from 01 to FF with a few gaps along the way.
- 7** When finished, push the  button to bring the system back to normal off state.
(It takes the system about 1 minute to become responsive to remote controller operation.)

CODE No. (DN code) necessary at minimum

| DN | Contents |
|----|----------------------|
| 10 | Type |
| 11 | Indoor unit capacity |
| 12 | Line address |
| 13 | Indoor address |
| 14 | Group address |

The type and capacity of the indoor unit are necessary for fan speed setting.

Remote controller operation diagram

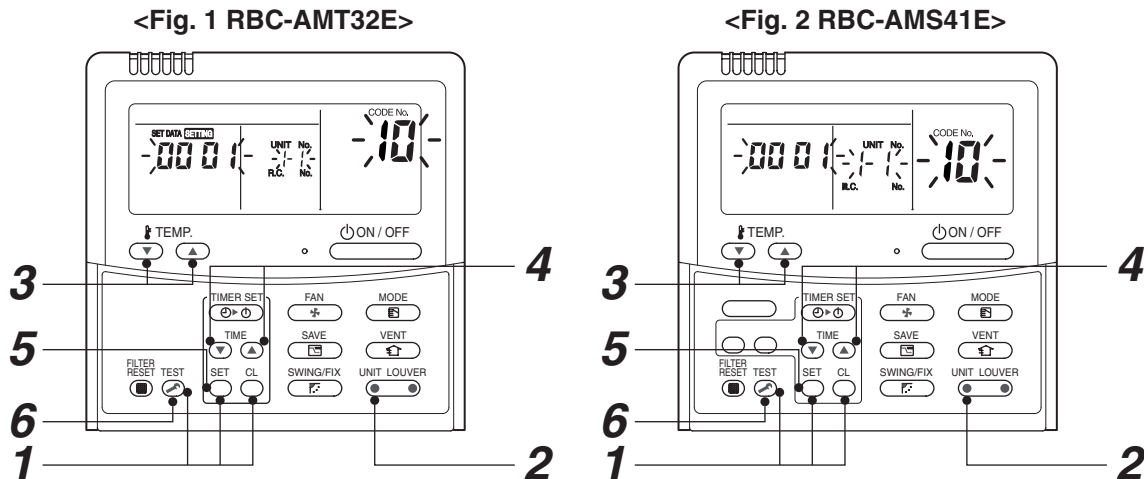

Procedure 2: replacing P.C. board


1 Replace the faulty P.C. board with a service P.C. board.

Be sure to replicate the old jumper setting (removal), switch setting (SW501), and connector short-circuit setting (e.g. CN34) on the service P.C. board. (See the diagram at below.)

⚠ CAUTION

Don't remove the materials.
No materials. The power I.C. (IC101) may break.

< The front of the P. C. Board > < The Back of the P. C. Board >

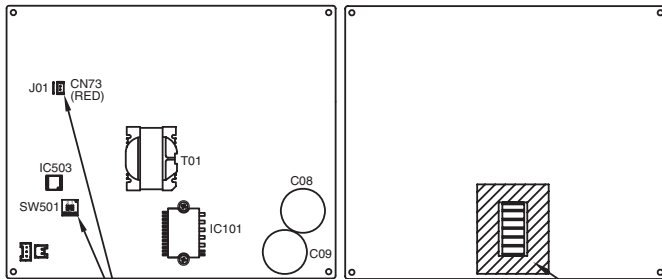

Perform the same setting of the jumper wire(J01) setting(cut), switch(SW501) as the setting of the P. C. board before replacement

Materials

2 It is necessary to establish a one-to-one correspondence between the indoor unit being serviced and the remote controller.

Turn on the indoor unit using one of the methods described below according to the system configuration.

(1) Single (stand-alone) operation

Turn on the indoor unit and proceed to **Procedure 3**.

(2) Group operation

A) If it is possible to selectively turn on the indoor unit being serviced

Turn on the indoor unit being serviced and proceed to **Procedure 3**.

B) If it is not possible to selectively turn on the indoor unit being serviced (**Case 1**)

a) Temporarily disconnect the group control wiring from terminals A and B of the indoor unit being serviced.

b) Connect the remote controller wiring to the terminals, turn on the indoor unit, and proceed to **Procedure 3**.


* If this method cannot be used, proceed to the alternative method described below (**Case 2**).

C) If it is not possible to selectively turn on the indoor unit being serviced (**Case 2**)


a) Remove the CN41 connectors of all other indoor units in the same group.

b) Turn on the indoor unit and proceed to **Procedure 3**.

Case 1

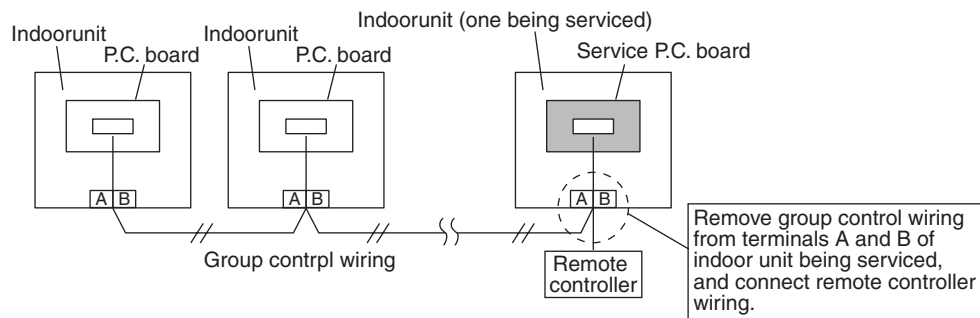

Case 2

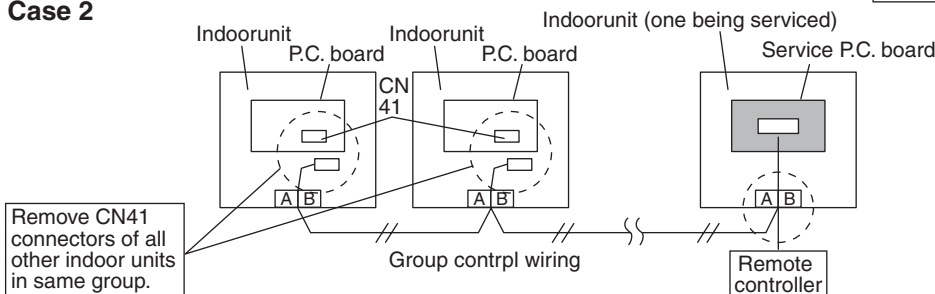

* Be sure to restore the temporarily removed group control wiring and CN41 connectors to their initial states after Procedure 3 has been completed.

Procedure 3: writing setting data in EEPROM

(The EEPROM of the service P.C. board has been set to the factory default values.)

- 1 Push the + + buttons simultaneously and hold for at least 4 seconds. (This number corresponds to the same number shown on the Remote Controller Operation Diagram.)

(Under UNIT No., ALL is displayed.)

At the same time, the CODE No. (DN code) 10 is displayed, and the fan of the indoor unit comes on, with the louver swinging, depending on the model.

- 2 Push the left part of the button (left side of the button) to display the indoor unit No. one by one in the group control. Specify the indoor unit No. whose service PC board was replaced.

(This operation is not available if the UNIT No. shows ALL.)


- 3 The button allows you to moved the CODE No. (DN code) up / down by one place.

- 4 First, set the type and capacity codes of the indoor unit.

(Changing the type and capacity codes in EEPROM overwrites the factory default settings.)

- (1) Set the CODE No. (DN code) to 10 (no change)
- (2) Use the button to select the type.
(For example, 0001 is for the 4-way cassette type.) - See the CODE No. list.
- (3) Push the button. (The display should change from flashing to steady.)
- (4) Use the button to set the CODE No. (DN code) to 11.
- (5) Use the button to set the capacity code.
(For example, 0012 is for the 027 type.) - See the CODE No. list.
- (6) Push the button. (The display should change from flashing to steady.)
- (7) Push the button to bring the system back to normal off state.

<Fig. 1 RBC-AMT32E>

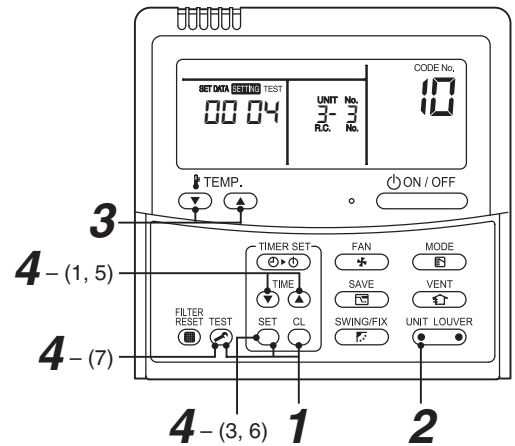

- 5 Next, write any setting changes made on-site after installation, such as address settings, in the EEPROM. Perform the tasks specified in step 1 again.

- 6 Use the button to set the CODE No. (DN code) to 01 (To set filter sign lighting time)

- 7 Check the value displayed with the value jotted down in Procedure 1 and information proved by the customer.

- (1) If there is a discrepancy, change the setting in accordance with the jotted-down value, and push the button.
(The display should change from flashing to steady.)

- (2) If there is no discrepancy, do nothing.

- 8 Use the button to change the CODE No. (DN code).

Again, check the value, and change the setting if necessary.

- 9 Repeat steps 6 and 7 until all the settings are checked.

- 10 When finished, push the button to bring the system back to normal off state.


In the case of group operation, turn the unit off, reconnect the indoor-indoor group control wiring and CN41 connectors, and turn on all the indoor units.

(It takes the system about 1 minute to become responsive to remote controller operation.)

- * CODE No. (DN code) go from 01 to FF with a few gaps along the way.

If you realize you have wrongly corrected a certain setting after pushing the , you can recover the initial value by pushing the , provided that the CODE No. (DN code) is yet to be changed.

<Fig. 1 RBC-AMT32E>

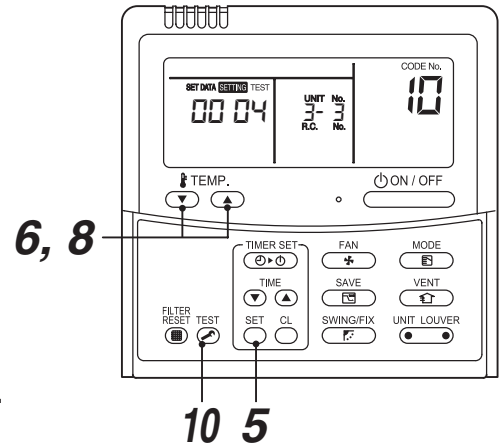

CODE No. list (Example)

| CODE No. (DN) | Item | Setting data | Factory-set value |
|---------------|---|--------------|--------------------------------------|
| 01 | Filter sign lighting time | | Depending on Type |
| 02 | Filter pollution leve | | 0000: standard |
| 03 | Central control address | | 0099: Not determined |
| 06 | Heating suction temperature shift | | 0002: +2 °C (Floor standing type: 0) |
| 0d | Existence of automatic COOL/HEAT mode | | 0001: No auto mode cooling / heating |
| 0F | Cooling only | | 0000: Heat pump |
| 10 | Type | | Depending on model type |
| 11 | Indoor unit capacity | | Depending on capacity type |
| 12 | System address | | 0099: Not determined |
| 13 | Indoor unit address | | 0099: Not determined |
| 14 | Group address | | 0099: Not determined |
| 1E | Temperature range of cooling / heating automatic SW control point | | 0003: 3 deg (Ts } 1.5) |
| 28 | Power failure automatic recovery | | 0000: None |
| 31 | Vent Fan (Single operation) | | 0000: Not possible |
| 32 | Sensor SW (Selection of static pressure) | | 0000: Body sensor |
| 5d | High ceiling select | | 0000: Standard |
| 60 | Timer setting (wired remote controller) | | 0000: Available |
| F0 | Swing mode | | 0001: Standard |
| D0 | Power save operation | | 0001: Standard |

Type Code No. [10]

| Setting data | Type | Model abb. name |
|--------------|--|-----------------|
| 0006 | Concealed Duct High Static Pressure Type | MMD-AP***HP* |

Indoor unit capacity CODE No. [11]

| Setting data | Model | Setting data | Model |
|--------------|----------|--------------|----------|
| 0000* | Invalid | 0016 | — |
| 0001 | 007 type | 0017 | 048 type |
| 0002 | — | 0018 | 056 type |
| 0003 | 009 type | 0019 | — |
| 0004 | — | 0020 | — |
| 0005 | 012 type | 0021 | 072 type |
| 0006 | — | 0022 | — |
| 0007 | 015 type | 0023 | 096 type |
| 0008 | — | 0024 | — |
| 0009 | 018 type | 0025 | — |
| 0010 | — | 0026 | — |
| 0011 | 024 type | 0027 | — |
| 0012 | 027 type | 0028 | — |
| 0013 | 030 type | ~ | — |
| 0014 | — | 0034 | — |
| 0015 | 036 type | | |

11. DETACHMENTS

⚠ WARNING

Be sure to stop operation of the air conditioner before work and then turn off switch of the breaker.

⚠ CAUTION





Be sure to put on gloves during working time; otherwise an injury will be caused by a part, etc.


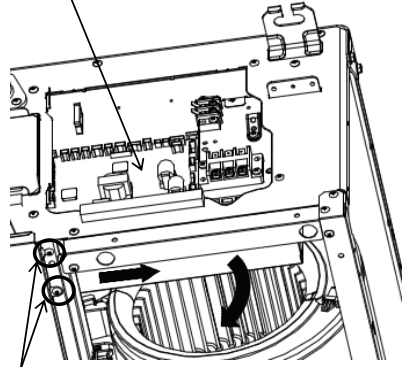

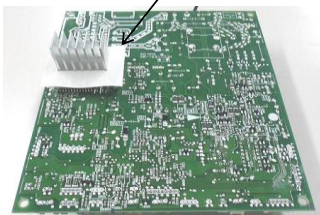
NOTE


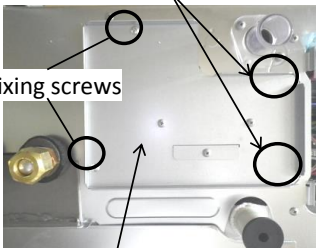
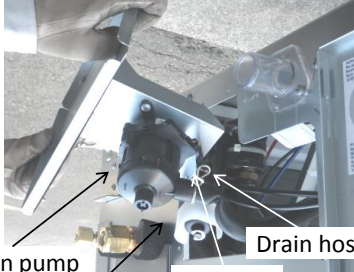
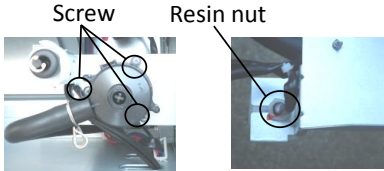

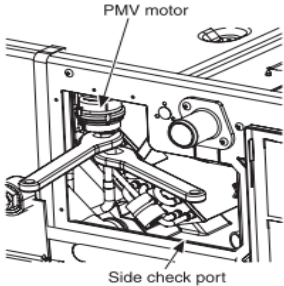
In a section, Detachments, the models are expressed as follows for convenience.


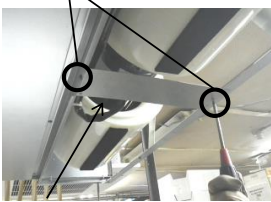

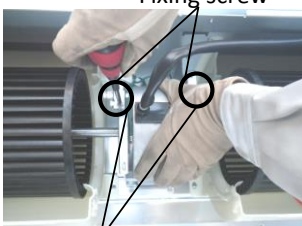
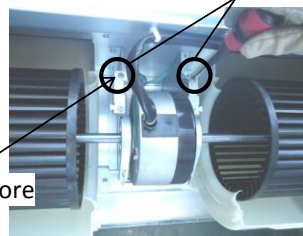
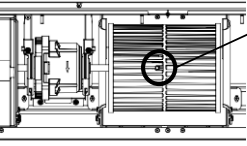
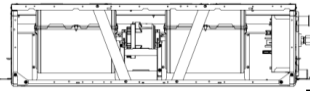
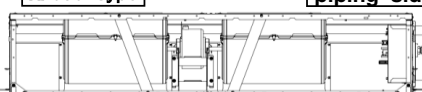
AP018 : MMD—AP0186HP1-E(TR) to AP0276HP1-E(TR)


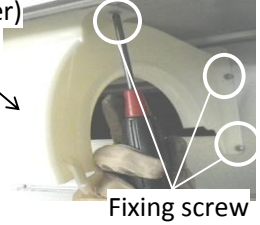
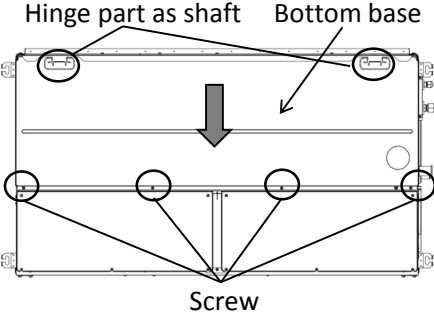

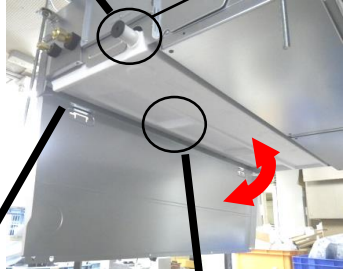
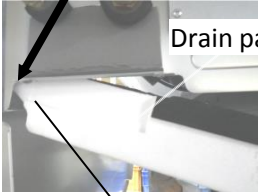

AP036 : MMD—AP0366HP1-E(TR) to AP0566HP1-E(TR)

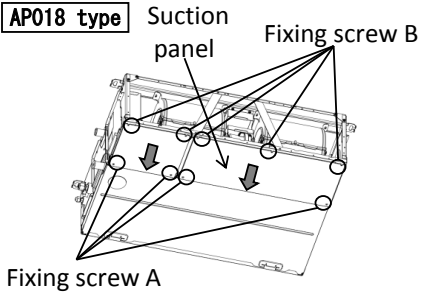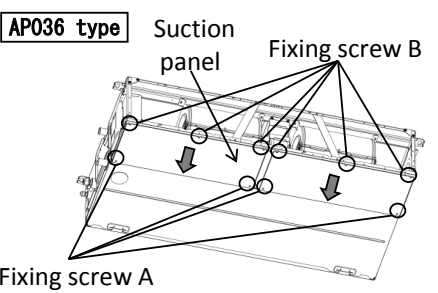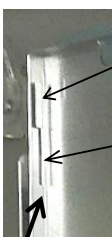
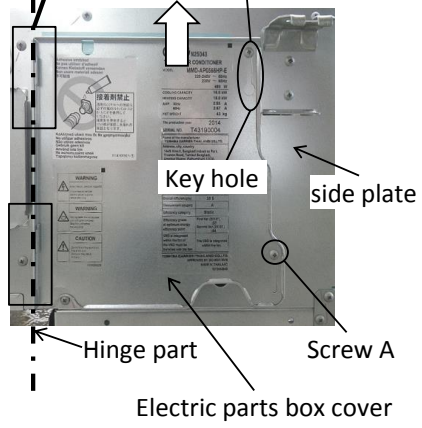

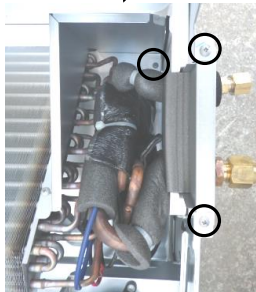
| No. | Part name | Procedure | Remarks |
|-----|--------------------------|--|--|
| ① | Suction panel | <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the fixing screws A which fix the suction panel. Loosen the fixing screws B. 2) Slide the suction panel to the arrow side and then remove the panel. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Hook the suction panel to the fixing screws B and tighten screws. 2) Attach the removed screws A to the original positions. | <p>AP018 type</p>  <p>AP036 type</p>  |
| ② | Electric parts box cover | <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Remove the screw A of the electric parts box cover to loosen screw B. 2) As shown in the right figure, when sliding it toward arrow direction and pulling to this side, the electric parts cover opens using the hinge part as a shaft. 3) Take off the slit of the electric parts box cover from the projection of the side plate and then remove the cover. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Hook the slit of the electric parts box cover to the projection of the side plate, close the cover, enter screw B in the Key hole and then slide it. 2) Fix the electric parts box cover by tightening with screws A and B. |   |

| No. | Part name | Procedure | Remarks |
|-----|--------------------|---|--|
| ③ | Electric parts box | <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform works of 1 of ①. 2) Remove the indoor/outdoor connecting wire and remote controller wire from each terminal block. 3) Remove the connectors which connected from the control P.C. board to other parts. <p>NOTE</p> <hr/> <p>First unlock the housing and then remove the connectors.</p> <hr/> <p>CN34 : Float switch (3P, Red) CN41 : Remote controller terminal block (3P, Blue) (Screw part of terminal block, 2P.) CN504 : Drain pump (2P, White) CN67 : Power supply terminal block (5P: Black) (Screw part of terminal block, 3P.) CN101 : TC sensor (2P: Black) CN102 : TCJ sensor (2P, Red) CN104 : Room temperature (2P, Yellow)</p> <ol style="list-style-type: none"> 4) Remove screws. (Ø4 x 10, 2 pcs.) 5) Slide the electric parts box toward the arrow mark and then remove the box from the bottom side of the main unit. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Attach the electric parts box and then perform wiring as original. <p>NOTE 1</p> <hr/> <p>Check there is no missing or contact failure on the connectors.</p> <hr/> <p>NOTE 2</p> <hr/> <p>Be sure to perform wiring as original.</p> <hr/> <ol style="list-style-type: none"> 2) Attach suction panel and electric parts box cover as original. |  <p>Electric parts box</p>  <p>Screw</p> |
| ④ | Control P.C. board | <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform work of 1 of ③. (In the works of 1 of ③, removal of the control P.C. board is available even if you do not perform works after ③). 2) Unlock the card edge spacers (5 positions) in the electric parts box to remove the control P.C. board. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Mount control P.C. board in the electric parts box as original. 2) Attach the electric parts box as original. 3) Be sure to perform wiring as original in the electric parts box. <p>NOTE</p> <hr/> <p>Check there is no missing or contact failure on the connectors.</p> <hr/> <ol style="list-style-type: none"> 4) Attach suction panel and electric parts box cover as original. | <p>Control P.C. board</p>  <p>CAUTION When replacing PC. board, check no-mex paper is attached.</p>  |

| No. | Part name | Procedure | Remarks |
|-----|----------------------------|---|--|
| ⑤ | Drain pump Float switch | <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform works until opening of the electric parts box cover in works of 1 of ②. 2) Remove the connectors which connect to float switch of the drain pump from the control P.C. board. CN34 : Float switch (3P, Red) CN504 : Drain pump (2P, White) 3) Loosen the fixing screws (2 positions) of the check cover and then take out the check cover. (To the check cover, the drain pump and float switch are attached.) 4) Pick up the hose band, shift from the pump connecting part, remove the drain hose and then remove the check cover. 5) Remove screws which fix the drain pump assembly and then remove the drain pump assembly. (∅4 x 10, 3 pcs.) 6) Remove the resin nut switch and then remove the float switch from the fixing plate. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Using the removed screws, fix the drain pump assembly as original. 2) Using the removed resin nut, fix the float switch as original. 3) Connect the drain hose as original and then attach the hose band. <p>NOTE</p> <hr/> <p>Insert the drain hose to the end of the drain pump.</p> <hr/> <ol style="list-style-type: none"> 4) Connect the drain pump and the float switch wiring as original and close the electric parts box cover for fixing. Be sure to perform wiring in the electric parts box as original. 5) Enter the corners (2 positions) of the check cover in the entering part and then fix it using fixing screws (2 positions). |  <p>Connector position CN34 CN504</p>  <p>Entering part Fixing screws Check cover</p>  <p>Drain pump Float switch Hose band Drain hose</p>  <p>Screw Resin nut</p> |
| ⑥ | PMV motor | <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform works until opening of the electric parts box cover in works of 1 of ②. 2) Perform works until opening of the check cover in works of 1 of ⑤. 3) Remove relay connector of the PMV motor. 4) As shown in the right figure, using a double spanner, open the check port at the side face and then remove the PMV motor. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Connect the relay connector of the PMV motor as original and close the electric parts box cover for fixing. Be sure to perform wiring in the electric parts box as original. 2) Enter the corners (2 positions) of the check cover in the entering part and then fix it using fixing screws (2 positions). |  <p>Relay connector of PMV motor</p>  <p>PMV motor Side check port</p> |

| No. | Part name | Procedure | Remarks |
|-----|--------------------------------|---|--|
| ⑦ | Fan motor, Fan, Fan case | <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Perform works until opening of the electric parts box cover in works of 1 of ②. 2) Remove connectors for fan motor wiring from control P.C. board. CN333 : Motor power supply (5P: White) CN334 : Motor control (5P: White) 3) Remove the fixing screws (Ø4x 8, 2 pcs.) of the fixing plate. 4) Remove the screw C from the fan case (under), open and remove it while pressing claws of both sides of the case. 5) Remove a fixing screw of ferrite core and unscrew a grounding only for AP036Type. 6) Remove the fixing screws (Ø5 x 10, 2 pcs.) of the motor band (2 pcs.) at the side of the fan motor. (The fan motor becomes temporal hanging status by fixing plate.) 7) While supporting the fan motor by hands, remove the fixing plate from the motor base to remove the fan motor. 8) Loosen the hexagonal screw hole of the fan and then pull out the fan from the shaft. (Hexagon wrench : 3mm) 9) Remove the fixing screws (Ø4x 10, 6 pcs.) of the fan case (upper) And remove the fan case (upper). <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Attach the fan case (upper) as original position with the fixing screws (Ø4x 10, 6 pcs.) . 2) Insert the fan in the shaft while adjusting to match the hexagonal screw hole to the groove of the shaft. 3) Perform screwing the fan motor with the motor band (Ø5 x 10, 2 pcs.) <p>NOTE</p> <p>Match the fan motor with turning direction of the fan and fix so that the AP018 type and AP036 type is at opposite side refrigerant piping.</p> <ol style="list-style-type: none"> 4) While positioning so that the fan is at the center of the fan case (upper), fix the fan with hexagonal screw. <p>NOTE</p> <p>Be sure to use a torque wrench for fixing and tighten with 4.9N·m or more.</p> <ol style="list-style-type: none"> 5) Attach the fan case (under) as original and check the fan turns smoothly without coming to contact with the fan case, and fix the fan case (under) with screw C. 6) Attach the fixing plate as original position. 7) Connect the fan motor wirings as before, close and fix the electric parts box cover. Be sure to perform wirings as original in the electric parts box. 8) Attach the suction panel as original position. | <p>Fan motor wiring CN333 CN334</p>  <p>Screw</p>  <p>Fixing plate</p>  <p>Screw C Fan case (under)</p>  <p>Fixing screw Motor band</p> <p>AP036 type only</p>  <p>Fixing screw Ferrite core</p>  <p>Screw with hexagonal hole</p> <p>AP018 type</p>  <p>AP036 type</p>  <p>Refrigerant piping side</p> |

| No. | Part name | Procedure | Remarks |
|-----|--------------------------------|--|---|
| ⑦ | Fan motor, Fan, Fan case | <p>~ Continuance from the page in front ~</p> <p>⚠ CAUTION When replacing the fan motor, be sure to exchange the clamp filter with the fan motor lead wire.</p> |  <p>Fan case (upper)</p>  <p>Fixing screw</p> |
| ⑧ | Drain pan | <p>1. Detachment</p> <p>1) Remove the drain cap and then extract the drain water accumulated in the drain pan.</p> <p>NOTE <u>When removing the drain cap, be sure to receive drain water using a bucket, etc.</u></p> <p>2) Loosen screws which fix the bottom base. (For AP018 3 positions and AP036 2 positions) Remove the fixing screws(2pcs.)at the center only for AP036Type.</p> <p>3) As shown in the right figure, when sliding the bottom base toward arrow direction, it opens using the hinge part as a shaft.</p> <p>4) Hold handle of the drain pan and then pull off slowly.</p> <p>⚠ CAUTION <u>When removing the drain pan, do not hold the drain socket. (Water leakage may be caused.)</u></p> <p>2. Attachment</p> <p>1) First hook the thin side of the drain pan to the discharge port panel and then push in the thick side.</p> <p>2) Close the bottom base and fix it with screws.</p> |  <p>Hinge part as shaft Bottom base</p> <p>Screw</p>  <p>Do not hold the drain socket.</p> <p>NG</p>  <p>Drain socket</p>  <p>Drain pan</p> <p>Discharge port panel Handle</p>  |

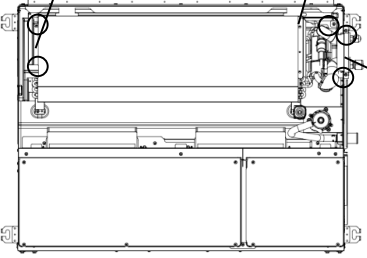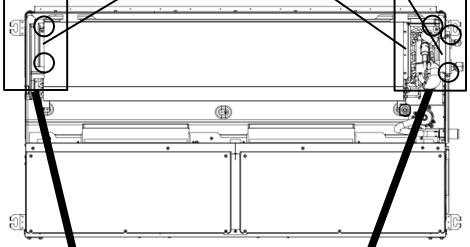
| No. | Part name | Procedure | Remarks |
|-----|----------------|---|--|
| ⑨ | Heat exchanger | <p>1. Detachment</p> <ol style="list-style-type: none"> 1) Recover the refrigerant gas and then remove the refrigerant pipe of the indoor unit. 2) Perform works of 1 of ⑧. 3) Pull out TC sensor and TCJ sensor wirings from the holder. 4) Remove the screws ($\varnothing 4 \times 8$, 2 pcs.) and then remove the piping cover. 5) Remove screws ($\varnothing 4 \times 8$, 1pc.) of the heat exchanger fixed plate. 6) While holding the heat exchanger, remove the fixed screws ($\varnothing 4 \times 8$, 2 pcs.) of the end plate and then take out the heat exchanger slowly. <p>2. Attachment</p> <ol style="list-style-type: none"> 1) Set the heat exchanger at the original position and fix it as before, using screws which removed the end plate, heat exchanger fixed plate and piping cover. 2) Enter TC sensor and TCJ sensor wirings in the holder and then perform wirings as original. 3) Attach the drain pan and the bottom base as original. | <p>○ : Screw position</p> <p>AP018 type</p> <p>End plate Heat exchanger fixed plate</p>  <p>Piping cover</p> <p>AP036 type</p> <p>Heat exchanger fixed plate</p> <p>End plate Piping cover</p>    |

NOTE

After assembling, please confirm that there are not an abnormal sound, vibration, a puncture. Please check an exchange point when you have a problem.


12. EXPLODED VIEWS AND PARTS LIST

12-1. MMD-AP0186HP1-E(TR), MMD-AP0246HP1-E(TR), MMD-AP0276HP1-E(TR)

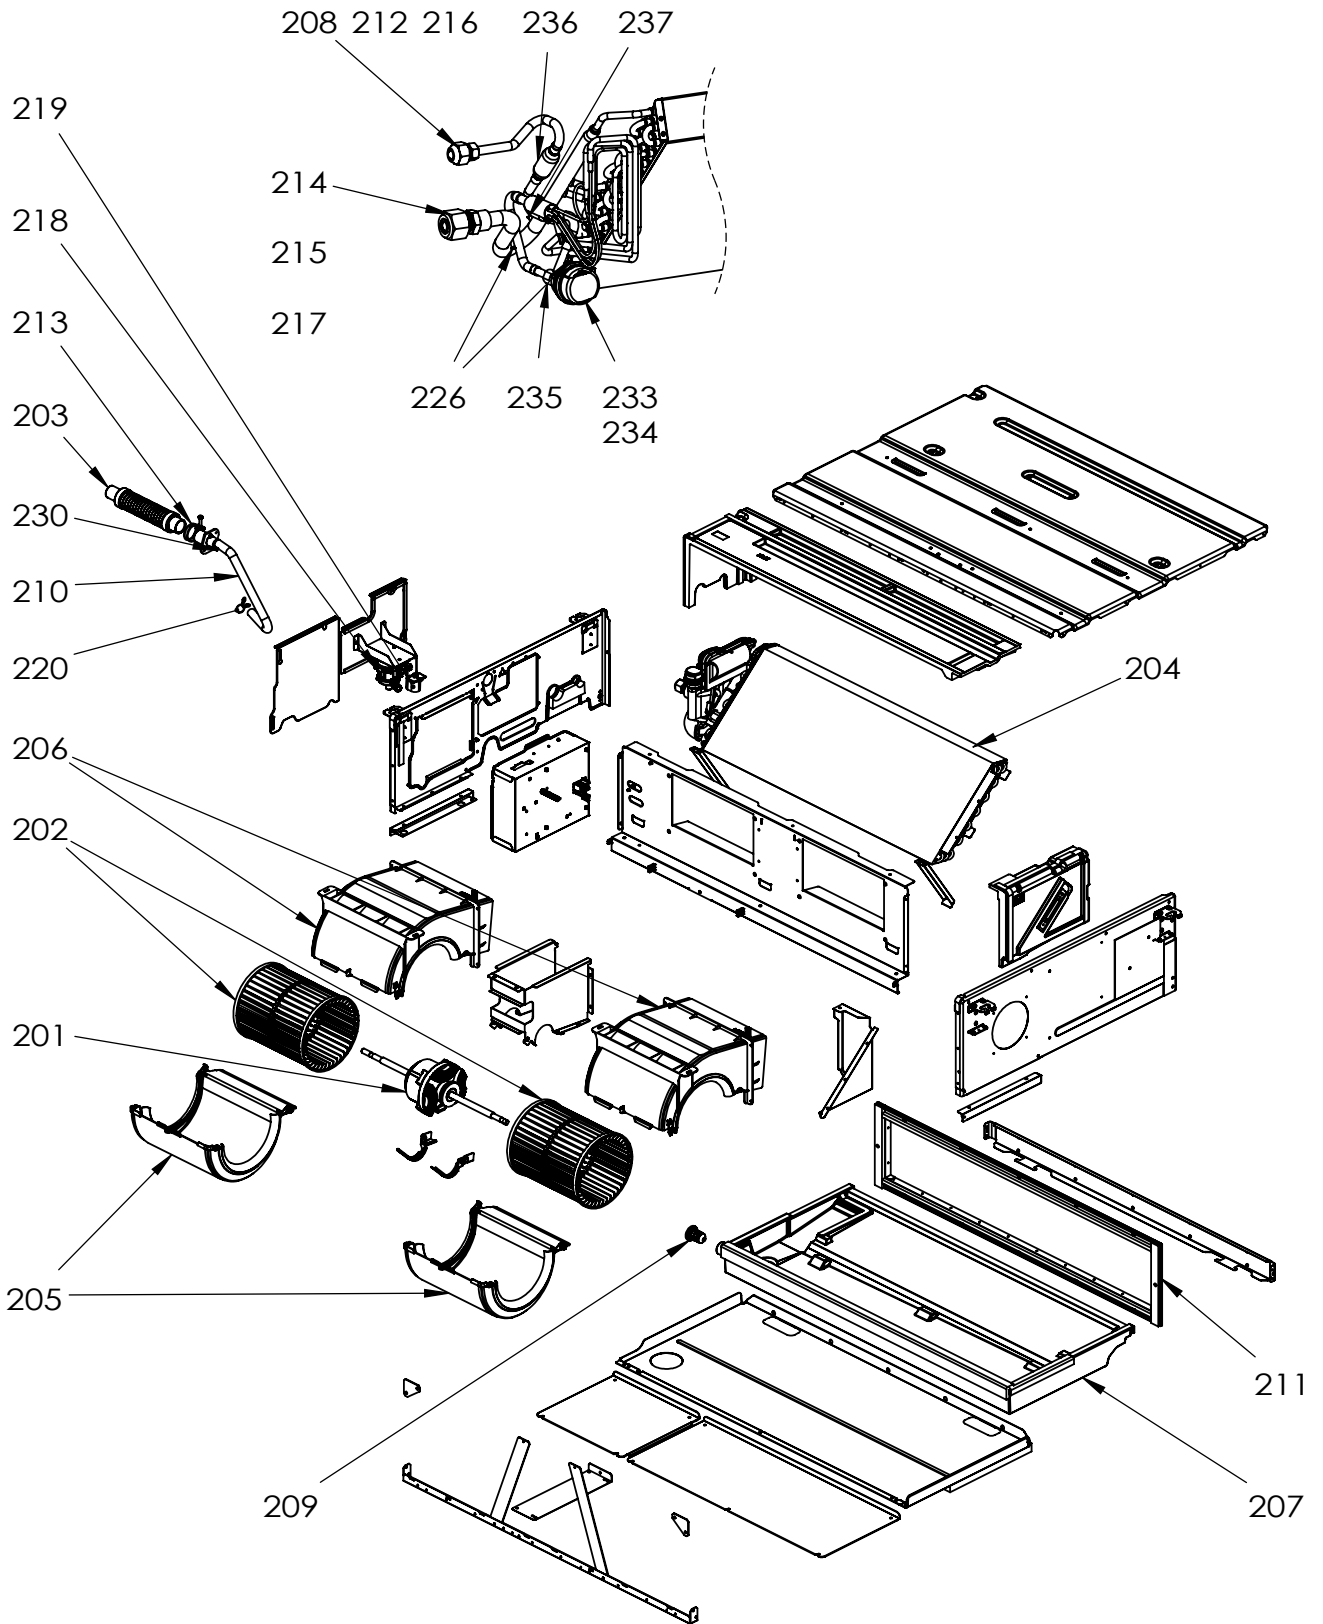

| Location No. | Part No. | Description | Q'ty/Set MMD- | | | | | |
|--------------|----------|--------------------------|---------------|--------------|--------------|---------------|---------------|---------------|
| | | | AP0186 HP1-E | AP0246 HP1-E | AP0276 HP1-E | AP0186 HP1-TR | AP0246 HP1-TR | AP0276 HP1-TR |
| 201 | 43T21457 | MOTOR, FAN | 1 | 1 | 1 | 1 | 1 | 1 |
| 202 | 43T20340 | FAN, MULTI BLADE | 2 | 2 | 2 | 2 | 2 | 2 |
| 203 | 43T70315 | HOSE, DRAIN | 1 | 1 | 1 | 1 | 1 | 1 |
| 204 | 43T44546 | REFRIGERATION CYCLE ASSY | 1 | | | 1 | | |
| | 43T44547 | REFRIGERATION CYCLE ASSY | | 1 | 1 | | 1 | 1 |
| 205 | 43T22339 | CASE, FAN, LOWER | 2 | 2 | 2 | 2 | 2 | 2 |
| 206 | 43T22341 | CASE, FAN, UPPER | 2 | 2 | 2 | 2 | 2 | 2 |
| 207 | 43T72323 | PAN ASSY, DRAIN | 1 | 1 | 1 | 1 | 1 | 1 |
| 208 | 43T82318 | SOCKET | | 1 | 1 | | 1 | 1 |
| | 43T82319 | SOCKET | 1 | | | 1 | | |
| 209 | 43T79321 | CAP, DRAIN | 1 | 1 | 1 | 1 | 1 | 1 |
| 210 | 43T70320 | HOSE, DRAIN | 1 | 1 | 1 | 1 | 1 | 1 |
| 211 | 43T39361 | FLANGE | 1 | 1 | 1 | 1 | 1 | 1 |
| 212 | 43T47332 | BONNET, 9.52 DIA | | 1 | 1 | | 1 | 1 |
| | 43T47331 | BONNET, 6.35 DIA | 1 | | | 1 | | |
| 213 | 43T83311 | BAND, HOSE | 1 | 1 | 1 | 1 | 1 | 1 |
| 214 | 43T82321 | SOCKET | | 1 | 1 | | 1 | 1 |
| | 43T82320 | SOCKET | 1 | | | 1 | | |
| 215 | 43T97314 | NUT, FLARE, 5/8, IN | | 1 | 1 | | 1 | 1 |
| | 43T97317 | NUT, FLARE, 1/2, IN | 1 | | | 1 | | |
| 216 | 43T97312 | NUT, FLARE, 3/8 IN | | 1 | 1 | | 1 | 1 |
| | 43T97311 | NUT, FLARE, 1/4 IN | 1 | | | 1 | | |
| 217 | 43T47334 | BONNET; 15.88 DIA | | 1 | 1 | | 1 | 1 |
| | 43T47333 | BONNET, 12.70 DIA | 1 | | | 1 | | |
| 218 | 43T77301 | PUMP ASSY | 1 | 1 | 1 | 1 | 1 | 1 |
| 219 | 43T51312 | SWITCH, FLOAT | 1 | 1 | 1 | 1 | 1 | 1 |
| 220 | 43T83307 | BAND, HOSE | 1 | 1 | 1 | 1 | 1 | 1 |
| 226 | 43T19333 | HOLDER, SENSOR | 2 | 2 | 2 | 2 | 2 | 2 |
| 230 | 43T83314 | BAND, HOSE | 1 | 1 | 1 | 1 | 1 | 1 |
| 233 | 43T46416 | MOTOR, PMV | 1 | 1 | 1 | 1 | 1 | 1 |
| 234 | 43T46417 | SHEET, PMV | 1 | 1 | 1 | 1 | 1 | 1 |
| 235 | 43T46431 | PMV | 1 | 1 | 1 | 1 | 1 | 1 |
| 236 | 43T47386 | STRAINER | 1 | 1 | 1 | 1 | 1 | 1 |
| 237 | 43T19321 | HOLDER, SENSOR | 1 | 1 | 1 | 1 | 1 | 1 |


12-2. MMD-AP0366HP1-E(TR), MMD-AP0486HP1-E(TR), MMD-AP0566HP1-E(TR)

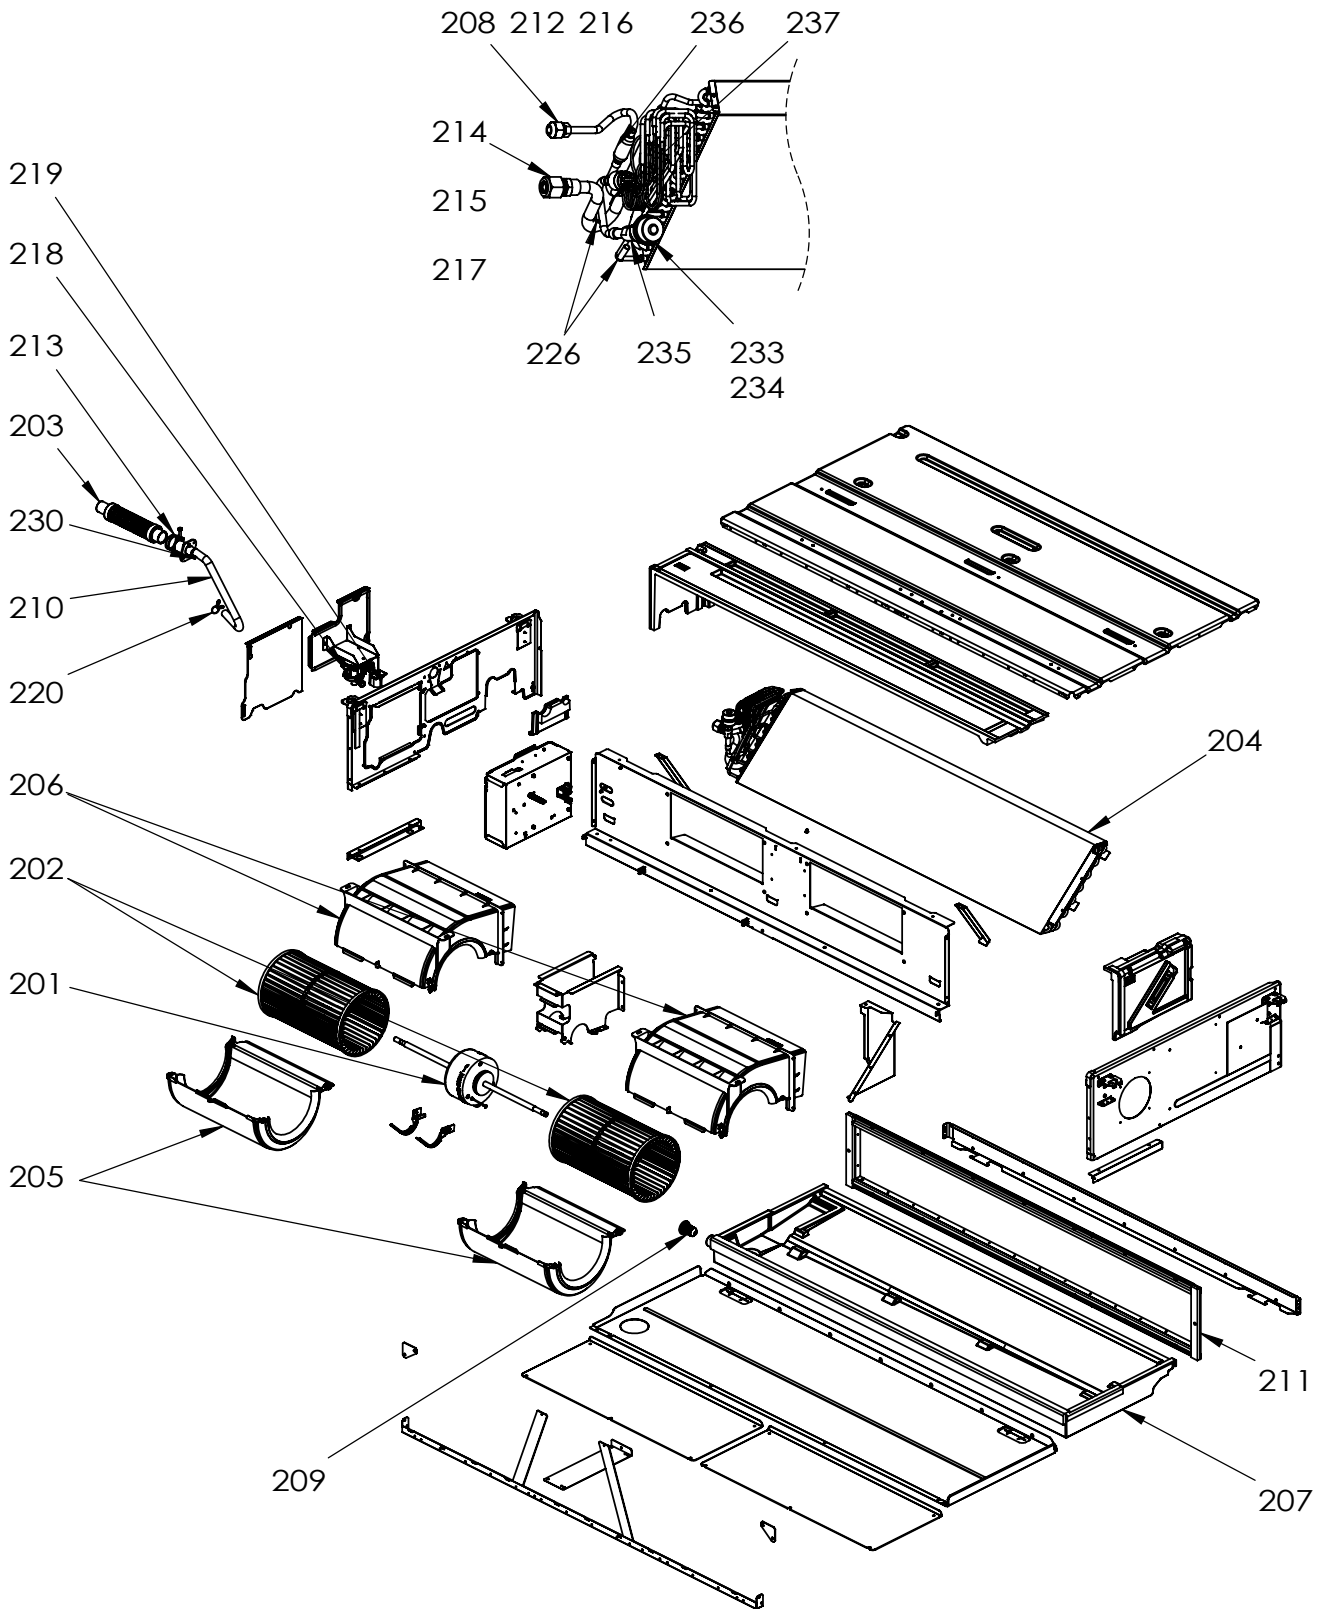

| Location No. | Part No. | Description | Q'ty/Set MMD- | | | | | |
|--------------|----------|-------------------------|---------------|--------------|--------------|---------------|---------------|---------------|
| | | | AP0366 HP1-E | AP0486 HP1-E | AP0566 HP1-E | AP0366 HP1-TR | AP0486 HP1-TR | AP0566 HP1-TR |
| 201 | 43T21456 | MOTOR, FAN | 1 | 1 | 1 | 1 | 1 | 1 |
| 202 | 43T20339 | FAN, MULTI BLADE | 2 | 2 | 2 | 2 | 2 | 2 |
| 203 | 43T70315 | HOSE, DRAIN | 1 | 1 | 1 | 1 | 1 | 1 |
| 204 | 43T44548 | REFIGERATION CYCLE ASSY | 1 | 1 | 1 | 1 | 1 | 1 |
| 205 | 43T22340 | CASE, FAN, LOWER | 2 | 2 | 2 | 2 | 2 | 2 |
| 206 | 43T22342 | CASE, FAN, UPPER | 2 | 2 | 2 | 2 | 2 | 2 |
| 207 | 43T72324 | PAN ASSY, DRAIN | 1 | 1 | 1 | 1 | 1 | 1 |
| 208 | 43T82318 | SOCKET | 1 | 1 | 1 | 1 | 1 | 1 |
| 209 | 43T79321 | CAP, DRAIN | 1 | 1 | 1 | 1 | 1 | 1 |
| 210 | 43T70320 | HOSE, DRAIN | 1 | 1 | 1 | 1 | 1 | 1 |
| 211 | 43T39362 | FLANGE | 1 | 1 | 1 | 1 | 1 | 1 |
| 212 | 43T47332 | BONNET, 9.52 DIA | 1 | 1 | 1 | 1 | 1 | 1 |
| 213 | 43T83311 | BAND, HOSE | 1 | 1 | 1 | 1 | 1 | 1 |
| 214 | 43T82321 | SOCKET | 1 | 1 | 1 | 1 | 1 | 1 |
| 215 | 43T97314 | NUT, FLARE, 5/8 IN | 1 | 1 | 1 | 1 | 1 | 1 |
| 216 | 43T97312 | NUT, FLARE, 3/8 IN | 1 | 1 | 1 | 1 | 1 | 1 |
| 217 | 43T47334 | BONNET; 15.88 DIA | 1 | 1 | 1 | 1 | 1 | 1 |
| 218 | 43T77301 | PUMP ASSY | 1 | 1 | 1 | 1 | 1 | 1 |
| 219 | 43T51312 | SWITCH, FLOAT | 1 | 1 | 1 | 1 | 1 | 1 |
| 220 | 43T83307 | BAND, HOSE | 1 | 1 | 1 | 1 | 1 | 1 |
| 226 | 43T19333 | HOLDER, SENSOR | 2 | 2 | 2 | 2 | 2 | 2 |
| 230 | 43T83314 | BAND, HOSE | 1 | 1 | 1 | 1 | 1 | 1 |
| 233 | 43T46416 | MOTOR, PMV | 1 | 1 | 1 | 1 | 1 | 1 |
| 234 | 43T46417 | SHEET, PMV | 1 | 1 | 1 | 1 | 1 | 1 |
| 235 | 43T46415 | PMV | 1 | 1 | 1 | 1 | 1 | 1 |
| 236 | 43T47386 | STRAINER | 1 | 1 | 1 | 1 | 1 | 1 |
| 237 | 43T19321 | HOLDER, SENSOR | 1 | 1 | 1 | 1 | 1 | 1 |

12-3. Electric Parts

MMD-AP0186HP1-E(TR), MMD-AP0246HP1-E(TR)
MMD-AP0276HP1-E(TR), MMD-AP0366HP1-E(TR)
MMD-AP0486HP1-E(TR), MMD-AP0566HP1-E(TR)

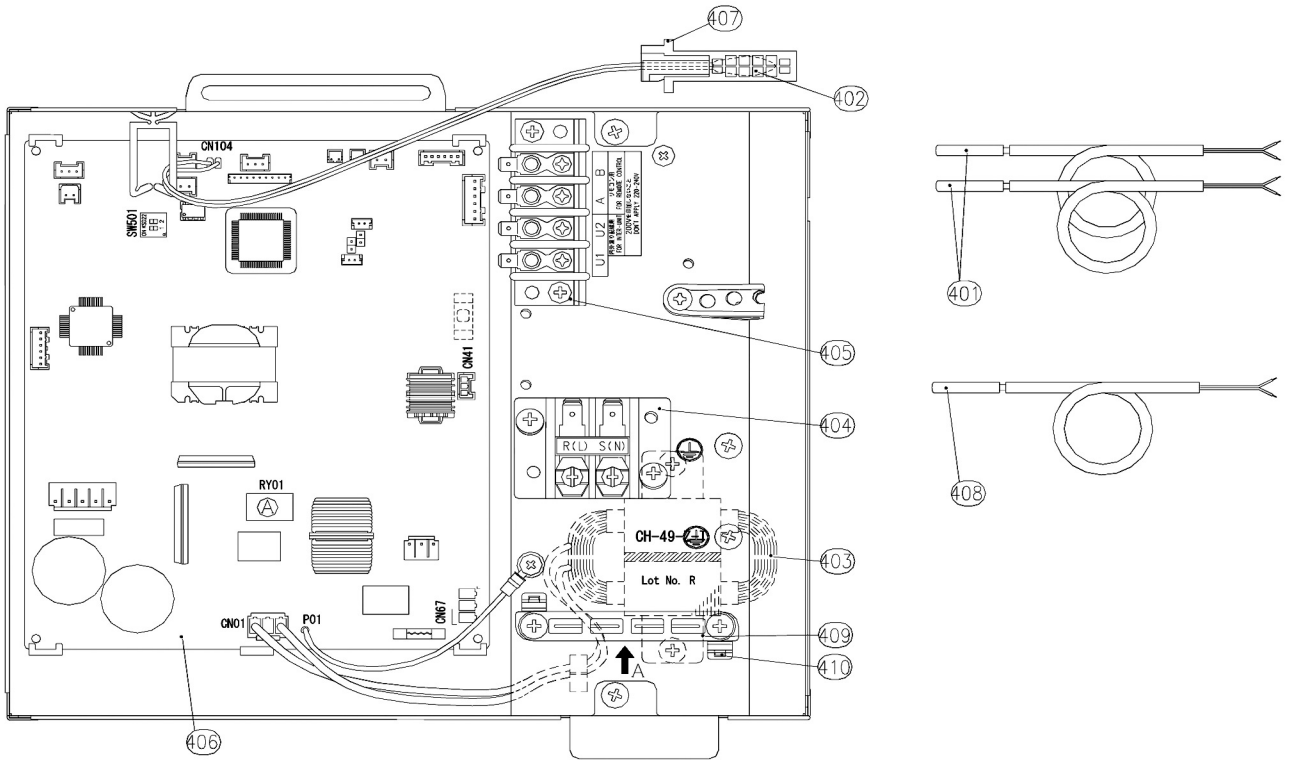

| Location No. | Parts No. | Description | Q,ty / Set |
|--------------|-----------|----------------------|------------|
| 401 | 43T50347 | SENSOR ASSY, SERVICE | 2 |
| 402 | 43T50476 | SERVICE-SENSOR | 1 |
| 403 | 43T58320 | REACTOR | 1 |
| 404 | 43T60435 | SERV-TERMINAL | 1 |
| 405 | 43T60362 | TERMINAL | 1 |
| 406 | 43T6V690 | PC BOARD ASSY | 1 |
| 407 | 43T63356 | HOLDER-TA | 1 |
| 408 | 43T50477 | SERVICE-SENSOR | 1 |
| 409 | 43T63348 | CLAMP, DOWN | 1 |
| 410 | 43T63349 | CLAMP, UP | 1 |

WARNINGS ON REFRIGERANT LEAKAGE

Check of Concentration Limit


The room in which the air conditioner is to be installed requires a design that in the event of refrigerant gas leaking out, its concentration will not exceed a set limit. The refrigerant R410A which is used in the air conditioner is safe, without the toxicity or combustibility of ammonia, and is not restricted by laws to be imposed which protect the ozone layer. However, since it contains more than air, it poses the risk of suffocation if its concentration should rise excessively. Suffocation from leakage of R410A is almost non-existent. With the recent increase in the number of high concentration buildings, however, the installation of multi air conditioner systems is on the increase because of the need for effective use of floor space, individual control, energy conservation by curtailing heat and carrying power etc. Most importantly, the multi air conditioner system is able to replenish a large amount of refrigerant compared with conventional individual air conditioners. If a single unit of the multi conditioner system is to be installed in a small room, select a suitable model and installation procedure so that if the refrigerant accidentally leaks out, its concentration does not reach the limit (and in the event of an emergency, measures can be made before injury can occur). In a room where the concentration may exceed the limit, create an opening with adjacent rooms, or install mechanical ventilation combined with a gas leak detection device. The concentration is as given below.

$$\frac{\text{Total amount of refrigerant (kg)}}{\text{Min. volume of the indoor unit installed room (m}^3\text{)}} \leq \text{Concentration limit (kg/m}^3\text{)}$$

The concentration limit of R410A which is used in multi air conditioners is 0.3kg/m³.

NOTE 1 :

If there are 2 or more refrigerating systems in a single refrigerating device, the amounts of refrigerant should be as charged in each independent device.

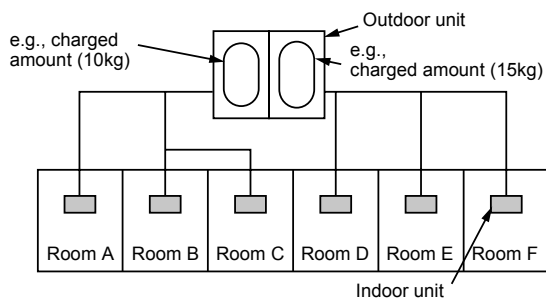


For the amount of charge in this example:
 The possible amount of leaked refrigerant gas in rooms A, B and C is 10kg.
 The possible amount of leaked refrigerant gas in rooms D, E and F is 15kg.

Important


NOTE 2 :

The standards for minimum room volume are as follows.


- (1) No partition (shaded portion)

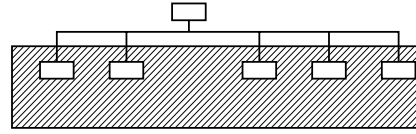

- (2) When there is an effective opening with the adjacent room for ventilation of leaking refrigerant gas (opening without a door, or an opening 0.15% or larger than the respective floor spaces at the top or bottom of the door).

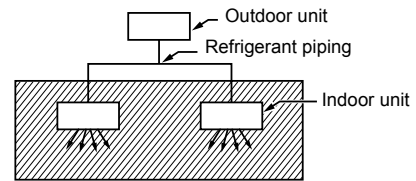


- (3) If an indoor unit is installed in each partitioned room and the refrigerant piping is interconnected, the smallest room of course becomes the object. But when a mechanical ventilation is installed interlocked with a gas leakage detector in the smallest room where the density limit is exceeded, the volume of the next smallest room becomes the object.

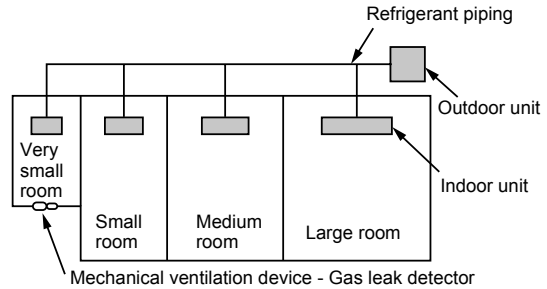

NOTE 3 :

The minimum indoor floor area compared with the amount of refrigerant is roughly as follows:
 (When the ceiling is 2.7m high)

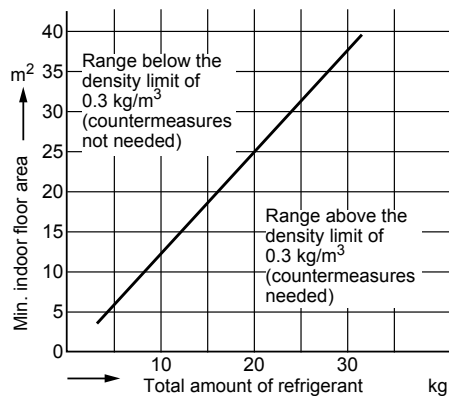

TOSHIBA CARRIER (THAILAND) CO.,LTD.

144/9 MOO 5, BANGKADI INDUSTRIAL PARK, TIVANON ROAD, TAMBOL BANGKADI,
AMPHUR MUANG, PATHUMTHANI 12000, THAILAND.